

GREY


HEATING PAD



EcoSapiens



Smart textile

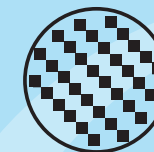

Carbon fiber



Energy Saving



Detachable remote control

EcoSapiens

Article: S277_gr E
Model: ENILTH/H/OZ/K-220v
Size: 40*50 cm
Warranty: 24 months



GREY Infrared Heating Pad 40 x 50 cm, EcoSapiens

USER MANUAL

Dear customer!

Thank you for choosing Grey infrared heating pad (30x40 cm). We hope you will enjoy it!

Please read carefully the manual before use.

The electric pad is a heating device, that is why it is important to know how to use it correctly. We have given detailed information about the device operation, correct usage and care.


How device operates (Please read this information. It is important and interesting)

Infrared heating is produced by carbon fiber (not metal wire). Carbon fiber is a unique light and durable material that conducts heat. Unlike heating metal wire, carbon fiber conducts heat in the infrared range that is close to the heat temperature of the human body. Such heat is natural and safe. You will not feel dehydration or dry skin even if you spend a long time next to the device.

The device practically does not heat up by itself.

If you set the maximum heating mode the device will stay cold. It is necessary to touch it in order to feel the warmth. It is important to know that Infrared heating implies warming up the body or subjects but not the air. Therefore, the device has lower power consumption in comparison with other devices.

Label signs explanation

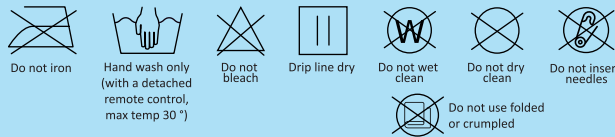

Precautions

The infrared heating blanket is a household heater that requires gentle use in compliance with all recommendations in the manual. Always disconnect the blanket from the power supply source if you do not plan to use it for a long time. Pay close attention when using the electric heating pad in the following conditions:

- When the blanket is used by children (allowed only under adult supervision);
- When the sensitivity of the skin is diminished;
- When using drugs that cause drowsiness or being under the influence of alcohol;
- In case of extreme fatigue;
- In case of diseases when the use of heat is not recommended by a consulting physician.

PROHIBITED:

- Leave switched-on device without supervision;
- Use the device when it is folded or crumpled
- Stick metal or other objects in the electric heating pad;
- Disassemble insulating covers and switchers;
- Use the electric device when the cover is torn and wire or switch are damaged;
- Turn on the wet electric device;
- Unstitch or rip up the device;

- Wash and dry in a washing machine;
- Iron;
- Expose the switched-on heater to moisture;
- Put other heating devices on the device;
- Use by helpless people, people who are not sensitive to heat, people with disabilities and kids unsupervised.

How to use the infrared heating pad

The device is designed for body warming at home. It will warm you up in cold weather or poorly heated room at home, country house and office.

Place the device on any body part (see the scheme).

The device should be unfolded and without any plaits. Plug the device into the mains.

To warm the bed or yourself switch the remote to the Max mode. The approximate warmup time is 5 minutes. After that regulate temperature to a comfortable one and enjoy soft heating.

Modes:

- **MIN is a minimum temperature mode.**
The device operates for 60 minutes at a minimum heat level and then turns off.
- **MED is a medium temperature mode.**
The device operates for 60 minutes at medium heat level and then turns off.
- **MAX is a high temperature mode.**
The device operates for 60 minutes at maximum heat level and then turns off.

When any mode is enabled, switching to another mode does not increase the total working time (60 minutes). For your safety, the device will turn off automatically after 1 hour of operation. If you want to continue using the device, turn it off with the button on the remote control and turn it on again. The warming up in the selected mode will repeat.

Storage and care

- For the proper operation of the heater, store it at a temperature in the range from -15 to +25°C, in a dry room, in an individual container, without placing other items on top of it;
- Before use, inspect the product for signs of damage (if found, do not use products and contact the service center);
- To clean the electric pad, disconnect the device from the mains;
- Dry hand wash and hand wash is allowed;
- Light stains can be removed with a damp cloth or a sponge and a small amount of soap;
- Hand wash with soap is allowed only at a temperature below 30°C and detached remote control;
- Further use is possible only when the blanket dries completely the natural way;
- Avoid using clothes pegs and other mechanical attachments when drying;
- It is not recommended to wash the item too often; not more than 5 times during service life.

PRODUCT CERTIFICATE

Operating supply voltage, V _____ 220;
Europlug (for UK adapter is included)
The heating temperature when in contact with human body (in order to feel warmth, press the palm down to the device and hold it for some time):
low °C _____ 35(± 5);
medium °C _____ 45(± 5);
high °C _____ 55 (±5);
Number of temperature modes, pcs _____ 3;
Automatic shut-off timer _____ yes, 60 min;
Power consumption, Watt _____ 35;
(with rated voltage 220V)
Moisture protection level _____ IP10, protection class II;
Weight, kg _____ ±0,8;
Size, cm _____ 40*50 (a tolerance of ± 5 cm is accepted);
Wire length, m _____ 1,1 (±10 cm);
Material _____ 100% cotton;
Model _____ ENILTH/H/OZ/K-220v;
Article _____ S277_gr E
Color _____ grey

In a set: electric heated device, remote control, user manual, package.

The product is not intended for medical use.

Produced for EcoSapiens.


Manufacturer: GESS MARKET OÜ,
Room No. 219, 2nd floor, Tulika 19 (A) 10613 Tallinn, Estonia | EU
Place of manufacture: GME Europe Ltd., Ilzenes 2, Riga, LV-1005, Latvia

The service life is 5 years.

The warranty period is 24 months.

Date of manufacture: see on the sewn-in label.

Exclusive distributor in EU is GESS MARKET OU www.gessmarket.com
Please send your inquiries and offers: info@gessmarket.com

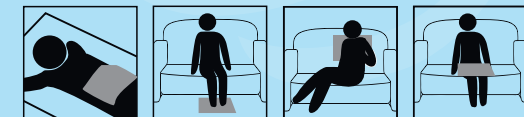

Your opinion is important to us! You can always leave a review about the device in the store you purchased the item or send it by e-mail.

Customer service:

E-mail: info@gessmarket.com

Tel. number: +372 51990171

Official website: gessmarket.com

