

Message chair is here



Technique
Position focused massage

Loaded with 5 courses to relax acute stress and sore peculiar to the modern life.



Heater
Double heater

Loaded with two heaters to warm shoulder blades which tends to get more stiff and sole of the feet which tends to be chilled.



Air Massage
Triple mode Air system

Control the speed and quantity of air flow to implement the powerful and delicate air massage.

Osaki The pioneers in massage chair innovation!

Osaki-Japan Premium 4S

Specifications

- Main unit dimension (Approx) (During Ottoman receiving)
Width 29.9 x Length 46.5 x Height 48 inches (During maximum usage of Arm/leg)
Width 34.6 x Length 78.7 x Height 27.6 inches
- Minimum width before assembly (Approx) 26.8 inches
- Reclining angle (Approx): 110-157 degrees
- Mass (Approx): 156.5 pounds
- Power: AC100V (50/60Hz) • Consumption Power: 130W (Heater: 40w) (Standby power: 0.3W) • Rated time: 30 Minutes


[Mounting - Installation]

• Mounting width
Mounting width of the main unit should be above 27 inches (For hygiene purposes) Mounting width approximately 27.6 inches.

• Installation
Provide the space for reclining. Install on a horizontal place. More than 13.8" for the foot direction and more than 19.9" for the head direction are required.

[Accessories]

Detachable type back pad/pillow
Can be easily removed and attached respectively.

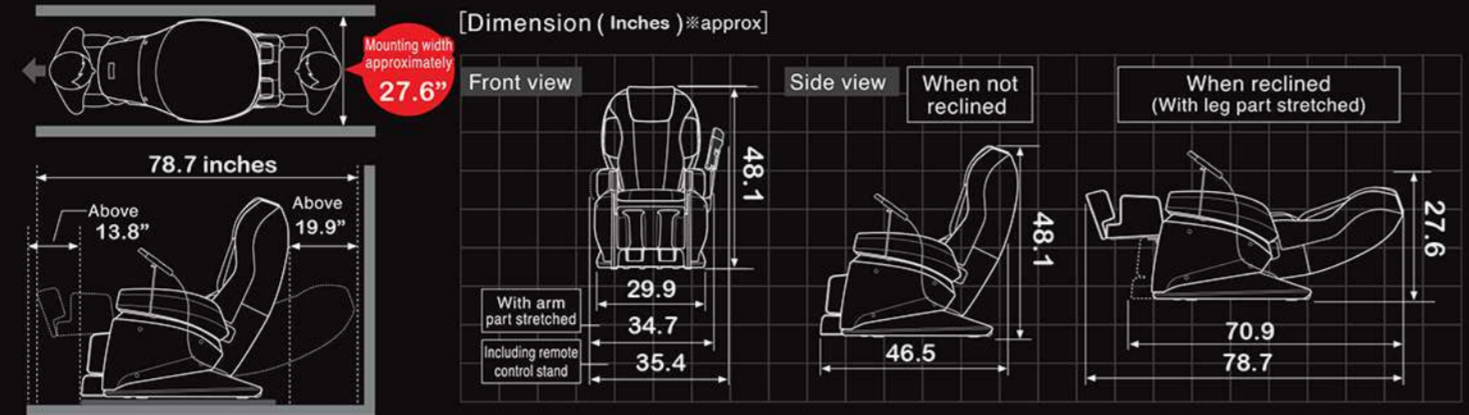

Safety warning Please read the "Operation Manual" before use and use this product properly.
 The following persons are strongly recommended not to use this product. Certain physical abnormalities may occur.
 Persons prohibited from receiving a massage by a doctor, for example those suffering from thrombosis, severe aneurysm, acute varicose veins, various kinds of dermatitis and skin infections (eczema, inflammation of subcutaneous tissue), etc.
 The following persons must consult a medical physician before using this product as certain physical abnormalities may occur.
 Persons using a medical electronic device embedded in the body such as a pacemaker susceptible to electromagnetic disturbances. Persons with malignant tumor. People with heart trouble. Persons who are pregnant or menstruating. Persons thought to be pregnant, or those immediately after childbirth. Persons who suffer from parosmia related to peripheral circulatory disturbance due to diabetes etc. Persons with body temperature exceeding 38°C (when strong acute inflammation symptoms, malaise, chills, blood pressure fluctuations are observed, when debilitated). Persons with wounds in treatment areas. Persons who suffer from acute illness (Gout). Persons who suffer from osteoporosis. Persons who suffer from spinal column fractures. Persons suffering from inflammation such as sprains and muscle strains. Persons who suffer from paralysis. Persons with abnormalities in the spine. Persons who suffer from anemia. Persons who need to massage a part of the body treated medically in the past. Persons who need bed rest. Persons receiving medical treatment. Persons who feel an abnormality on the body apart from these.
 Please do not allow unattended children or persons unable to declare their own intentions to use this chair. Please do not allow infants near the chair.

While using The remote control stand can be installed either in the left or right side.

OSAKI MASSAGE CHAIR, LLC
www.osakimassagechair.com 888-848-2630
info@osakimassagechair.com

Osaki-Japan

Message chair Premium 4S
Made in Japan




This is not an evolution.
This is an innovation.

Maximum unleash capacity
Approximately

4.9 inches

The future of massage

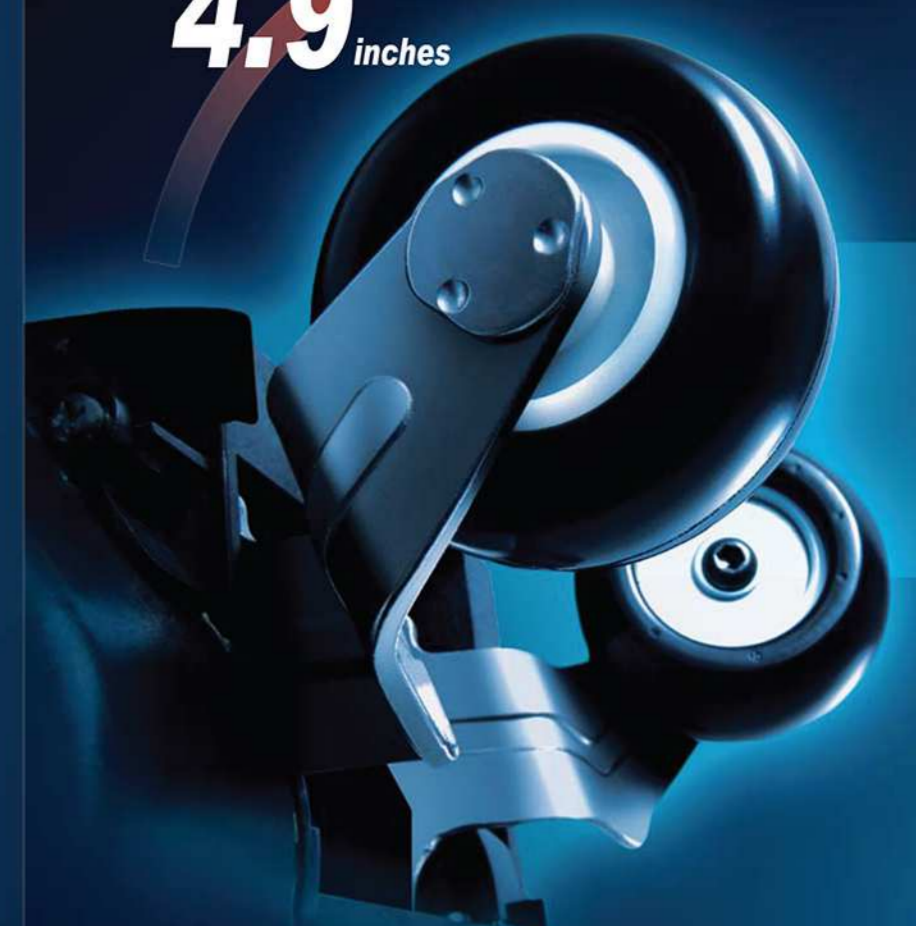

Mechanical Massage

In depth
KIWAMI MECHA

Release your stress with Osaki-Japan Premium 4S in-depth massage technology. The projection is 4.9 inches, the industry's maximum.



Sensor
Double sensing

Equipped with double sensors, the massage "Depth" and "Point" are optimized.

Mechanical Massage

In-depth
KIWAMI MECHA

Implementing the depth and delicacy of human-hand like massage experience with the double sensors - Industry's first and maximum projection.*



17 types 47 varieties of knead technique


*"Neck""Shoulder""Back""Waist"and "Buttocks". Load the specialized technique that matches with the position.

Basic technique
Knead up
Knead down
Tapping
Wavelet
Rolling

Loop mode
Massages the wide range in addition to the up-down movement in the basic technique.

3D Mode
It massages even more deeply, in addition to the operation of the basic technique.

Stretch Mode
It relieves while stretching in addition to the up-down movement in the basic technique.

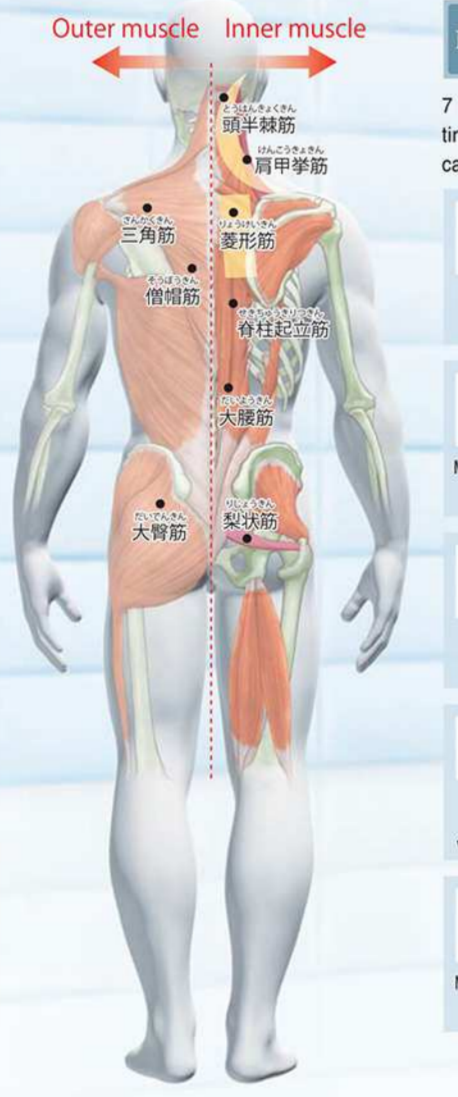

Massage focusing 5 locations
7min course

7 min course that relieves the stiffness and tiredness that is peculiar to the modern people caused by lack of physical activity or work habit.

Neck focus massage
for the stiffness in the neck or the tension in neck muscle
Massages with the finger pressure/enlarged activity from the neck muscle to the mouth of shoulder.

Shoulder focus massage
Shoulder focus in concentrating the shoulder mouth
Massage hardly with rubbing/kneading/tapping activity of the circumference of the mouth of the shoulder.

Shoulder blade focus massage
for the dullness and the tension of the shoulder blade
Massage with the stretch/relieve activity from the shoulder blade bone to the pivot muscle of the body.

Waist focused massage
for the tiredness of waist
Massage with the activity that rubs/taps from top of the spine to the lower part of waist mainly on the spinal column erect position.

Sciatica massage
for the treatment of buttocks that is collected easily
Massage with the operation that rubs/taps the buttocks with the air bag in the sitting side.

Double sensing
It loads 2 sensing systems such as "S shaped line detection system" that detects the spinal line and "Shoulder position detection system" that detects the shoulder position.
Detect the body shape using 3D and neatly adjust knead one by one.

Back
Auto detect the spinal line
Optimize the "Depth" of the message.

Shoulder
Auto detect the shoulder position
Optimize the "Point" of the message.

9-Stage strength adjustment
Desired knead strength can be selected by deciding and adjusting finely the extended projection part of MECHA.



Heater
Double heater

2 heater for shoulder blade which tends to get more stiffness and sole of the feet which tends to be chilled.



Shoulder blade heater
The built-in heater in the back part mainly concentrates on the shoulder blade circumference and massages while heating gradually.

Heater at the backside of feet
Warm sole of the feet which get chilled easily.

Stretch
Stretch Massage

Whole-body stretch 3types 6min course
"Stretch course""Extreme stretch course""Air course"" loads 3 types of stretch that will stretch each nook and corner of the whole body.



Partial Stretch 3types 7min course

Neck muscle stretch
Fix the neck with MECHA and stretch the neck muscle by stretching the whole body with Ottoman.

Back stretch
After stretching the whole body with Ottoman, turn upside down the shoulder muscle that stretches the shoulder muscle.

Waist stretch
Stretch the leg forward then stretch by pulling up waist simultaneously.

Position
HOLD Position

Auto-set the ideal posture that can accept the massage effectively.



Natural fit Slide mechanism
Adopts the independent power spring mechanism. Fit smoothly by stretching by combining with the leg.

Air Massage

Loads the "Hand knead mode" newly to revive the vibrancy and reassurance of the technique.
Triple mode Air system

Load the "Flow adjustment function" to control the air flow and its speed. 3 types of kneading experience can be selected.

Hand knead mode (Newly added)
Main comfortable pressure and varied speed.

Pulse mode
Support the promotion of blood circulation by repeating the air supply and exhausting bit by bit.

Normal mode
Focus the position and massage by repeating the air supply and exhausting largely.

Arm massage Strength adjustment 5 stages
Insert firmly from the elbow to fingertip and massage.

Waist and pelvic massage Strength adjustment 5 stages
Relax wide range of muscle from the sides of the pelvis to the back of knee.

Leg/feet massage Strength adjustment 5 stages
Relaxes from the calf muscle to the foot by repeatedly pressing and releasing.

New calf muscle massage
Fixes the leg part with the left and right air bags and stimulates the zusanagi lines. Simultaneously, the air bag at the back will add-up the pressure bit by bit at the back of the calf muscle.

Usability & Course

DIRECT LED remote control

Variagated course that can be easily operated with a single button.

Basic Course 16min Course	Kiwami mode 16min Course	Whole-body relax mode 16min Course
Whole body course	Whole body Kiwami mecha course	Whole body relax course
Shoulder course	Shoulder Kiwami mecha course	Shoulder whole body relax course
Waist course	Waist Kiwami mecha course	Waist whole body relax course
Stretch course	Kiwami stretch course	Air course

Design
Advanced design

Fits the space and living. A future design that pursues the advanced level.



© Only heater can also be used. Configured temperature: Approx. 108°F (The setting temperature differs with the body sensing temperature)