








TH-2

### Package Includes

- ✓ Toilet Paper Dispenser
- ✓ Stainless Steel Construction
- ✓ Wall Mounting
- ✓ Jumbo Size / Toilet Paper
- ✓ Mounting Hardware
- ✓ All hardware necessary for satisfactory installation




### Tools Needed

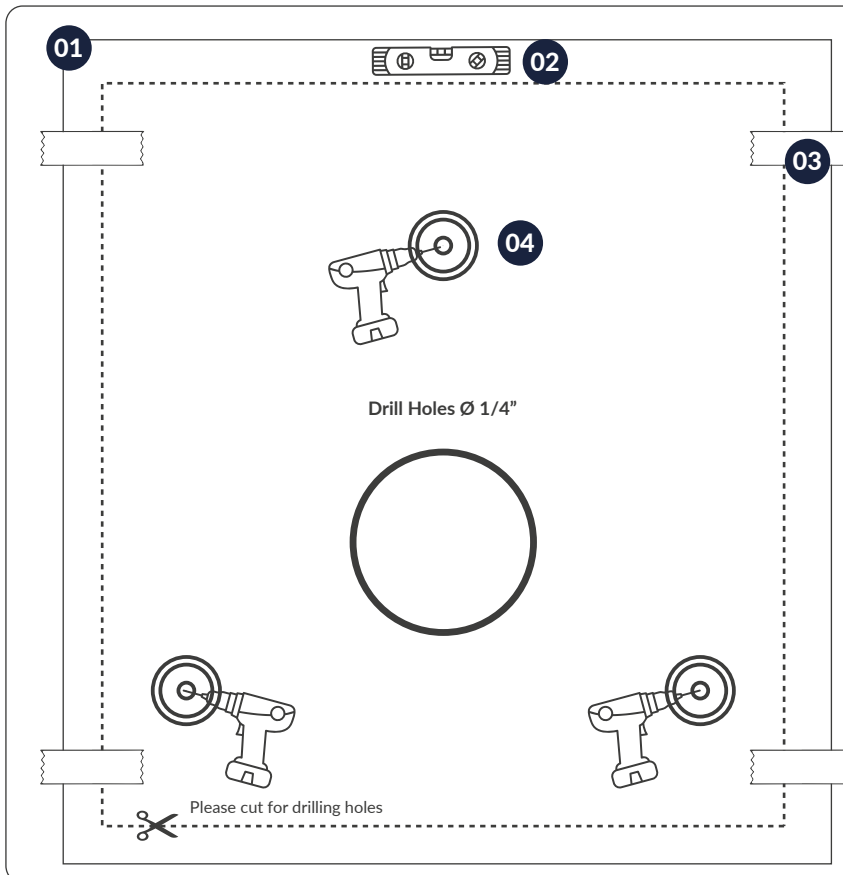

Once the location for the Tissue Holder has been decided, proceed with the installation steps as outlined below.

1. Cut the template from the back of the box.
2. Use a level and align it with the top line of the template.
3. Use painters tape to hold the template in place.
4. Drill holes for supplied plastic anchors.

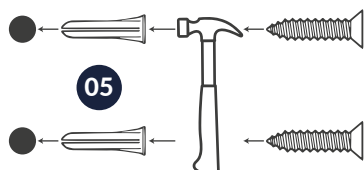

5. Place the plastic anchors in the holes and push them with the help of the hammer.

6. Align the holes in the holder with the holes of the anchors, insert screws, and fasten with a Phillips screw driver until the Tissue Holder is flush against the wall.