




For full manual &
rapid video setup

SCAN HERE

www.leitnerheadsets.com/start

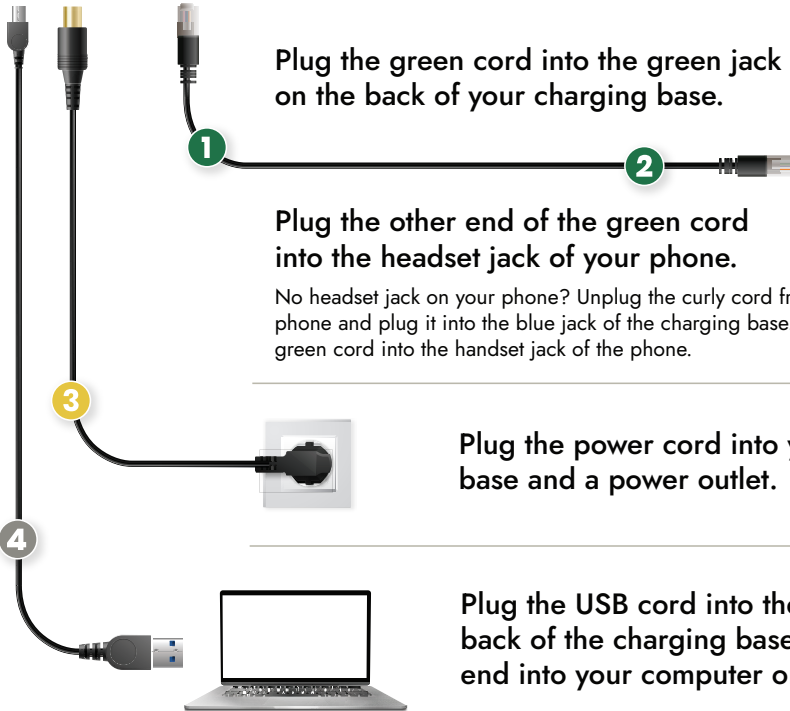

Plug the green cord into the green jack on the back of your charging base.

Plug the other end of the green cord into the headset jack of your phone.

No headset jack on your phone? Unplug the curly cord from the desk phone and plug it into the blue jack of the charging base. Plug the green cord into the handset jack of the phone.



Plug the power cord into your charging base and a power outlet.

Plug the USB cord into the USB port on the back of the charging base. Plug the other end into your computer or laptop.

5 Optional Bluetooth pairing

For the LH670 and LH675, with your headset turned off, press and hold the Bluetooth button on the charging base until it flashes. Go to the Bluetooth menu of your cellular phone and select "DECT Headset."

6 MAKE US YOUR FIRST CALL!

We want to help you sound perfect. Call us at 1-800-511-3181 to make sure your headset sounds and feels great.