


NO.	PARTNAME
1	Handle assembly
2	Lock nut
3	O-ring
4	Water valve assembly
5	Gasket assembly
6	Lock nut
7	Screw
8	Clamp spring
9	Spout
10	Washer
11	Aerator
12	O-ring
13	Gasket assembly
14	Lock nut
15	Flexible hose
16	Plastic lock ring
17	Aerator wrench
18	Allen key
19	Flexible hose
20	Lift rod

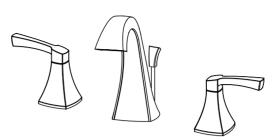


# TWO HANDLE LAVATORY FAUCET


The product is CUPC, NSF-61, AB1953, WATERSENSE and ADA certified.

Original certification model code: 1B412CV2 ASME A112.18.1/CSA B125.1

# The tools might be applied to the following places:

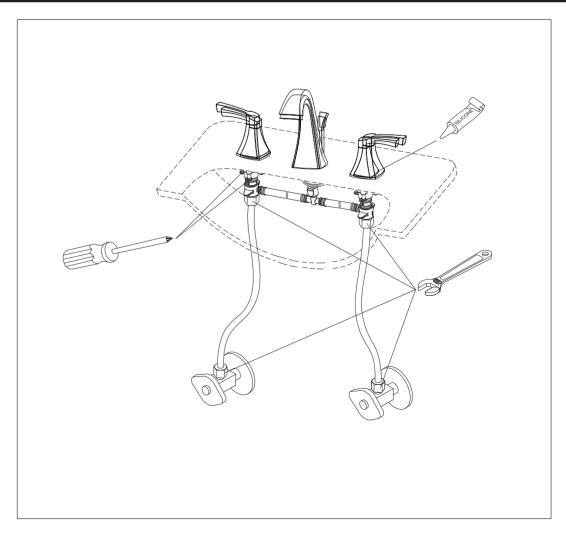




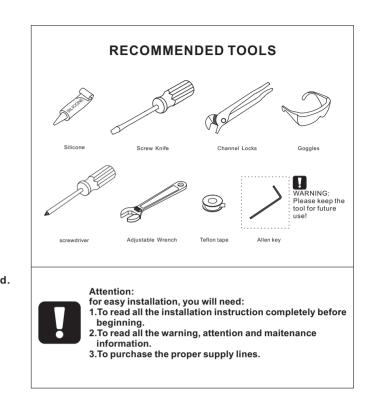

#### Faucet and pop-up installation Step 1

### Checking and testing Step 2


### **Faucet installation**

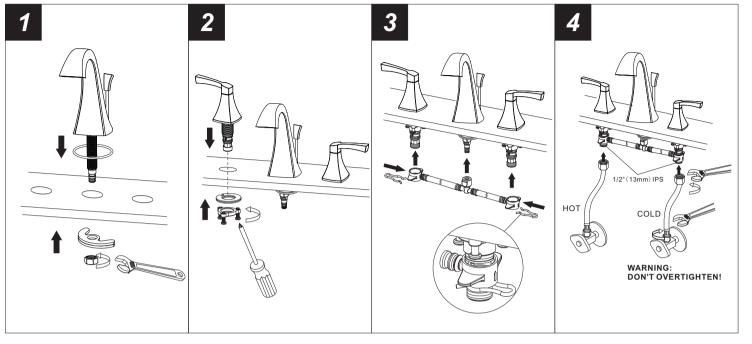

- 1. Position the body with o-ring in the installation surface as shown and secure it with gasket assembly and tighten the lock nut with adjustable wrench.
- 2.Position the handle in installation surface as shown and secure it with fixing kit and tighten the screw with screwdriver. Repeat the above steps for the other handle.

Caution: please be caution with the position of hot and cold handles.

- 3. Position the flexible hose as shown and fix it to the faucet as shown with clamp spring.
- 4.Connect the water supply lines to faucet and water supply valve and tighten it with wrench.
- Warning: The water supply valve mentioned above are not included, please purchase them from plumbshop.

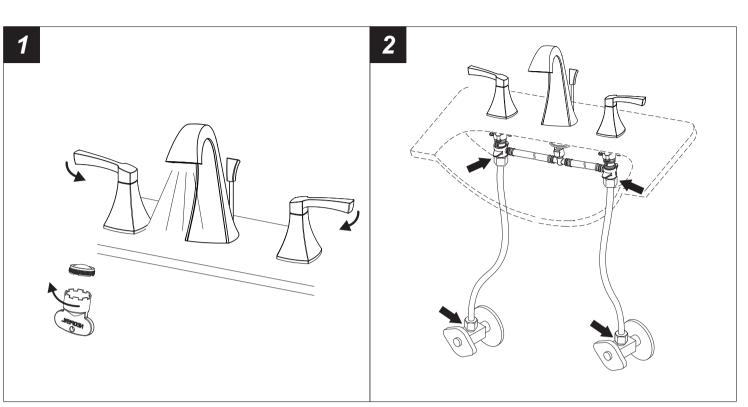

- and flush water lines for one minute. Reinstall aerator by aerator wrench.
- 2. Check all connections at arrows for leaks, re-tighten it if necessary.

**BUT DON'T OVERTIGHTEN** 

## Step 3 Cleaning and care

Daily cleaning and care are required in order to keep the product shining and properly working.

- 1 Clean it with water and dry it with soft cloth.
- 2 Clean the product with gentle liquid or glass cleaner.
- 3 Don't use acid cleaner.
- 4 Don't clean with abrasive material, abrasive paper or knife.

1. Remove the aerator by aerator wrench. Turn the faucet handle all the way on, turn on hot and cold water supply