

ThermoLogger Quick Start Guide


Basic Operation

- Connect K-type thermocouples to device inputs using a screwdriver, up to 3 channels
- Insert FAT32 formatted SD Card into device prior to power up for logging
- Plug in USB-C cable to power up device
- Read temperatures on the OLED display

Check for correct orientation of thermocouple
If installed backwards the temperature change
direction will be reversed

Controls

- Single Press: Toggle between current/min/max
- Double Press: Start/stop SD recording
- Long Press: Change temperature units (C/F/K)

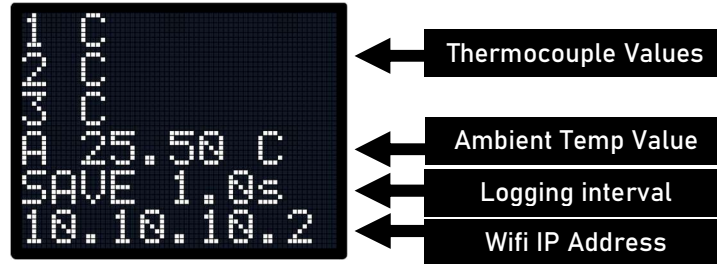

Web Interface

- Connect to device WiFi AP (Thermologger-xxxx)
- Open a web browser
- Enter the IP address shown on the device display
- Use web controls for setting RTC (real time clock), logging interval, viewing temperature data and control start/stop for logging

DingKey Designs 2025