
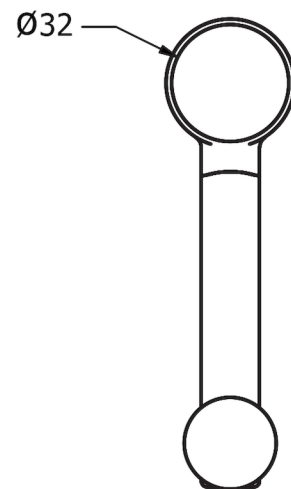


Avail Adjustable Toilet Roll Holder

For all 32mm Horizontal Grab Rails

NRCR3286T

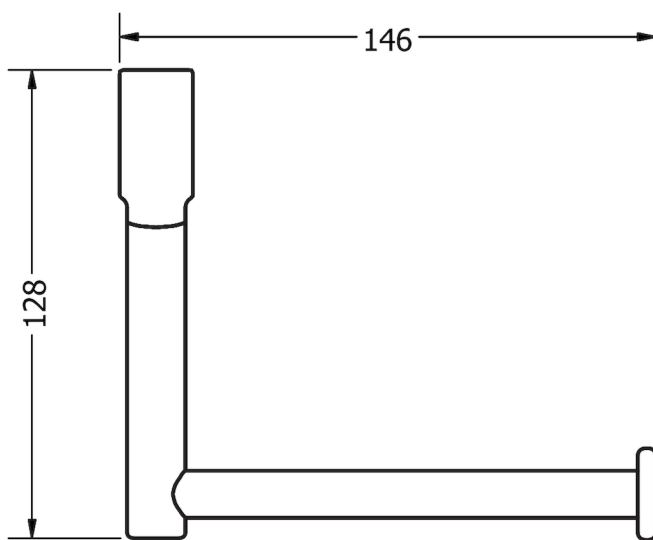

AVAIL QUALITY DESIGNS

- This adjustable toilet roll holder can be added onto any modular 32mm grab rail including the full Calibre Mod range
- The direction can be changed from left to right during installation
- High quality stainless steel available in a wide range of stylish finishes including Chrome, Matt Black, Gunmetal, Brushed Brass and Gold
- Custom finishes are available on request
- Grub screw secures holder onto the rail



WWW.AVAIL.DESIGN



INFO@AVAIL.DESIGN



1300 945 720


ADJUSTABLE TOILET ROLL HOLDER INSTALLATION INSTRUCTIONS

1. Slide the 32mm diameter ring onto the grab rail before installing the grab rail
2. Using an allen key, tighten the m4x4mm grub screw onto the rail until the ring no longer slips
3. Attach the toilet roll holder onto the ring with the screw with an allen key

CONTENTS:

- 1 x 32mm Ring
- 1 x Toilet Roll Holder
- 1 x 85mm Screw
- 1 x Grub Screw

N Step 1 & 2

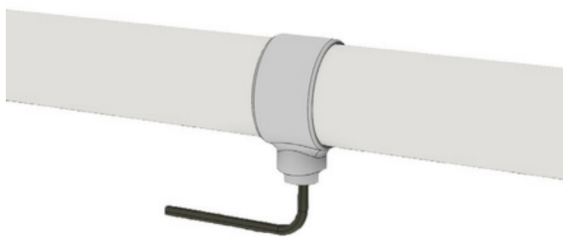

N Tighten screws with Allen key

N Step 3



WARNING:

Installation is recommended to be completed by qualified tradesperson who complies with the AS 1428.1-2009 Design for Access and Mobility standard.

It is recommended rail location is determined by a qualified Occupational Therapist or trained professional to the AS 1428.1-2009 standard. Correct installation is required to ensure safe, long term operation. Incorrect mounting can result in reduced capacity of the rail which can result in injury to user and damage to the wall.

