

How to cut a plastic tray

Necessary tools

- Table saw with 90-tooth finishing blade
- Tape measure
- Scraper
- Grade 220 sandpaper

Instructions

1. Make sure that the table saw is equipped with a 90-tooth finishing blade.
2. Measure the desired length for the plastic tray and mark it.
3. Cut the plastic tray to the desired length.
4. Remove the plastic residue near the cut with the scraper.
5. Sand lightly to ensure that the surface is smooth and free of any plastic residue or pieces from the cut.

Procédure de coupe pour table de plastique


Outils nécessaires

- Banc de scie avec lame de finition 90 dents
- Grattoir
- Papier sablé de grade 220

Marche à suivre

1. Assurez-vous que la scie à table est munie d'une lame de finition à 90 dents.
2. Mesurez la longueur souhaitée pour le plateau en plastique et marquez-la.
3. Coupez le plateau en plastique à la longueur souhaitée.
4. Enlevez les résidus de plastique près de la coupe avec le grattoir.
5. Poncez légèrement pour vous assurer que la surface est lisse et exempte de tout résidu de plastique ou de morceaux provenant de la coupe.

IMPORTANT
Be sure to cut in the center
of the rectangles and not
between them.

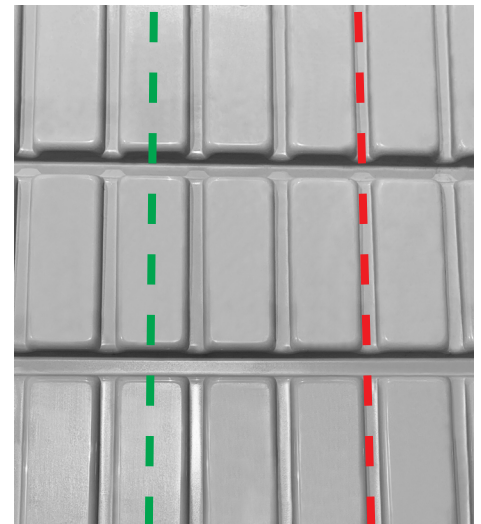

IMPORTANT
Assurez-vous de couper
dans le centre des rectangles
et non entre les deux.