
HOW TO RESOLVE HEATED SEAT MALFUNCTIONING (SEAT CHANGE)




1. Open the bidet seat



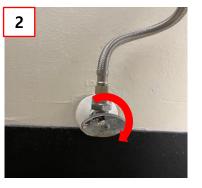


1 Unplug the cord

2 Close the water valve clockwise

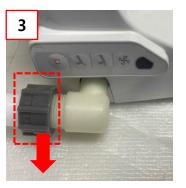

 $\ensuremath{\mathfrak{I}}$) Detach the hose from the unit

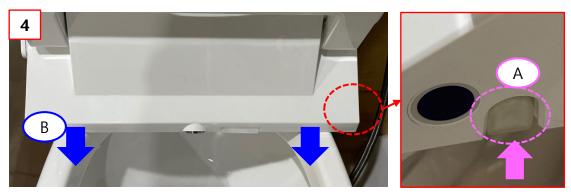

④ Push Section A(Located on the right side of the bidet seat) and slide the bidet seat out in the direction B




2. Open the cover base



1) Unscrew the 2 screws at the back using a Philips head driver.



Click for the Video Guide

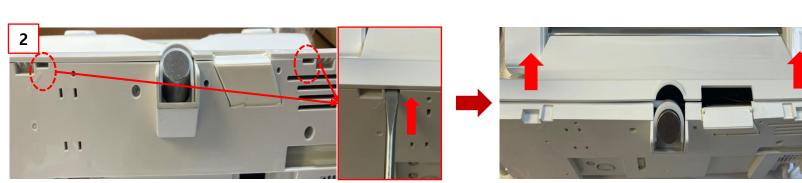

2) Put the flat screwdriver in the pointed location and lift it up to detach the base from the cover base.


- Make sure not to open the cover base fully so the wires inside do not get damaged.




3. Check the seat harness



1) Place the bidet like the photo

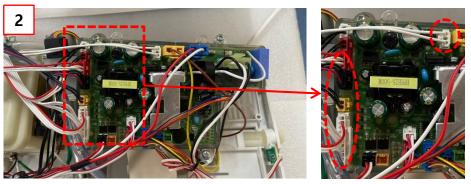

② Detach all harness that connects the seat and the MAIN PCB.

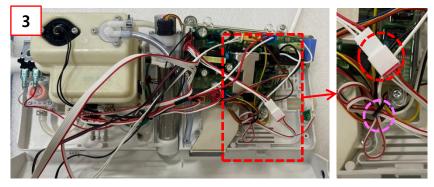


- ③ Detach the SIDE IR harness
 - **※ Applies only to 6000 Series**



4. Disassemble SEAT and SEAT COVER



① Place the bidet like the photo

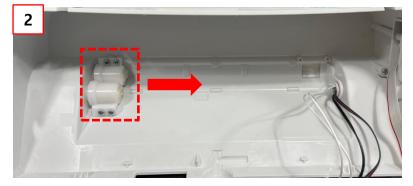

② Unscrew the 4 screws that is connected with the damper and detach it in the direction shown in the photo.




3 Detach the Seat cover in the direction shown



4 Detach the Seat in the direction shown



5. How to replace the SEAT

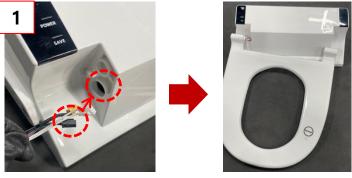


 $\ensuremath{\textcircled{1}}$ Put the seat harness wires inside the hole and attach the seat



② Attach the SEAT COVER shown in the photo




 $\ensuremath{\mathfrak{I}}$) Place the unit like the photo

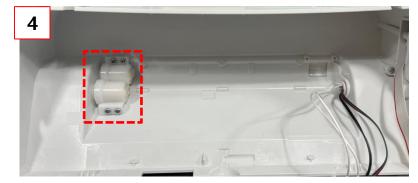


④ Attach the damper into the hole and screw the 4 screws shown in the photo.



6. Assemble the SEAT and SEAT COVER

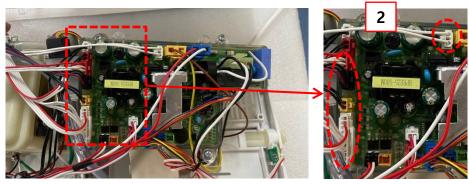


① Attach all harness that connects the seat and the MAIN PCB in same color.

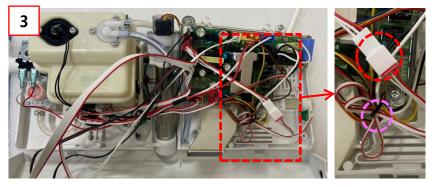

- ② Attach the SIDE IR harness
 - **※ Applies only to 6000 Series**




7-1. Close the cover base

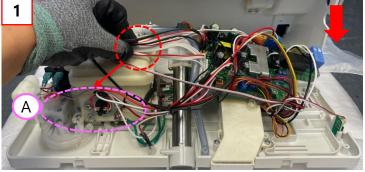





① Put the harness linked with the seat on the A side② Push the unit towards the direction shown in the photo

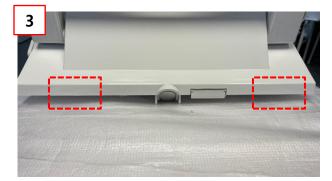

③ Check whether the cover base is assembled perfectly. If you heard clicks, it's perfectly done.

the state of the s

4 Screw the 2 screws back using a Phillips head driver.




7-2. When you have difficulty closing the cover base




1 Flip the bidet seat so you can see the under the

bidet seat.

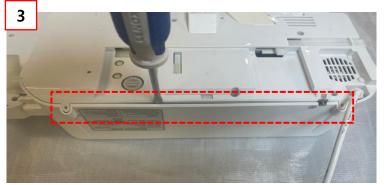

③ If not, please use a flat driver to make sure that the base goes inside the cover base.

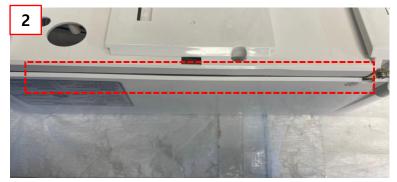


2 Check if the base goes inside the cover base



④ Push the unit towards the direction shown in the photo



8. Attach the bidet seat

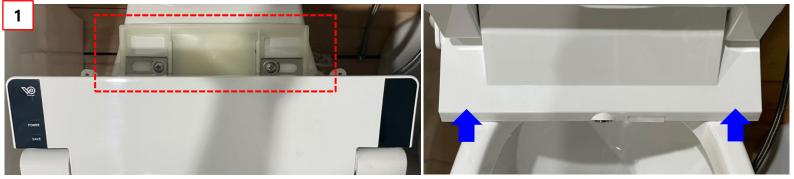

1 Slide the bidet seat to the installed base bracket



2 Connect the hose



3 Open the water value



4 Plug the unit back

