

Airpura Limited Warranty

5 years on parts and 10 years labor

See www.airpura.com for details

Airpura

AIR PURIFIERS



Operating & Filter Replacement Directions

F-600DLX


Thank You for choosing an
Airpura High Efficiency Air Purifier
To bring you the benefits of clean indoor air

To Begin Using Your Airpura...

- Inspect the exterior of your Airpura to verify there is no damage from shipping. If any damage is noted please follow the instructions in the Airpura returns policy.
- Wipe the unit with a damp cloth to remove any dust from packaging
- Plug the unit into a regular grounded 110 volt outlet
- Turn on the unit to MAX and allow it to run for a few minutes
- Set the variable speed control to the level you wish
- The most efficient way to use your Airpura for regular air quality maintenance is to run it at a low speed 24 hours a day 7 days a week

Feel the difference breathing clean air makes
to your health

To close the filter chamber

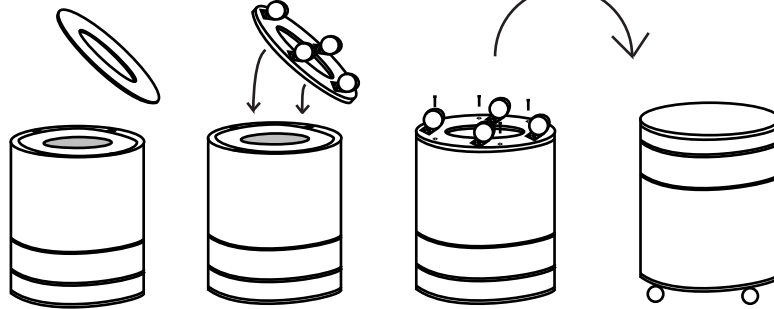

Replace the
gasket

Position the
indentation
in the cover
into the center of
the HepaBarrier

Replace the
4 screws and
tighten

Turn the
Airpura
back onto
it's casters



Filter Maintenance and Replacement

The Pre-Filter


- Can be vacuumed from the exterior of the unit once a month or more often.
- Should be replaced at least after 12 months of use

To vacuum the pre-filter


- Use the brush attachment on your vacuum cleaner
- Vacuum slowly around the mesh surface of the filter chamber

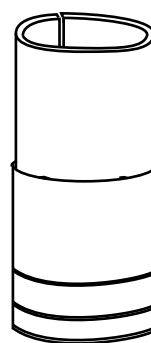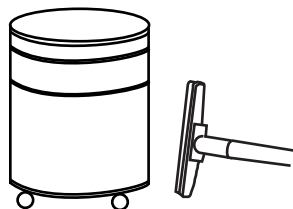

Position the pre-filter inside the filter chamber

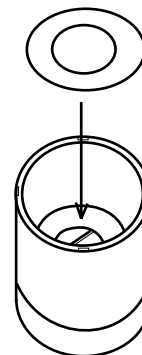


Place a felt gasket at the bottom of the filter chamber




Unfold the filter slider (Supplied with replacement filters or on request Part#6F 001)



Roll it into a spiral

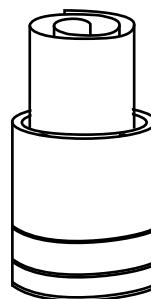


Insert the tube into the filter chamber inside the pre-filter

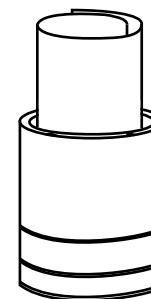

Let the spiral open to fill the opening



Open the top of the spiral to make a slight funnel

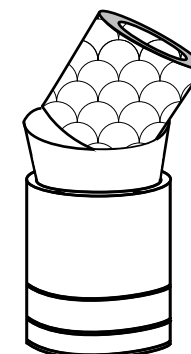

Insert the carbon canister into the funnel and hold it straight


The Activated Carbon Filter

- Should be changed as needed in heavy applications and at least every 24 months in normal use.


The HEPA-Barrier

- Should be replaced at least every 12 months of normal use


To open the filter chamber

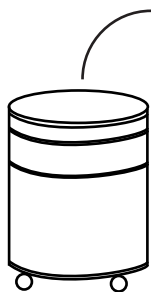


Turn over the Airpura

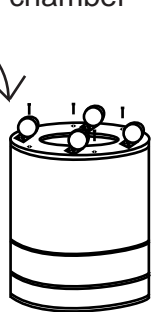


Remove the 4 retaining screws




Take off the cover

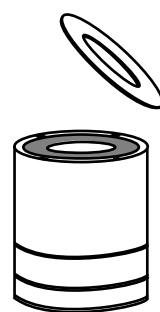


Remove the gasket

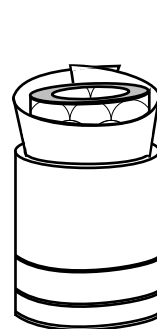


Let the canister slidown the filter slider

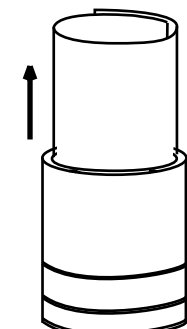

Pull the filter slider up out of the cavity using both hands and let the canister slide to the bottom of the cavity

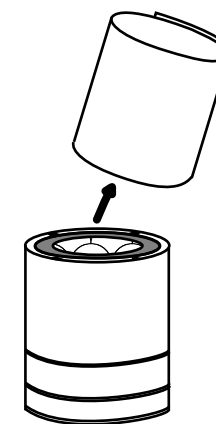

Remove the filter slider and fold it for further use

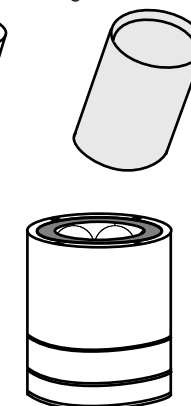

Slide in the HepaBarrier

See over for closing the filter chamber