

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, maybe cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Your Stoplight Golight comes with a 1 (one) year limited warranty.

**For more information on your Stoplight Golight,
please visit**

www.stoplightgolight.com

contact us at hello@stoplightgolight.com



Manufactured by pNeo LLC for BeeZee Kids
Designed in the USA, assembled in PRC.




The Stoplight Golight® Timer Instructions for Use

USB-C charger included.

Name and location of buttons:

- Power (on/off) - the top right button above LCD display.
- Audible Alert (on/off) - the top left button above LCD display.
- Start/Pause - button directly below LCD display.
- Minutes (+/-) - buttons to the left of LCD display.
- Seconds (+/-) - buttons to the right of LCD display.
- Engage - black buttons on both sides of the timer.

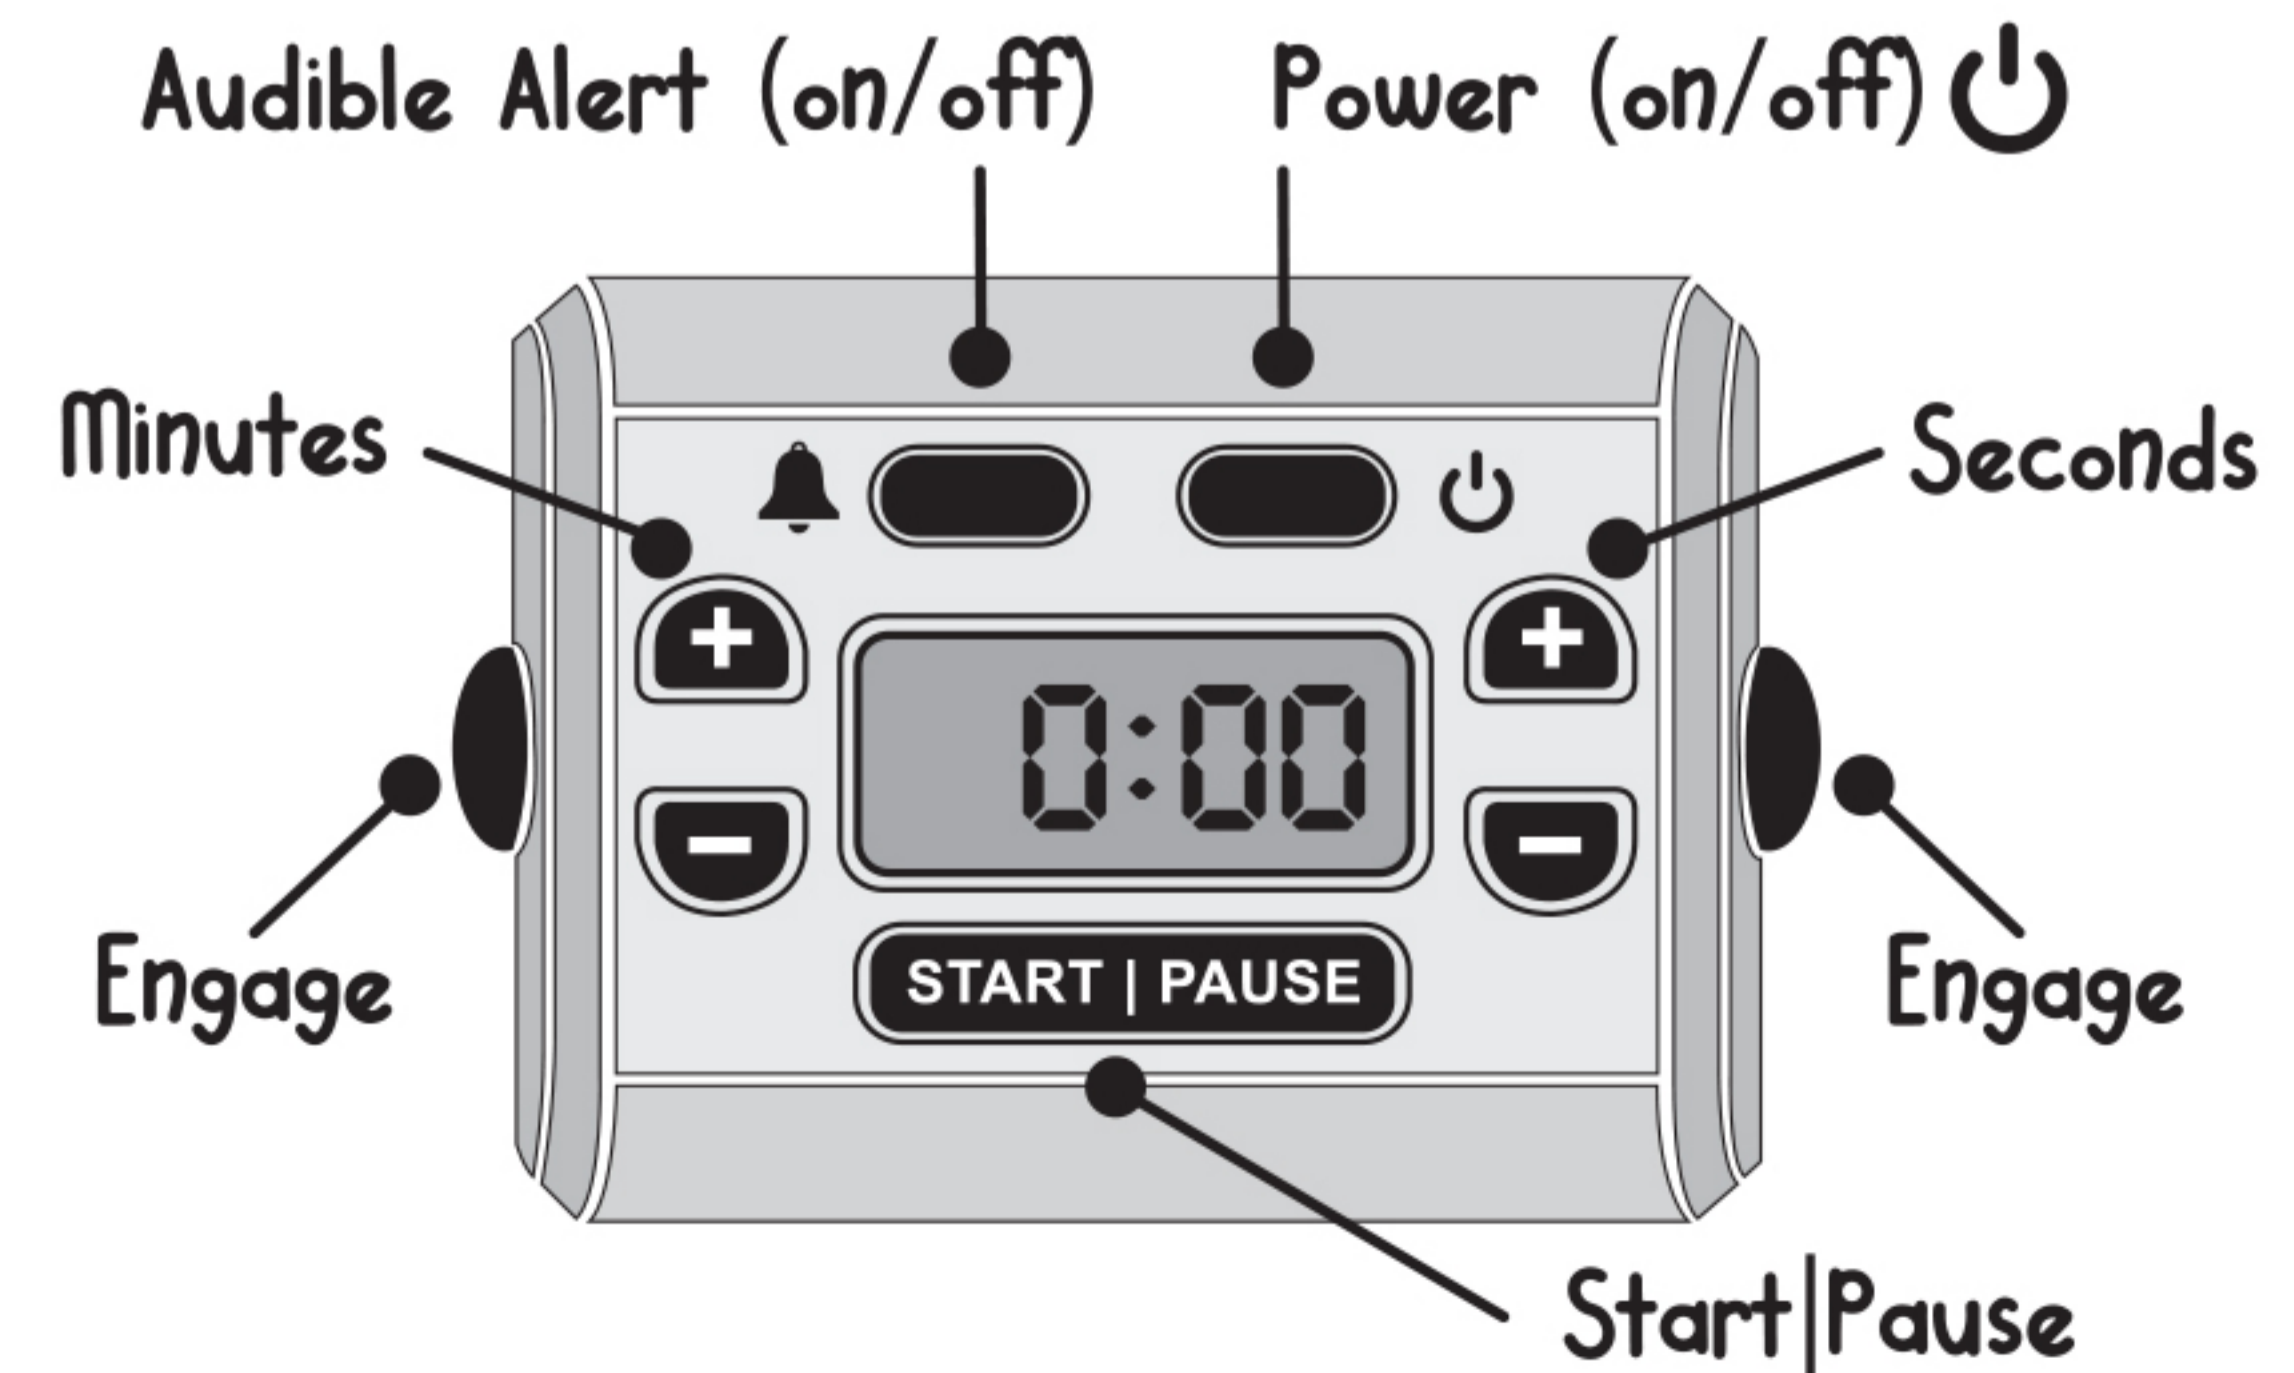

Instructions:

Note: BOTH ENGAGE BUTTONS MUST BE DEPRESSED AND HELD IN ORDER FOR ANY OTHER BUTTONS TO WORK.

All further instruction assume that the Engage buttons are pressed.

To turn unit on, First turn on Power Switch located on back of the device.
LCD display reads 0:00.

To set timer, press Minutes (+/-) and/or Seconds (+/-) buttons to set your desired amount of time. For example (5:30) is equal to 5 minutes and 30 seconds.

Start timer

Press the Start/Pause button. The Green light will illuminate. Timer will count down and when time is complete. The Yellow light will illuminate followed by the Red light.


Pause timer

Press the Start/Pause button. The Colon (:) will stop flashing, indicating timer has paused. Red light will remain on.

Restart timer

After pausing, press Start/Pause button.
The Colon (:) will flash indicating timing has started again.

Audible Alert

Press Audible Alert button.  Bell Icon will appear in the LCD.
When time reaches zero (0:00) the red light will turn off and the green light will illuminate. If audible alert is set, timer will also sound when time reaches (0:00).

To cancel green light (and audible alert), any top button may be pressed to turn off green light and alarm. *Engage button is not needed.

Adjust Timer Mid Countdown

To adjust timer in the middle of timing session, press Engage button and Minutes and/or Hours buttons to adjust. Timing is automatically resumed when Engage button is released.



FREE APP DOWNLOAD

Scan QR code or go to
<https://stoplightgolight.com/app>


Customize with the APP:

Change timer end notification:

“Green Means Go” instead of Red

Let the APP do the math!

You can also select a specific end time in the APP instead of trying to calculate how many hours and minutes – ie if you want it to end at 3:45 pm, you can select this in the APP and it will calculate how many hours and minutes the countdown needs to be.

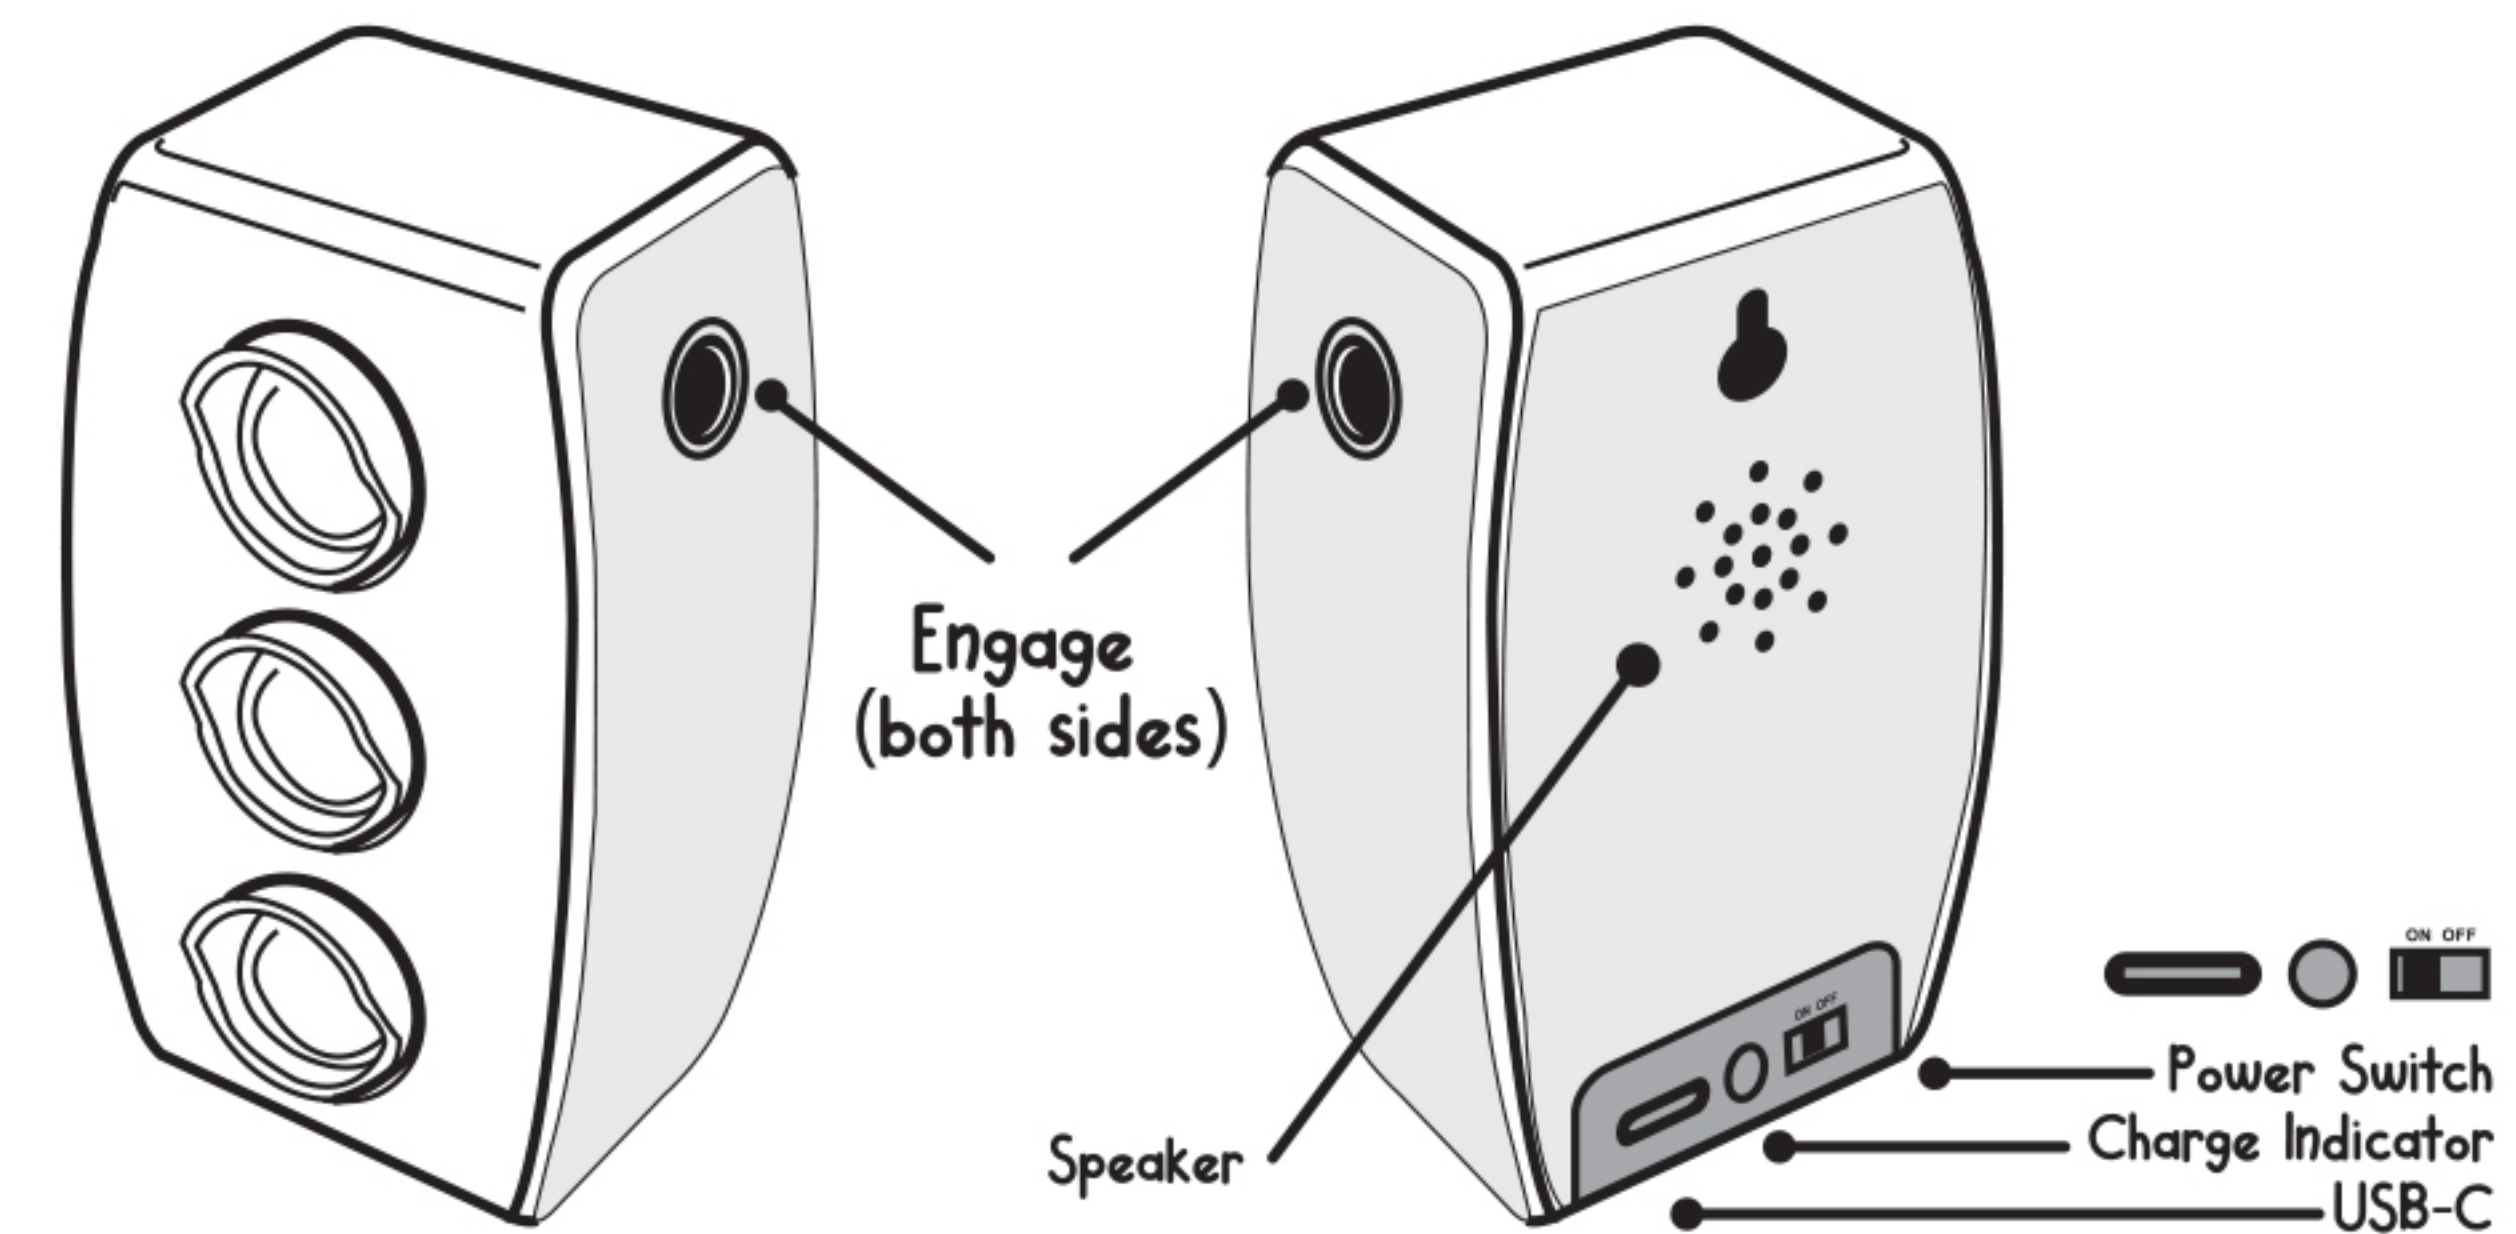

Visual / Audio Alerts:

Green: “Time Start”

Yellow: “Yellow means watch out”

Red: “Red means stop!”