# Formulate Chip-Shaped Wall 02

The Formulate Chip-Shaped Wall 02 is a lightweight, stylish solution to your meeting space needs. Ergonomically designed, the single or double sided Chip-Shaped Fabric Wall 02 combines the latest developments in fabric printed technology with gently curved 50mm aluminum frames to create private, cozy and stylish conference areas within any space. The Chip-Shaped Wall packs easily into one wheeled OCE case for easy storage and transport.



We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE. See Graphic Templates for graphic bleed specifications.

#### features and benefits:

- Easy to store and ship
- Quick to set up
- Weighted feet for added stability

- Lifetime limited hardware warranty against manufacturer defects

#### dimensions:

Hardware	Graphic
Assembled unit: 112.47" w x 76.11"h x 83.7"d 2856mm(w) x 1933mm(h) x 2125mm(d)  Approximate weight: 42 lbs / 20 kgs  Shipping  Packing case(s): 1 OCE Case  Shipping dimensions: OCE: Expandable case length (I) may vary 40"- 66"l x 18" w x 18"h 1016mm-1677mm(I) x 458mm(w) x 458mm(h)  Approximate total shipping weight (includes cases & graphics): 61 lbs / 28 kgs	Refer to related graphic template for more information.  Visit: www.tradeshowplus.com


Graphic material: dye-sublimation zipper pillowcase fabric

# **Included In Your Kit**







## **Included In Your Kit**

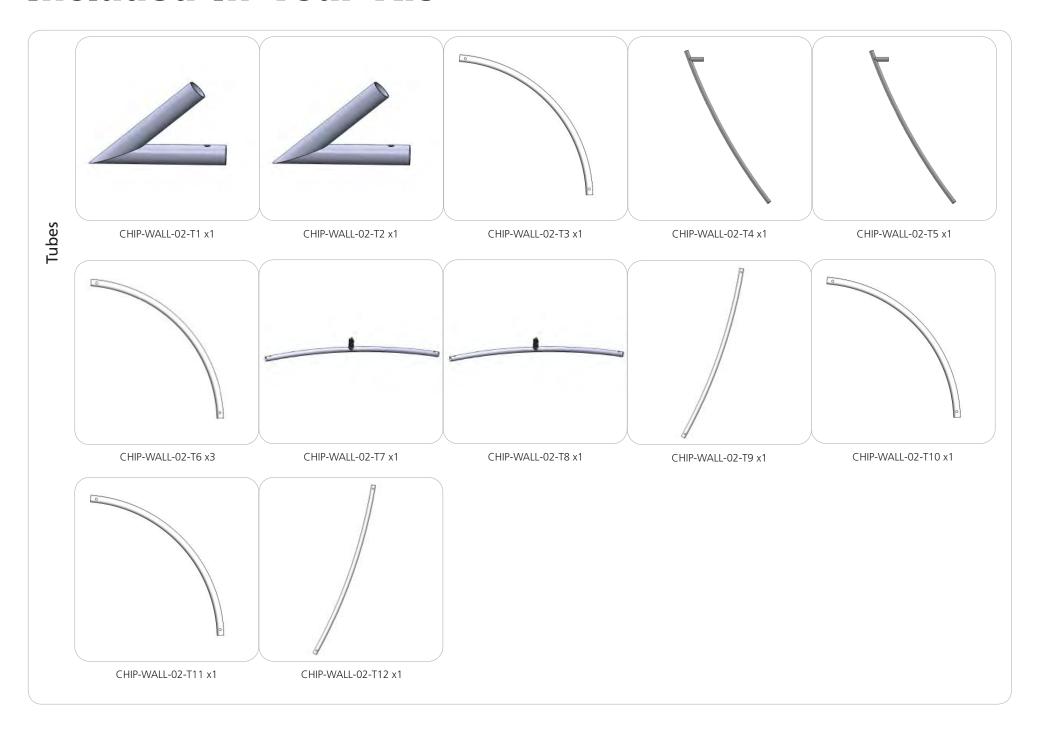

# **Exploded View**

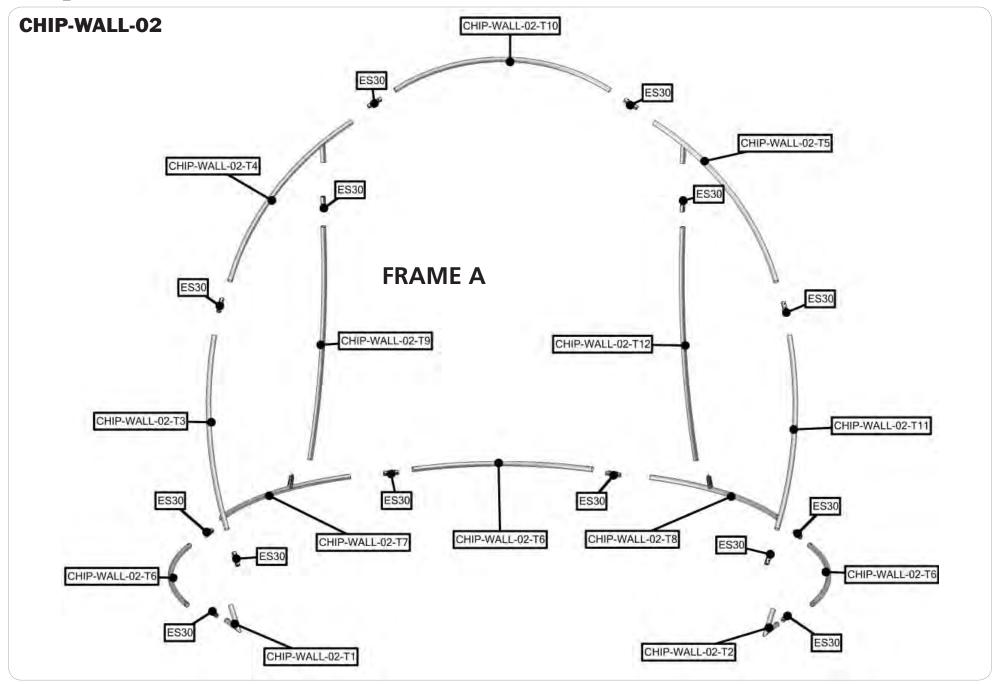

# **Labeling Diagram**

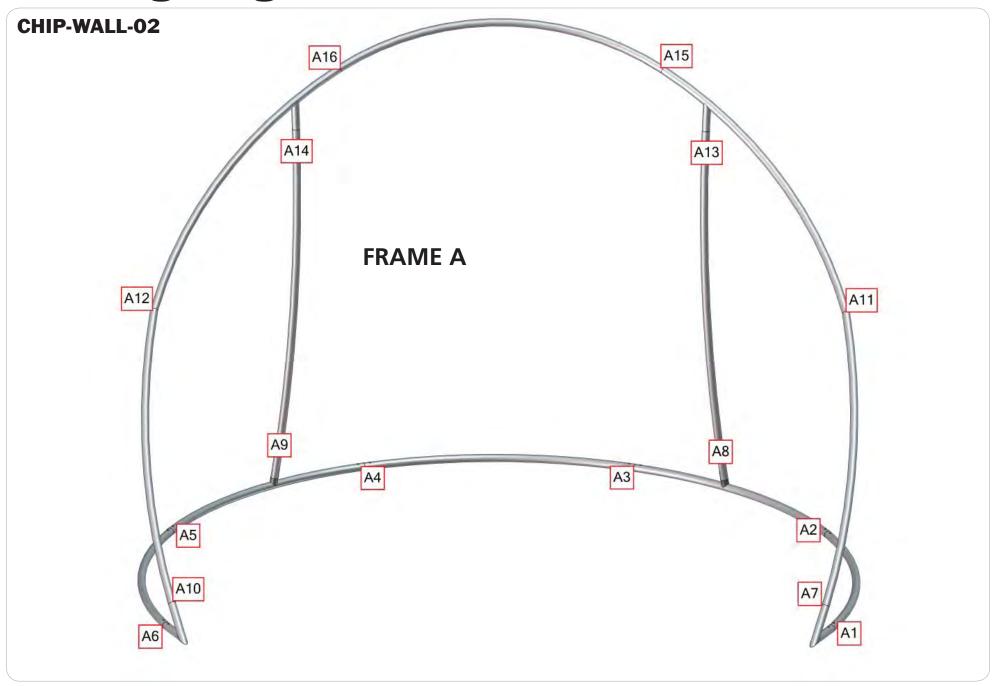

### **Connection Methods**


Formulate® structures use a number of different yet simple connection methods. Your kit will include one or more of the connection methods shown below. Steps within the Kit Assembly will reference a specific method for each connection point.

### Connection Method 1: ES30 / ES50 / ES75



Compress the unlocked connector and slide one tube onto each end. Lock both screws carefully using your allen key tool. Be sure to lock securely, but do not overtighten.

### Connection Method 2: Snap Buttons & Swage

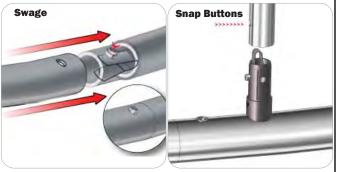

Locate the snap button on the connector or swage tube. Locate the hole on the corresponding tube. Press the snap button with your thumb and slide the tube and connector together so that the snap button snaps fully into the lock hole. To disassemble, press the snap button and pull apart.

#### Connection Method 3: ES30-90B / ES30-I / ES30-C



Compress one unlocked end of the connector and slide it through one tube end. Compress the other end of the connector and slide the second tube on. Lock both screws carefully using your allen key tool. Be sure to lock securely, but do not overtighten.

### Connection Method 4: Tube Clamps



Be sure to fully assemble all frames before using clamps. With the clamp unlocked, place one tube of the first frame into the mouth of the clamp. Place the second tube (if applicable) into the second mouth of the clamp. With both frame's tubes in the clamp, be sure to lock securely, but do not overtighten.

# **Kit Assembly**


Step by Step

#### Step 1.

Locate the components necessary for assembling your Chip Wall. Assemble your frame in order according to the Labeling Diagram.

Please reference Connection Methods 1 & 2 for more details.



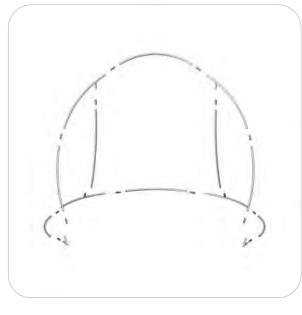

Step 2.

Apply graphic to Chip Wall. For ease of installation, pull the fabric cover over the top of the frame while the frame rests flat on the floor. Zip to enclose.



