

## **Air Cleaner Test Report**

Applicant : RHT Industries Limited

Address : Block B, 2/F, Goodwill Industrial Building, No. 36-44 Pak Tin Par  
Street, Tsuen Wan, New Territories, Hong Kong

Application Number : KJ2306001-6

Report Number : REPAP23060601

Report Issue Date : 13 Jun 2023

Total Page : 8 Pages (including this page)

This document is issued by the Company under its General Conditions of Service printed overleaf. Attention is drawn to the limitation of liability, indemnification and jurisdiction issues defined therein. Any user of this document is advised that information contained hereon reflects the Company's findings at the time of its intervention only and within the limits of Client's instructions, if any. The Company's sole responsibility is to its Client and this document does not exonerate parties to a transaction from exercising all their rights and obligations under the transaction documents. Any unauthorized alteration, forgery or falsification of the content or appearance of this document is unlawful and offenders may be prosecuted to fullest extent of the law.

Unless otherwise stated the results shown in this test report refer only to the sample(s) tested and such sample(s) are retained for 30days only. This document cannot be reproduced except in full, without prior approval of the Company.

**Acron International Technology Limited**  
*IAQ Contractor, IAQ Control Facilities Supplier, IAQ Consultant*  
*Subsidiary company of the Hong Kong University of Science and Technology*  
*Under the Entrepreneurship Program*



**Acron International Technology Limited**

*Your Technical Companion*

*HKUST Entrepreneur*

## TABLE OF CONTENT

---

1. Sample Description	3
2. Detail Description of the sample	4
3. Testing Environment	5
4. Testing Method of Removal Efficiency	6
5. Result of Removal Efficiency	7 – 8



## 1. Sample Description

---

Product	: Air Cleaner
Brand Name	: b-MOLA
Model No.	: BP100
No. of Sample Received	: 1
Test Date	: 6 May 2023 – 6 May 2023
Test Item(s)	: Pollutants Removal Efficiency
Test Requested	: Ammonia
Test Reference(s)	: In-house method SOP200 (for VOC removal rate)
Test Equipment	: Honeywell instrument ppbRAE 3000
Equipment no.	: E002 – 001
Test Result	: See the attached sheets
Remark	: N/A

---

## 2. Detail Description of the sample



**b-MOLA/ BP100**




**NCCO Reactor (NA213020300) and Normal HEPA**

### 3. Testing Environment

---

Temperature	: 25.1°C
Relative Humidity	: 51%
Testing Chamber	: 1m <sup>3</sup> Testing Chamber
Size (W × H × D) mm	: 1000 × 100 × 1000

---

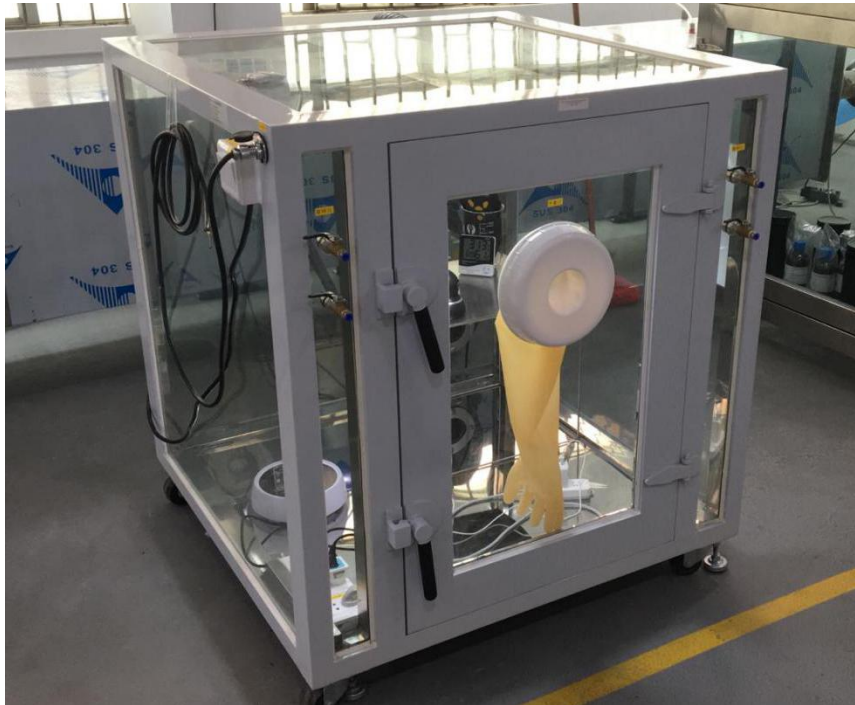

**1m<sup>3</sup> Testing Chamber**

#### 4. Testing Method of Removal Efficiency

In a 1m<sup>3</sup> chamber, chemical was injected into the chamber by a syringe and evaporated by a hot plate. Internal circulation was turned on throughout the test to ensure the uniformity of chemical concentration inside the chamber. Initial concentration ( $C_0$ ) of the chemical was recorded before switching on the air cleaner with a range of 100 ( $\pm 10$ ) mg/m<sup>3</sup>. Then, the air cleaner is switched on for 60 minutes and the chemical concentration was recorded as  $C_{60}$ , the final concentration of chemical.

The test was repeated without the air cleaner to determine the natural decay of the chemical at the test chamber. Chemical was injected into the chamber by a syringe and evaporated by a hot plate with an initial concentration ( $C_{N0}$ ). The final concentration ( $C_{N60}$ ) was determined 60 minutes later


New filters and HEPA have been used for each chemical test.

## 5. Results of Removal Efficiency


Brand/ Model No.	Operation Mode	Test Chemical	Volume of use (mL)
b-MOLA/ BP100	SS	Ammonia	4.1

Initial Concentration (mg/m <sup>3</sup> )	Natural Decay, $k_n$ (min <sup>-1</sup> )	Total Decay, $k_e$ (min <sup>-1</sup> )	Removal Efficiency (%)
109.8	0.001	0.128	>99.9

Remark: Initial concentration is set within  $100 \pm 10 \text{ mg/m}^3$ .

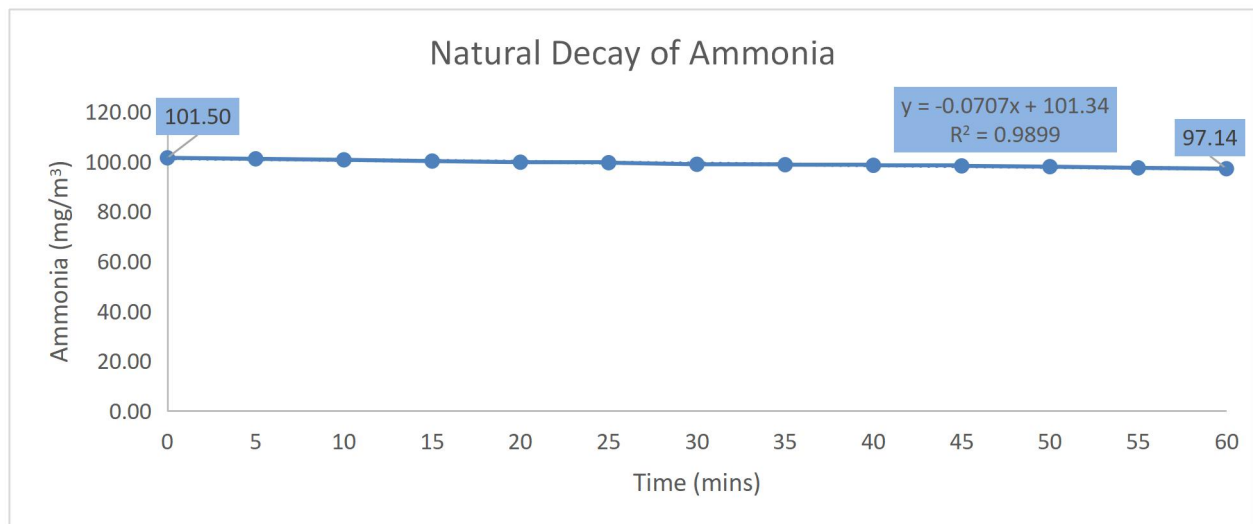

**Figure a. Natural Decay of Ammonia**

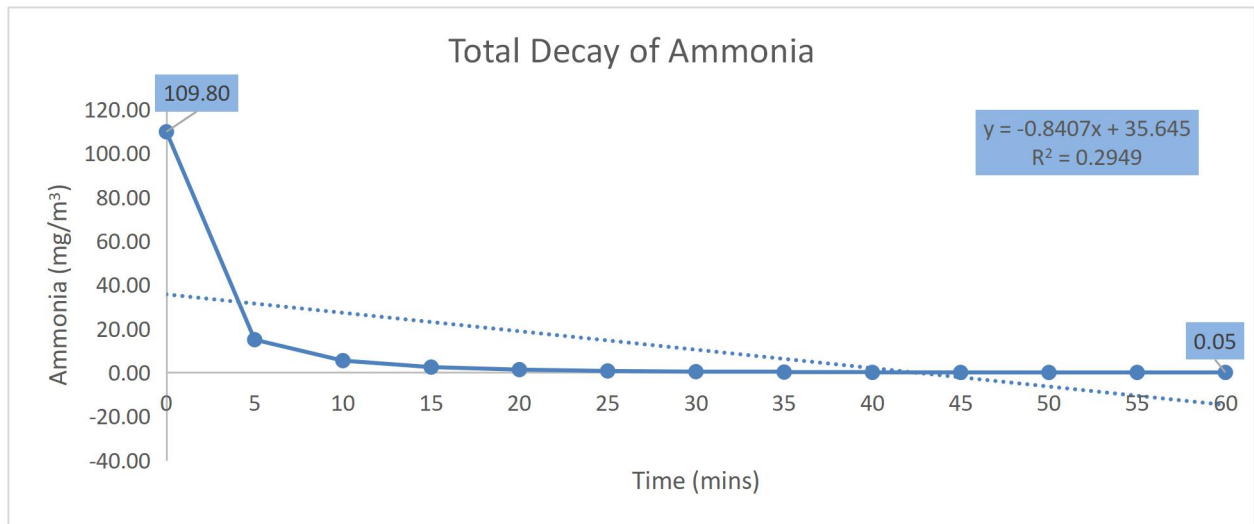

**Figure b. Total Decay of Ammonia**

Calculation:

$$A_1 = \frac{C_0 - C_{60}}{C_0}$$

$$A_2 = \frac{C_{N0} - C_{N60}}{C_{N0}}$$

$$\text{Removal Efficiency} = \frac{C_0(1 - A_2) - C_{60}}{C_0(1 - A_2)}$$

- A<sub>1</sub>: Removal rate (%)  
 A<sub>2</sub>: Natural decay rate (%)  
 C: Concentration of testing subject (mg/m<sup>3</sup>)

**\*\*\* End of Report \*\*\***