






Mandatory Safety

- Never use the product for the proposes other than listed on this manual.
- Read the instruction manual before using this product.
- Remove all the packaging before use.
- If the unit will not be used for an extended period, follow the clean and maintenance instruction to clean the unit before storage.
- "WARNING" contains important safety instructions. Be sure to follow these instructions.

Warning

-  • This device is not intended for use by persons with reduced physical or cognitive capacities without the necessary experience or knowledge, unless they have been trained to use the device correctly by a person responsible for their safety and have understood the risks involved.
-  • Stop using the device immediately once it smokes, smells, emits unusual sounds or other anomalies occur.
-  • Do not modify, fix or dismantle this product, as fire, electric shock or damage may occur.
-  • When the product is at the end of its life, we recommend disposal at a collection point for the recycling of electrical and electronic equipment, rather than with household waste.
-  • Avoid dripping essential oil onto the exterior of the product or the clothes that you are wearing. If essential oil dripping accidentally occurs, wipe off immediately to avoid discoloration of the product or your clothes.
- This product is not a medical equipment. Directly inhaling negative ions is not recommended. Bloomy Lotus will not be held responsible for any accidents related to health and safety management.
- Make sure to recharge the device once within 3 months, maintain the device with a certain level of battery for battery life.
- If the device is accidentally dropped, which it is damaged or does not operate normally, stop using it immediately.

- Make sure to use the device in below temperature range, otherwise it will affect the performance of battery.
Charging: 15°- 45°C Working: 0° - 60°C

- If you have any special physical conditions, such as pregnancy, lung failure, cancer, epilepsy, or other illnesses, please consult your doctor before using essential oils. Stop using the product and open the windows for ventilation if you start to feel uncomfortable.

- If you have irritation on your skin or eyes, stop using the product immediately and consult a doctor if necessary.


- Essential oils are highly concentrated and should always be handled with care, including the amount for each use.

- The machine contains battery that is non-replaceable.

- Do not allow water or other liquids to enter or immerse into the device. if water is accidentally spilled and the device is damaged or does not operate normally, stop using it immediately.

- Do not run the device when it is being blocked or covered.

- Do not touch the negative ion dispenser during operation.

-  • Do not let children use this product. Keep out of reach of children as electric shock and injury may occur. Children should be properly supervised to ensure that they will not play with this product.

- To avoid fire, electric shock or damage, do not use or store the product in the areas listed below:

- Environments exposed to direct sunlight or heat sources, including any heat producing appliances.

- Environment with high pressure or close to pressurized objects.

- Environments with combustibles, sources of ignition and flammable explosives, e.g. aerosol spray.

Product Dimensions

Product Name:	Zen Wearable Negative Ion Aroma Diffuser	Main Unit Weight:	35g
Model Code:	BLA-003	Negative ion content:	19 million/cm ³
Product Size:	75 x 34 x 19.5mm	Charging time:	3hrs
Material:	Aluminum+PP + ABS	Manufacturer:	Bloomy Lotus LLC
Input:	5V \equiv 0.5W	Design:	USA
Lithium Battery:	3.7V \equiv 180mAh	Made in China	

Product Warranty

Thank you for your purchase. The products carry a limited 12-month warranty on manufacturer defects. Please contact your local distributor for after sales enquiries or product maintenance.

Proof of purchase will be required. Warranty does NOT cover:


- Damage of accessories due to often use /depreciation
- Damage due to abuse or improper use of the product
- Damage of non-household use (i.e natural disaster, commercial use)
- Fail to provide any proof of product damage & purchase

We reserves the right for final decision of free product maintenance provided within mentioning period and any other conditions.

Product name : _____ Model no. : _____

Batch no : _____ Point of purchase: _____

Date of purchase: _____




Troubleshooting

If you experienced unsatisfactory operations, please follow our troubleshooting guidelines listed below.

Symptom	Possible Cause	Solution
The diffuser cannot turn on	No battery	Charge the device until it is full before using.
	Not turning on for a period	The device is fully discharged and please charge the device for a few minutes to activate the device.
The diffuser is on but there is no smell	Not enough essential oil on the refill pad	Add 3-5 drops of essential oils into the refill pad and add slightly more if you need extra smell. (please do not add more than 10 drops of essential oil at a time as the refill pad will flood and cause oil spill)
	Refill pad is mixed with another essential oil	Recommend to use a new refill pad for different oils.
Refill pad has not been changed for a period of time		Change to a new refill pad as each refill pad only works for around 1 month.

BLOOMY LOTUS

Giving you a room to breathe.

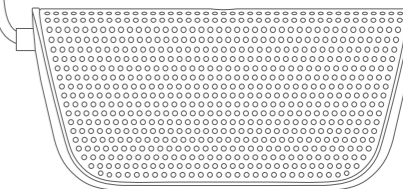

USER'S MANUAL

Zen Wearable Negative Ion Aroma Diffuser


Thank you for purchasing this product.
Please read the user manual carefully before use.

Overview

Main body



Drawstring bag

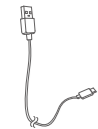


Type-C USB



Cleaning brush




Refill pad

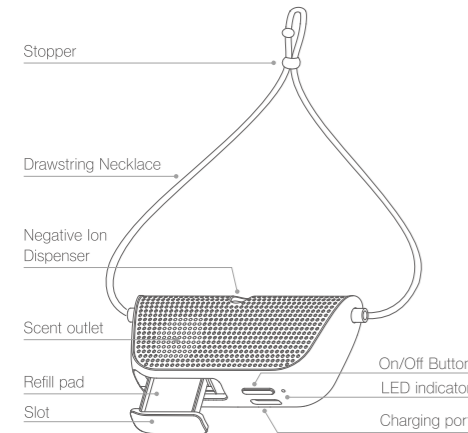


Operation Instructions


Make sure the machine is fully charged before you use it for the first time.

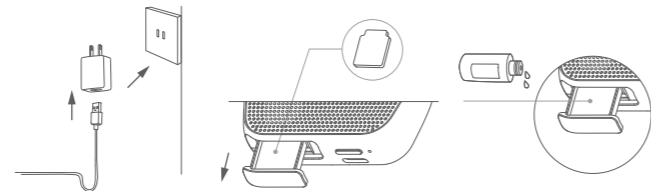

1. Plug the provided charging cable to the device, connect it with an USB ac adaptor to charge the device.
Charging time: 3hrs
Working time: 18hrs

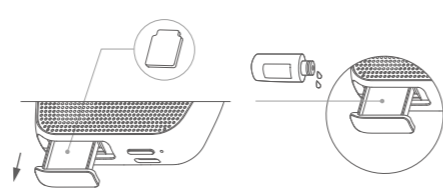


2. Turn around the machine and pull out the slot.

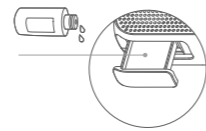

3. Add 2-3drops of your essential oil directly to the refill pad.



4. Place back the slot and long press power button to turn on the device. A steady stream of negative ions will be emitted from the negative ion dispenser. Indicator white light will be on to show that the device is cleaning your air.

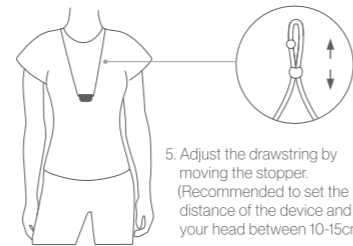

5. Adjust the drawstring by moving the stopper. (Recommended to set the distance of the device and your head between 10-15cm.)

Setting Instructions

Power button

- Long Press the button in 2sec to On/Off the unit.

LED Indicator:


White – Working	Red(Solid) – Charging
Red(Flashing) – Low Battery	No light – Off / Fully Charged

Note :

- For best results, we recommend to use 100% pure essential oil with this diffuser. Artificial fragrance, flavor, or impurities might harm the unit.
- Do not block the negative ion dispenser while in use.
- Regular cleaning of the appliance ensures optimal results and a longer life of the appliance.
- To keep a healthy battery life, fully charge it before the first-time use.
- Negative ions maybe affect by the environment such as temperature, humidity and air flow.
- Recommend to change to a new refill pad for different type of essential oil use.
- This is a personal breathing space air purifier. It is most effective in areas approximately 50cm from the unit.
- Ensure the Negative Ion Dispenser is pointed to your face for best results.

Clean & maintenance

Always turn off the device before cleaning.

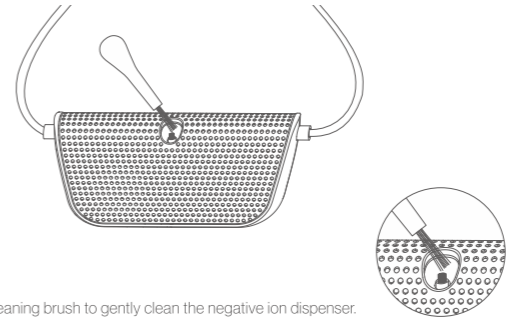

Use the provided cleaning brush to gently clean the negative ion dispenser.

Note :

- Do not soak the device with water as it will hurt the device and cause multifunction.
- The scent on refill pad will last for 2-3 hours . Refill pad is recommended to be changed every 1 month.

BLOOMY LOTUS

Giving you a room to breathe.