


Syntech Link Cable Connection Manual and System Update Guide



Q: How to use this cable to connect Oculus quest 2 to PC to realize Oculus Link?

A: Firstly, please make sure your Quest system software is updated to version 11.0 or above. Secondly, please confirm that the Oculus software is installed on the gaming PC, joins the public beta channel, and updates the software to version 1.44.0 or above.




- 1) Download the Oculus computer client on the Oculus official website, click download and install.
- 2) Open the client and click on the device.

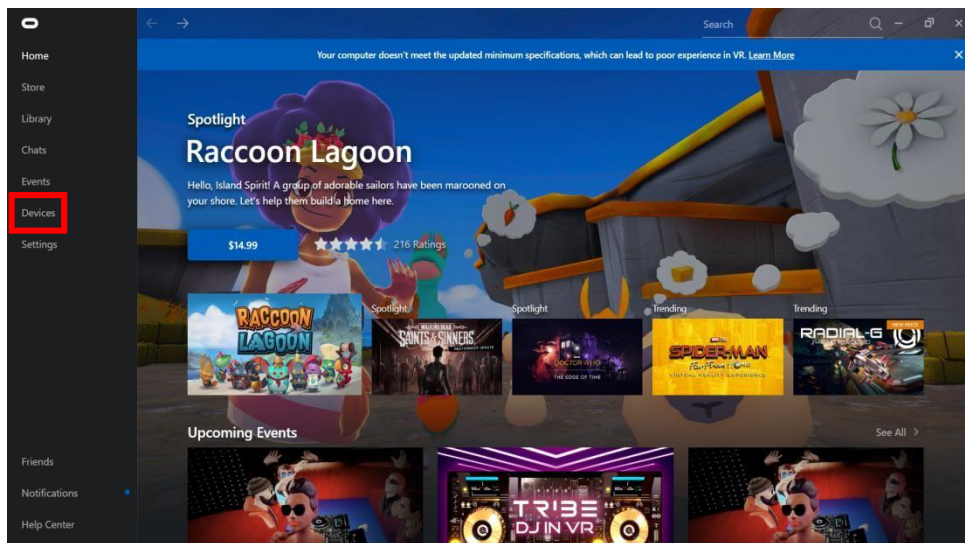

- 3) Connect the device to the computer: To connect the device for the first time, you need to 'add a new device' and then complete the connection.

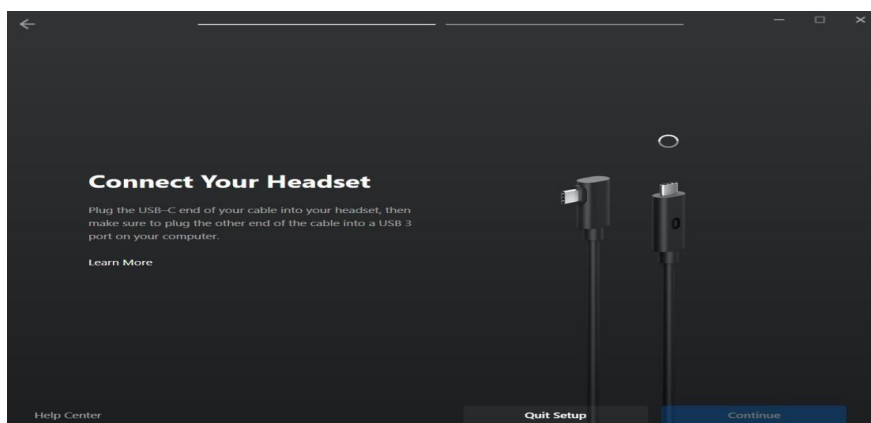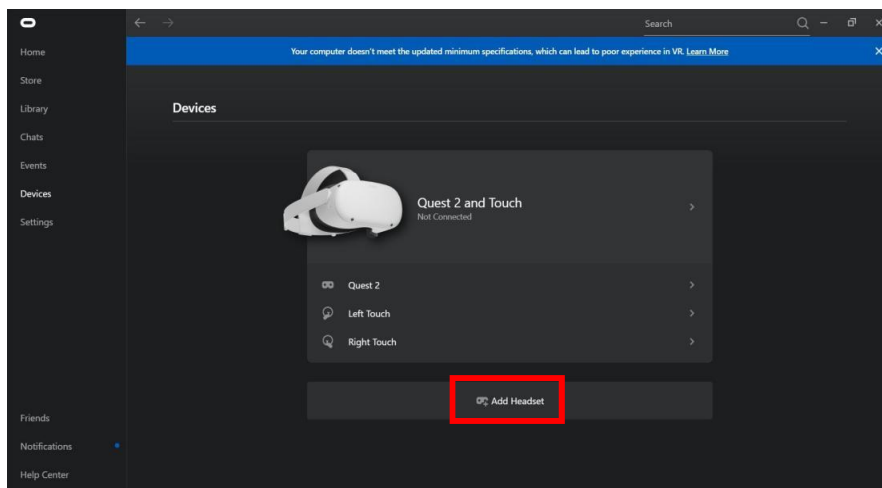


4) Make a USB connection stability test: Click on the enabled device, drop down to USB test, and then wait for the test to complete.

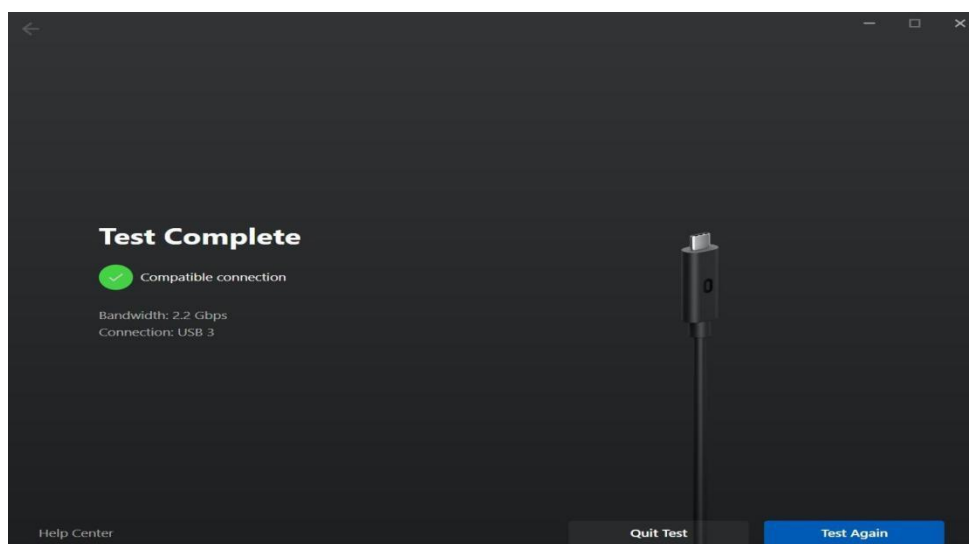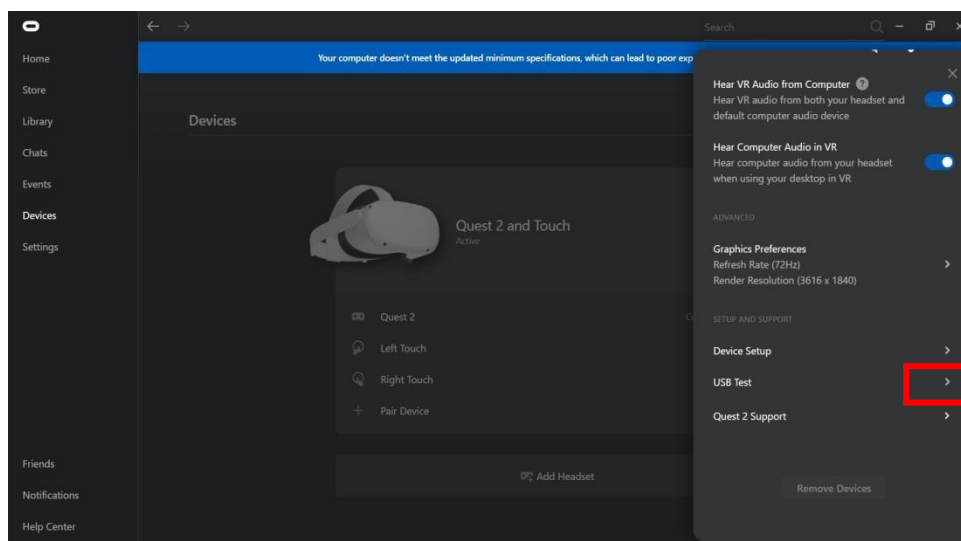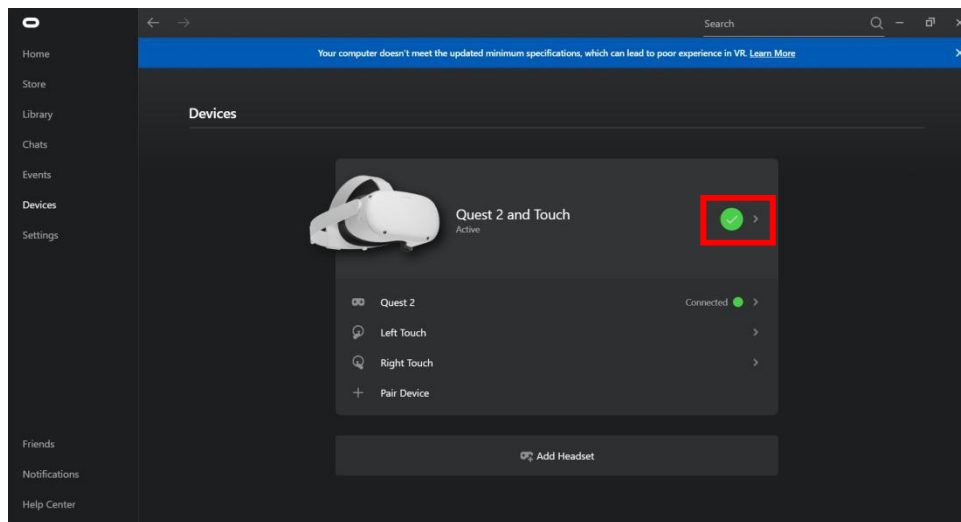


5) Set up Oculus Link: At this step, we have completed all the settings. Select the Oculus Link option on your headset setting interface to start a wired connection.

PC Meta Quest Link Software Update Steps


1. Click Settings on the software interface and select the General interface.

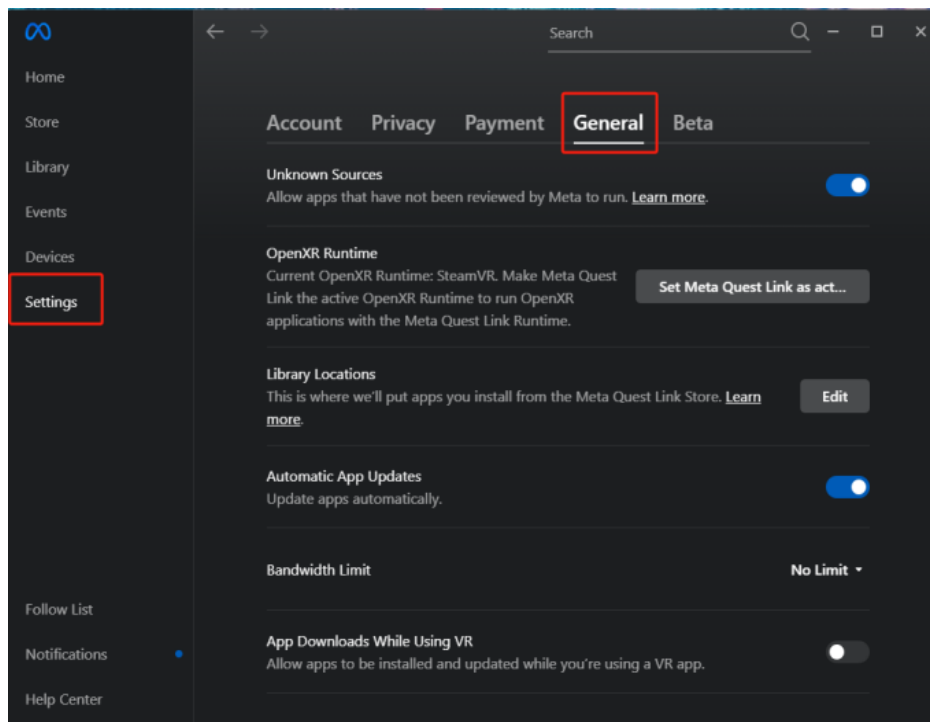

2. In the General settings interface, enable Automatic App Updates to ensure your software versions are consistently kept up-to-date. Please note that after each update, a computer restart is required for the changes to take full effect.

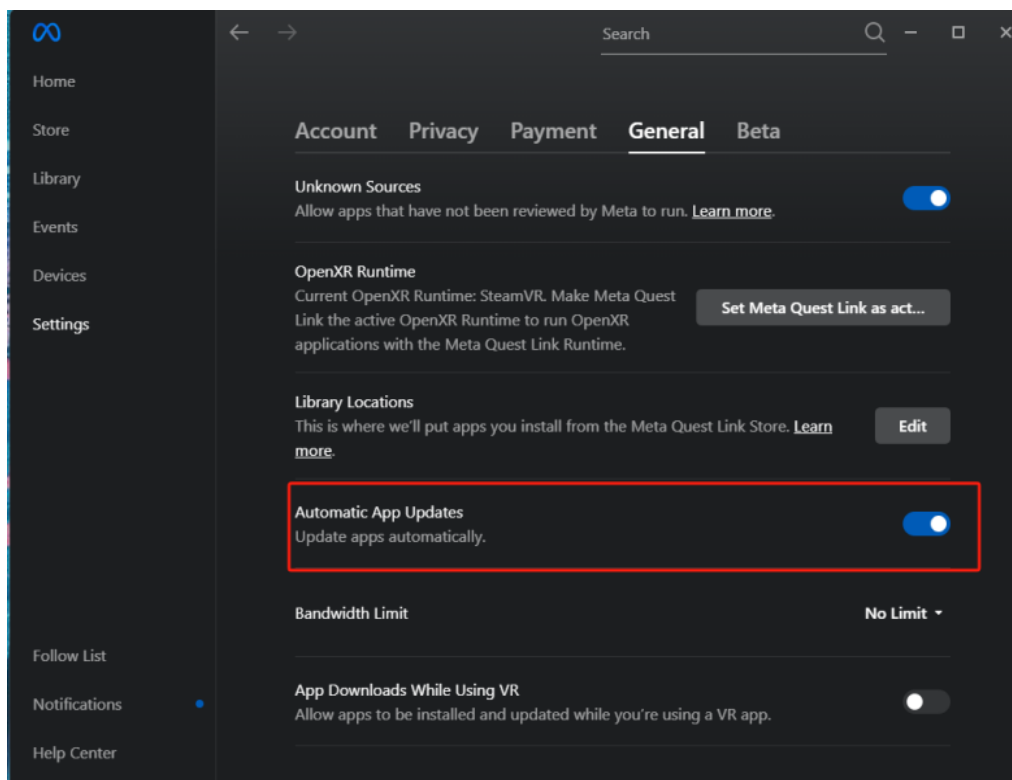

3. The updated software version can be viewed at the bottom of the interface to confirm whether it is consistent with the version in the Quest headset device. It is recommended that the two be consistent.

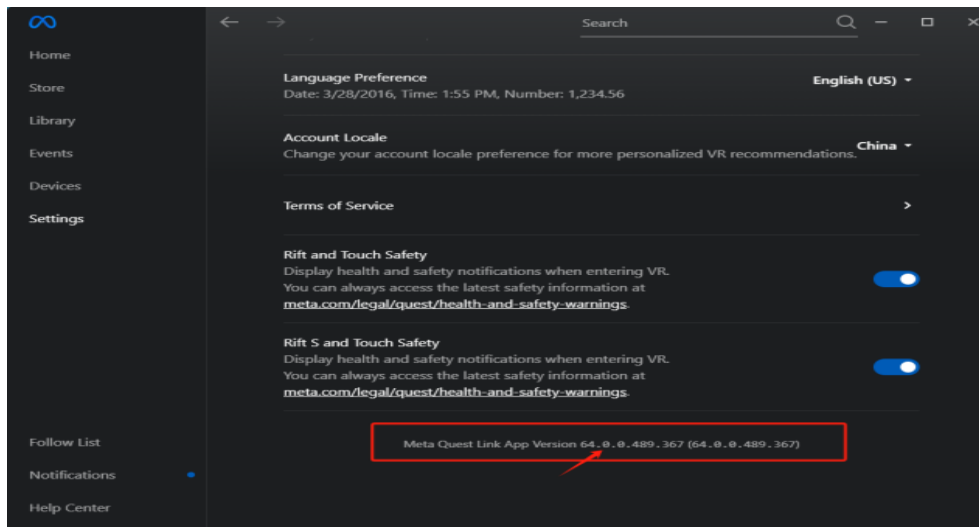

Quest headset device software update steps

1. Select Settings in the menu interface, and select system after entering the settings interface.



2. Select software update on the system interface, and confirm in the upper right corner whether there is a latest version of the software prompt to update. If so, click update to update the software. After the update is completed, please restart the device before continuing to use it. You can check whether the software version is consistent with the version in the version below. The PC version of the software is the same, so it is recommended that both versions be the same.

