


STYLPRO™ TOASTIE TUMMY Period Cramp Soother

Douleur menstruelle apaisante ■ Calmante para el dolor menstrual Periodenschmerzberuhiger ■ Periode pijn fopspeen
Uśmierzenie bólu menstruacyjnego

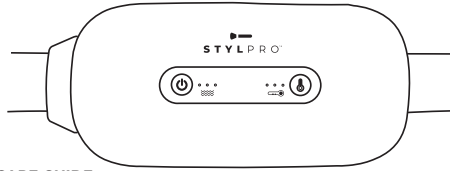

(EN) USE & CARE GUIDE FOR YOUR SAFETY AND CONTINUED ENJOYMENT OF THIS PRODUCT, ALWAYS READ INSTRUCTION LEAFLET CAREFULLY BEFORE USING.

The product is intended for private use only and is not intended for commercial use or for use in other applications. This is not a medical product or a medical device.

SPECIFICATIONS

Name: STYLPRO™ Toastie Tummy

Model: TT01A

Device Size: 185 x 85 x 25mm

Materials: Glass, Thickened ABS & Crushed Velvet Fabric

Nominal Voltage: 3.7V

Rated capacity of the battery: 1800mAh

Energy Capacity of the battery: 6.66Wh

Charge Voltage: 4.2V


Input power supply: USB socket, 5V, 1A

Charging Time: 3.5 hours

3.7 V , 1800 mAh, 6.66 Wh

PARTS IDENTIFICATION:

1. Device
2. Release Clip
3. USB Charge Port
4. Heat On/Off Button
5. Heat Indicator Light (3 settings)
6. Adjustable Strap
7. Vibration On/Off Button
8. Vibration Indicator Light
9. Strap Release Clip

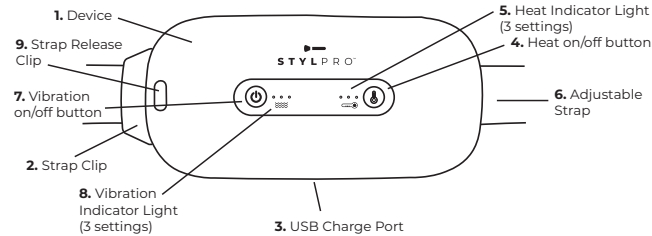

SETTING UP YOUR TOASTIE TUMMY

Ensure your Toastie Tummy is fully charged by inserting the USB cable (provided) in to the port at the bottom of the device and attach to a USB friendly power source. The Toastie Tummy may take up to 3.5 hours to fully charge. All the lights will flash when the device needs charging

Heat Setting

1. DO NOT USE ON BARE SKIN. Only use with a layer of non-synthetic material clothing between device and skin. Device heats up very quickly. If heat becomes uncomfortable **STOP** using. Place the device on your desired area and connect the strap around your body for handsfree use.

2. Press down the heat on/off button **(4.)** for 2 seconds to turn on the heat function.
3. Tap the heat on/off button **(4.)** lightly to switch between the 3 heat settings. On first use, use with heat **level 1**, increase level only if comfortable. If you switch off this function, it will save your last used setting and when you turn the heat function back on it will resume at this setting.

4. Press down the heat on/off button **(4.)** for 2 seconds to turn off the heat function.

Vibrate Setting

1. Place the device on your desired area and connect the strap around your body for handsfree use.

2. Press down the vibration on/off button **(7.)** for 2 seconds to turn on the vibrate function.

3. Tap the vibration on/off power button **(7.)** lightly to switch between the 3 vibration

settings. If you switch off this function, it will save your last used setting and when you turn the vibrate function back on it will resume at this setting.

4. Press down the vibrate on/off power button **(7.)** for 2 seconds to turn off the vibrate function.

YOU CAN USE THE DEVICE WITH BOTH THE VIBRATION AND HEATING SETTINGS ON AT THE SAME TIME OR INDIVIDUALLY. DEVICE WILL AUTOMATICALLY TURN OFF AFTER 30 MINUTES.

CONTRAINDICATIONS: DO NOT USE IF YOU HAVE/ARE ANY OF THE FOLLOWING : Heart Disease • Pregnancy • Lactating • Pacemaker • Epilepsy • Cancer • Broken Skin • Eczema Skin

ADVISORY/FOR OPTIMUM SAFETY:

- On first use, use with heat **level 1**, increase level only if comfortable.
- Device may cause redness on the skin. This is normal and will fade over time.
- **DO NOT USE ON BARE SKIN.** Only use with a layer of non-synthetic material clothing between device and skin.
- Device heats up very quickly. If heat becomes uncomfortable **STOP** using.
- If you have a skin condition or any medical concerns, please consult a doctor before use.
- Do NOT use when driving, operating machinery, or similar actions needing muscular control.
- Do NOT use in the bath or shower.
- Do NOT use if you have a pacemaker (or you have a heart rhythm problem) or with any electronic medical devices.
- Do not cover with anything including bedding, duvets, blankets etc whilst wearing the device.
- Do NOT use if you are or may be pregnant; or in the first 6-8 weeks after childbirth.
- Do not wear whilst sleeping.
- STYLPRO™ Toastie Tummy should be comfortable – if you experience discomfort, discontinue use immediately and consult a physician.
- Never use cleaning products containing alcohol, solvent or acetone, as they may damage the device and irritate the skin.
- Close supervision is necessary when this device is used by, on, or near children, as well as those with reduced physical and mental abilities.
- Never use on dry/ sensitive skin, chronic wounds or at risk skin.
- Do NOT use on tumours, acute inflammations, lesions/broken skin, varicose veins, post-surgical incisions, sensitized skin or anterior of the throat.

IMPORTANT SAFETY INSTRUCTIONS

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE TAKEN, INCLUDING THE FOLLOWING: READ ALL INSTRUCTIONS BEFORE USING APPLIANCE. SAVE THESE INSTRUCTIONS. KEEP AWAY FROM LIQUIDS IF THE STYLPRO™ TOASTIE TUMMY BECOMES WET, DO NOT USE. FOR ADULT USE ONLY. NOT INTENDED FOR USE BY CHILDREN. THIS PRODUCT IS NOT A TOY. DO NOT ATTEMPT TO REMOVE THE BATTERY OF THIS PRODUCT. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION. PLEASE STORE WITH CARE AND OUT OF REACH OF CHILDREN AND PETS. FOR DOMESTIC HOUSEHOLD USE ONLY. DO NOT TAMPER WITH ANY INTERNAL COMPONENTS. THERE ARE NO USER SERVICEABLE PARTS INSIDE THE UNIT. DO NOT ATTEMPT TO REPAIR THE PRODUCT YOURSELF. DO NOT PLACE ANY PART OF THE PRODUCT NEAR HEAT SOURCES SUCH AS RADIATORS, COOKERS, OPEN FIRES ETC. DO NOT USE THIS PRODUCT FOR ANYTHING OTHER THAN ITS INTENDED USE. IF THE APPLIANCE IS DAMAGED IN ANY WAY, STOP USING IT. IF YOU HAVE A PACEMAKER OR OTHER IMPLANTED DEVICE, CONTACT YOUR PHYSICIAN OR THE DEVICE MANUFACTURER OF THE, IMPLANTED DEVICE BEFORE YOU USE THE PRODUCT. DO NOT CHARGE IN ANY LOCATION WHERE IT OR THE CHARGER MAY BECOME IMMERSSED IN WATER OR WET. ONLY USE THE CHARGING CABLE PROVIDED.

DANGER: TO REDUCE THE RISK OF ELECTRIC SHOCK: ALWAYS TURN OFF BEFORE CLEANING OR STORING.

WARNING:

TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

1. READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE.
2. DO NOT LEAVE UNATTENDED. ALWAYS TURN OFF AFTER USE.
3. TO PROTECT AGAINST ELECTRICAL HAZARDS, DO NOT USE WHILE BATHING OR IN THE SHOWER OR WHILE SLEEPING.
4. CLOSE SUPERVISION IS NECESSARY WHEN ANY APPLIANCE IS USED BY OR NEAR CHILDREN OR PERSONS MADE WEAK OR DISABLED BY ILLNESS OR INJURY.
5. DO NOT OPERATE THIS APPLIANCE IF THE APPLIANCE MALFUNCTIONS OR HAS BEEN DROPPED OR DAMAGED IN ANY MANNER. RETURN APPLIANCE TO NEAREST SERVICE FACILITY FOR EXAMINATION, ELECTRICAL OR MECHANICAL ADJUSTMENT, OR REPAIR. NO REPAIRS SHOULD BE ATTEMPTED BY THE CONSUMER.
6. USE APPLIANCE ONLY FOR INTENDED USE AS DESCRIBED IN THIS INSTRUCTION BOOK. THE USE OF ATTACHMENTS NOT RECOMMENDED BY STYLPRO™ MAY CAUSE HAZARDS.
7. DO NOT USE OUTDOORS OR OPERATE WHERE AEROSOL (SPRAY) PRODUCTS ARE BEING USED, OR WHERE OXYGEN IS BEING ADMINISTERED.
8. BE SURE STYLPRO™ TOASTIE TUMMY IS NOT IN A POSITION WHERE IT CAN OVERHEAT OR CAUSE FIRE. EG IN A BED
9. ENSURE DEVICE IS 'OFF' BEFORE STORAGE.
10. DO NOT USE APPLIANCE IN THE BATHROOM OR NEAR WATER.
11. DO NOT PLACE OR STORE APPLIANCE WHERE IT CAN FALL OR BE PULLED INTO A TUB OR SINK.

12. DO NOT PLACE IN OR DROP INTO WATER OR OTHER LIQUIDS.
13. IF THE APPLIANCE FALLS INTO WATER, DO NOT REACH INTO THE WATER.
14. CHOKING HAZARD DUE TO SMALL PARTS. NOT SUITABLE FOR CHILDREN UNDER 3 YEARS

BATTERIES:

THE PRODUCT CONTAINS LITHIUM-ION BATTERY. RISK OF FIRE AND BURNS, DO NOT OPEN, CRUSH, HEAT ABOVE 60°C/140 °F OR INCINERATE. DO NOT SHORT CIRCUIT. IF THE LITHIUM-ION BATTERY BULGES SEVERELY, DISCONTINUE USE. KEEP SMALL CELLS WHICH ARE CONSIDERED SWALLOWABLE OUT OF REACH OF CHILDREN. SWALLOWING MAY LEAD TO BURNS, PERFORATION OF SOFT TISSUE, AND DEATH. SEVERE BURNS CAN OCCUR WITHIN 2 HOURS OF INGESTION. IN CASE OF INGESTION OF A CELL, SEEK MEDICAL ATTENTION PROMPTLY. NEVER RECHARGE NON-RECHARGEABLE BATTERIES. THIS PRODUCT HAS A BUILT-IN RECHARGEABLE BATTERY WHICH CANNOT BE REPLACED BY THE USER. THE REMOVAL OR REPLACEMENT OF THE RECHARGEABLE BATTERY MAY ONLY BE CARRIED OUT BY THE MANUFACTURER OR HIS CUSTOMER SERVICE OR BY A SIMILARLY QUALIFIED PERSON IN ORDER TO AVOID HAZARDS. WHEN DISPOSING OF THE PRODUCT, IT SHOULD BE NOTED THAT THIS PRODUCT CONTAINS A RECHARGEABLE BATTERY.

STORAGE

ENSURE DEVICE IS TURNED OFF AND UNPLUGGED FROM ANY POWER SUPPLY BEFORE STORAGE. DO NOT STORE IN HOT HUMID OR DAMP AREAS. ENSURE THE DEVICE IS ALLOWED TO COOL TO ROOM TEMPERATURE BEFORE STORING. PLACE IN COOL, DRY AREA OUT OF REACH OF CHILDREN, WHERE DEVICE WILL NOT BE DAMAGED.

MAINTENANCE

YOUR STYLPRO™ TOASTIE TUMMY IS VIRTUALLY MAINTENANCE FREE. NO LUBRICATION IS NEEDED. IF CLEANING BECOMES NECESSARY, TURN THE APPLIANCE OFF, ALLOW TO COOL AND WIPE EXTERIOR WITH A DAMP CLOTH. IF ANY ABNORMAL CONDITION OCCURS, TURN OFF THE DEVICE & CONTACT STYLPRO™ CUSTOMER SERVICES ON +44 (0) 20 3225 5559.

LIMITED TWO-YEAR WARRANTY

OUR GOODS COME WITH GUARANTEES THAT CANNOT BE EXCLUDED UNDER THE EUROPEAN CONSUMER LAW. EU DIRECTIVE 1999/44/EC, THIS DIRECTIVE STATES 'A TWO-YEAR GUARANTEE APPLIES FOR THE SALE OF ALL CONSUMER GOODS EVERYWHERE IN THE EU. YOU ARE ENTITLED TO A REPLACEMENT OR REFUND FOR A MAJOR FAILURE YOU ARE ALSO ENTITLED TO HAVE THE GOODS REPAIRED OR REPLACED IF THE GOODS FAIL TO BE OF ACCEPTABLE QUALITY AND THE FAILURE DOES NOT AMOUNT TO A MAJOR FAILURE. STYLPRO™ WILL REPAIR OR REPLACE (AT OUR OPTION) YOUR APPLIANCE FREE OF CHARGE FOR TWENTY-FOUR MONTHS FROM THE DATE OF PURCHASE, IF THE APPLIANCE IS DEFECTIVE IN WORKMANSHIP OR MATERIALS. THIS WARRANTY IS AN ADDITIONAL BENEFIT AND DOES NOT AFFECT YOUR LEGAL RIGHTS. TO OBTAIN SERVICE UNDER THIS WARRANTY, PLEASE READ THE WARRANTY LEAFLET INCLUDED OR CONTACT STYLPRO™ CUSTOMER SERVICE AT TEAMTOM@STYLIDEAS.COM +44 (0) 20 3225 5559. TO MAKE A WARRANTY CLAIM YOU MUST RETAIN YOUR PROOF OF PURCHASE.

IMPORTANT: THIS WARRANTY DOES NOT COVER DAMAGE RESULTING FROM ACCIDENTS, MISUSE, ALTERATIONS, ABUSE, LACK OF REASONABLE CARE OR USE OTHER THAN DESCRIBED IN THESE INSTRUCTIONS, OR PERFORMANCE OF SERVICE OR REPAIRS BY AN UNAUTHORISED SERVICE CENTRE. THIS WARRANTY IS VALID ONLY ON MERCHANDISE SOLD BY AUTHORISED RETAILERS. NOTE, THE ITEM MUST BE THOROUGHLY CLEANED PRIOR TO RETURN.

CORRECT DISPOSAL OF THIS PRODUCT: WHEN THE PRODUCT HAS REACHED THE END OF ITS USAGE, PLEASE DO NOT DISPOSE WITH REGULAR HOUSEHOLD WASTE. RECYCLING IS THE SAFEST AND MOST RESPONSIBLE WAY TO DISPOSE OF ELECTRICAL ITEMS THAT COME TO THE END OF THEIR LIFECYCLE. PLEASE DISPOSE OF IT ACCORDING TO YOUR LOCAL REGULATIONS. THE WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE) DIRECTIVE IN EUROPEAN COUNTRIES STIPULATES CORRECT RECYCLING PRACTICES. DO NOT DISPOSE IN REGULAR HOUSEHOLD WASTE.

UK& CE MARKING: UK/EU – DECLARATION OF CONFORMITY: STYLIDEAS LTD DECLARES THAT STYLPRO™ TOASTIE TUMMY COMPLIES WITH THE ESSENTIAL REQUIREMENTS AND OTHER RELEVANT PROVISIONS. A COPY OF THE DECLARATION OF CONFORMITY IS AVAILABLE ON REQUEST. STYLIDEAS LTD, AMSHOLD HOUSE, GOLDINGS HILL, LOUGHTON, ESSEX, IG10 2RW, UK. OBELIS S.A, BD. GÉNÉRAL WAHIS 53, B-1030 BRUSSELS, BELGIUM.

©2023 STYLIDEAS Ltd. All rights reserved. STYLIDEAS owns trademarks, registered trademarks, patents, patents pending, design registrations and protection of the copyright of its products. www.stylideas.com/ip. Distributed by STYLIDEAS Ltd, UK: Amshold House, IG10 2RW, UK. +44(0)20 3225 5559 teamtom@stylideas.com. EU: OBELIS S.A, Bd. Général Wahis 53, B-1030 Brussels, Belgium



Made in China.

TT01A