

CUCKOO

CAC-C1010FW / C1020FW

초간편 필터 교체 설명서 안내에 따라 직접 필터를 교체하실 수 있습니다.




필터 구성 및 교체 주기를 먼저 확인하세요.

필터	교체주기	관리방법
① 프리 필터 (CPR)	2주	청소 및 세척
② 유해 가스 안심 필터 (CHG)	4개월	교체
③ 카본 탈취 필터 (CDE)	12개월	교체
④ 트루 헤파 H14 필터 (CHP14)	12개월	교체


교체 방법 안내

- *반드시 쿠쿠 정품 필터를 사용해 주십시오.
- *필터 교체에 앞서 항상 전원 플러그를 뽑아 주세요.

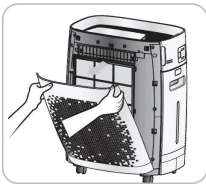


1. 필터 덮개를 열어 주세요.



*필터 덮개 좌,우측 상단 부분을 조심스럽게 당겨 열어 주세요.

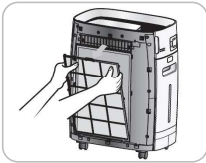


2. 제품에서 교체해야할 필터를 분리하여 주세요.



3. 장착하기 전에 필터의 전면을 확인하여 주세요.

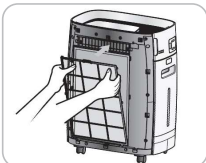

4. 배송 받으신 새 필터에서 포장 비닐을 제거한 후 제품에 장착하여 주세요.

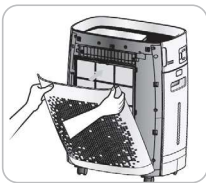


5. 필터 덮개를 다시 장착해 주세요.

청소 방법 안내

⚠ CAUTION

- *필터 청소에 앞서 항상 전원 플러그를 뽑아 주세요.
- *프리 필터는 청소(먼지 제거) 혹은 물세척 후 재생이 가능합니다.
- *유해 가스 안심 필터, 카본 탈취 필터, 트루 헤파 H14 필터는 청소(먼지 제거)/물세척 후 재사용할 수 없습니다.
- *필터 덮개 및 프리 필터 청소 주기는 제품 사용 환경에 따라 다를 수 있습니다.

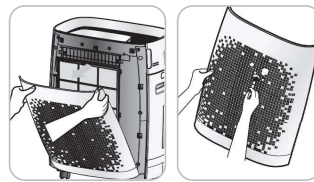


1. 필터 덮개를 열어 주세요.


*필터 덮개 좌,우측 상단 부분을 조심스럽게 당겨 열어 주세요.

*필터 덮개 하단 부분을 잡고 무리하게 잡아당기면 제품 파손의 위험이 있으니 주의하십시오.

2. 필터 덮개를 부드럽고 마른 천이나 부드러운 스펀지로 표면에 붙어있는 먼지를 제거해 주세요.

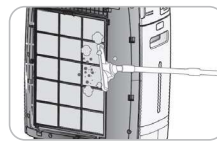

3. 프리 필터 표면의 먼지를 진공청소기를 이용하여 제거하여 주세요.

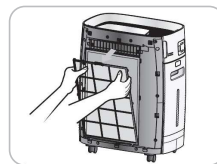

4. 프리 필터 손잡이를 눌러서 분리후 미지근한 물로 세척해 주세요.




*물로 세척한 프리 필터는 그늘에서 완전히 건조시키세요.

*물기가 남아있을 경우 고장이나 냄새 발생의 원인이 됩니다.

⚠ CAUTION

- *뜨거운 물을 이용하여 세척 또는 직사광선에 건조 시 필터 변형이 발생할 수 있습니다

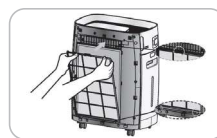

5. 프리 필터를 제품에 장착 후 필터 덮개를 다시 제품에 설치해 주세요.


*프리 필터를 제품에 장착시 홈에 정확히 끼워주세요.

혹시 아직도 필터교체에 어려움이 있으세요?

We can help!

CUCKOORENTAL.COM 

저희 홈페이지를 방문하시면 동영상 가이드라인에 따라 필터를 교체하실 수 있습니다.

888.700.0425 

저희 고객센터로 연락하시면 전문 상담가가 언제든지 친절하게 안내해 드립니다.

운영시간 : 미 서부 기준 오전 9시 - 오후 6시

CUCKOO

CAC-C1010FW / C1020FW

QUICK & EASY FILTER REPLACEMENT You can replace the filters for your CUCKOO Air Purifier by following this instruction




Filter Configuration

FILTER	REPLACEMENT CYCLE	NOTE
① PRE-FILTER (CPR)	2 weeks	Cleaning & Washing
② HARMFUL GAS EASY FILTER (CHG)	4 month	Replacement
③ ACTIVE CARBON DEODORIZATION FILTER (CDE)	12 month	Replacement
④ TRUE HEPA H14 FILTER (CHP14)	12 month	Replacement

Replacement Guide


*You must use genuine CUCKOO Filter.

*Always unplug the power cord before replacing a filter

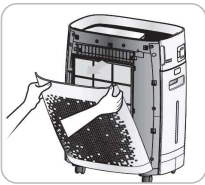

1. Open the filter cover



*Open the Filter Cover gently by pulling the upperpart of each side of the Filter Cover.

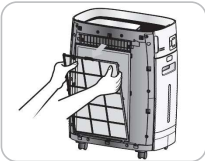


2. Remove the OLD Filter from the product.



3. Check the front of the filter before attaching it.

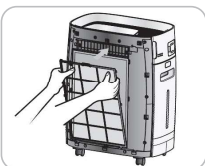

4. Remove the packaging plastic from the new filter you received and attach it on the product.

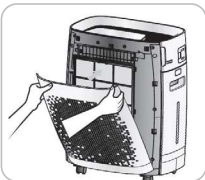


5. Reinstall the filter cover.

Cleaning Guide

CAUTION

- * Always unplug the power cord before cleaning a filter.
- * The Pre-Filter can be reused after the dust is removed or washed in water.
- * Harmful Gas Easy Filter, Active Carbon Deodorization Filter True HEPA H14 Filter cannot be reused even after cleaning.
- * The filter cleaning cycle may vary depending on the surrounding environment.

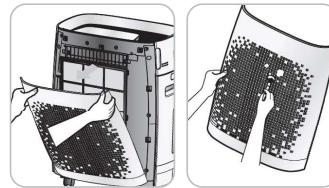


1. Open the filter cover


*Open the Filter Cover by pulling the upperpart of each side of the Filter Cover.

*Gently remove the cover by starting at the top of the cover.

2. Remove the dust attached to the filter cover surface lightly with soft, dry cloth or soft brush.

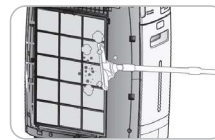


3. Clean the dust off the filter surface with a vacuum cleaner.

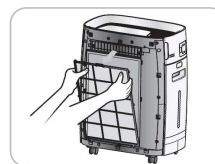

4. Pull the Pre-Filter handle to remove it and wash it in warm water



Wash the removed pre-filter in water and dry it out away from sunlight.

*If wet, it may cause a malfunction or odor.

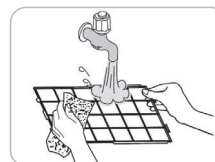

CAUTION

- *If you wash it with hot water or dry it in direct sunlight, the Filter may become deformed.

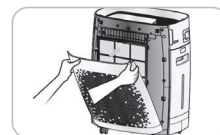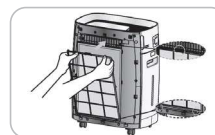

5. Assemble the filter and put its cover back in place.


*Make sure to properly insert the filter into the grooves.

Still having a trouble replacing your filters?

We can help!

CUCKOORENTAL.COM 

Please visit our homepage!
You can find the Video instruction.

888.700.0425 

Please contact CUCKOO CUSTOMER SERVICE CENTER!
Our professional staffs can happily assist you.

Business Hours : M-F, 9AM-6PM (PST)