

AUBIKA

Excellence Strap

Installation Manual




Top Strap

Rear Fit Wheel

Left Side Strap

Right Side Strap

Rear Brace

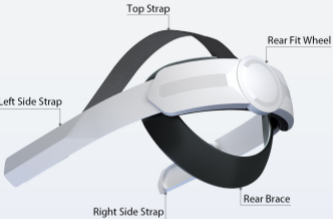

Step 1 Remove the Facial Interface

Remove the facial interface of the Quest 2 headset first.



Step 2 Install the Top Strap

Install the top strap from the inside of the headset.



Step 3 Attach Side Strap

Attach both sides to the headset.



Step 4 Insert Facial Mask

Align the facial mask to the headset and snap it back in place.



Step 5 Adjust Excellence Strap

Secure the top strap before twisting rear fit wheel to loosen or tighten side straps.



Step 6 Wear Display



Step 7 Disassemble Tips

The strap can be easily removed from the side triangle tip.



HEALTH & SAFETY WARNINGS

▲ WARNING To reduce the risk of personal injury, discomfort or property damage, please ensure that all users of this accessory carefully read the warnings below.

Before Using This Strap:

1. Read and follow all setup and operating instructions provided with the headset. Follow instructions for installing this strap to your headset.
2. This accessory is not a toy and should not be used by children under the age of 13.
3. To avoid transferring contagious conditions (like pink eye), do not share the headset or this accessory with persons with contagious conditions, infections or diseases, particularly of the

eyes, skin or scalp. The strap could and should be cleaned between each use with skin-friendly non-alcohol, non-abrasive antibacterial wipes and with a dry microfiber cloth.

4. Replace this hard strap if it becomes worn or can not be cleaned.

Strap Care:

1. Do not use this strap if any part is broken or damaged.
2. To avoid damage your strap, do not expose it to moisture, high humidity, high concentrations of dust or airborne materials, temperatures outside their operating range or direct sunlight.
3. To avoid damage, please keep your strap away from pets.

WE ARE HERE FOR YOU
For FAQs and more information, please visit:

<https://aubika.store/>



instagram



twitter



facebook