


HEALTHsense®


Head
Massager

Model : HM 240

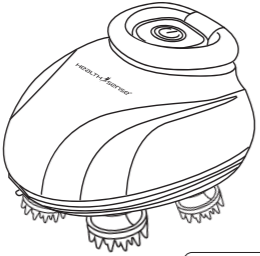

Scan for massage
head removal guide

Sensing Health Everywhere



Product Specification

Product Name : Head Massager

Model : HM 240

Rated Voltage : 5V 1A

Rated Power : 5W


Product Weight : Net - 233g; Gross - 324g

Product Size : 110 x 95 x 80 mm

Charging Time : 1.5-2 hours

Battery : Rechargeable Lithium Batteries


Using Time : 1.5 hours




Product Features

- Four Massage Heads : Flexible massage heads simulate a human hand massage, providing comfortable relief from fatigue.
- Three Adjustable Speeds : Long press to power on; tap to switch between speed levels.
- Removable for Cleaning : The massage heads can be detached for separate cleaning, ensuring cleanliness and hygiene.
- Top Ring Handle : Designed for a comfortable and secure grip.

-1-



Product Structure & Parts

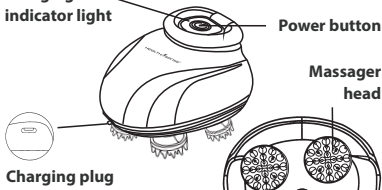


Charging indicator light


Power button

Charging plug

Massager head




Built-in red light for massage, designed to help nourish hair



Operation Instruction

- For optimal use, hold the product with a relaxed grip. Insert your index finger into the ring of the device and hold it with your other fingertips. Position the massage head of the device on your head and massage each area of the head.
- Long press the power button of the device for two seconds to turn it on. The massager will start operating in three modes:


-2-



Charging Instructions :

- Use a 5V-1A charger to charge the device (Cable is provided)
- The device cannot be used while charging.
- The red indicator light turns on during charging and the green indicator light will turn on when fully charged.


*Maintenance : If the rechargeable battery is not used for an extended period, it is recommended to charge it at least once every three months to maintain its lifespan.



Battery Disassembly Steps


- Disconnect the external power supply and remove the product casing.
- Cut off the two power cables connected to the battery, one at a time.
- Carefully remove the battery and use insulation tape to cover the exposed ends of the disconnected power cables.
- Place the discarded battery in a designated recycling area.
- Follow local environmental laws and guidelines for proper disposal to protect the environment.


-3-



Health & Environmental Protection

Do not discard or burn the packaging or product indiscriminately. Dispose of them properly at a waste collection station.






Troubleshooting

If a malfunction occurs, check the following :

| Faults | Possible Causes/Solutions |
|-------------------|---|
| Unable to turn on | Pressing the on/off key too briefly or for longer than 2-3 seconds. |
| | Battery is out-of-charge. Please charge the device. |
| Slow speed | Battery is low. Please charge the device. |

- Do not use after head surgery with head skin issues or if you have physical, mental or intellectual impairments.
- For personal, household use only not for medical or commercial purposes.
- Not for babies, minors must use it under supervision.
- Stop use immediately if discomfort occurs.

-5-




Warranty & Support

Entitle yourself for the 1 year HealthSense warranty by registering your purchase and easily reach us to submit your product related issues & queries, when you follow these hassle free ways.


At HealthSense our top priority has always been our valued customers. We very well know your HealthSense product is a part and parcel of your everyday life, which is why we are more easily accessible than earlier.

SCAN - For Warranty Registration



(Must register within 30 days from date of purchase)

SCAN - To File Complaint




(Fill & submit form if you are facing any product related issues)

*For detailed warranty terms please visit the link : www.healthsense.in/warranty-terms


*For additional support :
Mail us at : support@healthsense.in or
call us on : +91 9856 9856 36

-6-



To know about discounts & new launches connect with us on social media

@healthsenseindia



www.healthsense.in