

AI Translator

User Manual



WhatsApp Support

WhatsApp ID: 8618820461144
E-mail Support: support@vormor.cn

Introduction :

The AI translator is an artificial intelligence hardware product that uses AI technology to integrate speech recognition, OCR (character recognition), text translation, speech synthesis and other technologies. In the network (or hotspot) state, as long as the voice is spoken, it can be instantly translated into the language you want and broadcast, and the photo text can be translated into a foreign language. In the scenes of traveling abroad, foreign language learning, business communication, etc., the communication problems between different languages are effectively solved.

The AI translator should be used in the connected state first, it can connect to the wireless WIFI or mobile hotspot.(Offline translation response speed and accuracy are limited, please use voice translation first.)



①: Power ON/OFF ②: Target language button ③: Source language button ④: Touch Screen ⑤: Microphone ⑥: Volume + - ⑦: Speaker ⑧: Camera ⑨: Charger Port ⑩: Hanging hole ⑪: Home Button O

Product Details

1. Power ON/OFF :


1) **Power ON/OFF:** Press and hold the power button for more than 3 seconds for power on/off;

2) **Standby Status:** Short press the power button to wake up or standby.


2. **Volume button + -:** Tap the volume +/- button to adjust the volume.

3. **Home button O:** Tap "O" button for backing to the main interface.

4. Voice Translation Button: On the speech translation section as shown pic 1, the upper red language is for the target language, and below is for the source language.

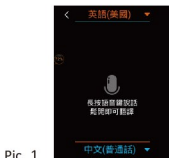

Pic 1

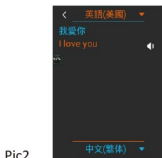

Pic2

Example: Long press the below button (source language) and speak Chinese "我愛你". After releasing, the English (target language) "I love you" will be shown automatically. You can choose any different source language and target language on the drop down button ▾.

Before Using:

1. Device charging:

We suggest charging the device before using, normally 1 hour for fully charged.

2. Internet Connecting:

The AI translator is used on the connected state first, it can connect to the wireless WIFI or mobile hotspot. (During offline translation status, the responding speed and accuracy are limited, please use voice translation first.)

Connecting Steps:

- 1) On Setting Section --WIFI--Open, then back to the main interface
- 2) On Internet connection Section: connect the wifi you require.

Note: At present, the device only supports WIFI with direct password input. For some hotels, the WIFI that needs to open the secondary authentication of the website is temporarily not supported.

3. System Language Settings

On Setting section, go to system language selection, slide up and down to select the operating system language you need.

Main function introduction:

Speech translation

Before using, make sure your network is connected successfully.

1). **Language selection:** At the top and bottom of the speech translation interface click the drop down button to select the desired source language and destination language respectively.

2). **Voice input:** Press and hold the red/blue button (voice input button) on the device to wait for the screen to start "talking", red for the target language and blue for the source language otherwise it will not be recognized. Please make sure to say the corresponding language selected. Otherwise it will not be recognized.

3). After releasing your hands, the voice is automatically recognized and parsed, and translated into the set target language and broadcast by voice. Tap the screen speaker icon to replay the conversation.

4). Delete the records you don't need



Photo translation

1) **Language selection:** On the photo translation interface, select the desired source language and destination language respectively.

2) Tap the screen to view the image that needs to be translated, and click the button on the screen. After the camera is clearly photographed, the device automatically recognizes and parses and translates into the set target language.



AI Assistant (system language is not Chinese simplified, Chinese traditional, will automatically mask this function)

In the main interface, touch the AI Assistant option to enter the AI Assistant interface.

Long press the translation red/blue button for smart AI question and answer (currently only Chinese question and answer is supported, the content is limited. There may be changes as the version is updated).

Offline translation

(reaction speed and accuracy are limited, please use voice translation first)

1. Language selection:

Select the corresponding destination language in the blue language selection box.

2. **Smart recording:** After selecting the corresponding language, make sure to enter the smart recording interface, you can start, pause, end the recording operation. Click the list button to enter the recording list to play the recording.

3. **Audio translation:** Click on a single recording record, convert the audio file into text, and slide the screen to the left to display the translation result.

Global chat

First select the group. If the group has directly clicked on the number to enter the corresponding group, you can also click "Add Channel" to perform "Initiate Intercom" or "Join Intercom".

Language learning

In the main interface, tap the screen language learning option to enter the language learning interface.

Product parameters

Name	Translator	N.W	100g
Size	125.8*55*12mm	Capacity	1200mAh
DC	5V/1A	Stand-by time	7days
Charge interface	Micro USB	Screen size	2.4"
Resolution ratio	240*320	Camera	5 Million
Mic	2	Speaker	BOX speaker
Network	WIFI	Material	ABS

Disclaimer

1. Please read the product manual carefully before use and strictly follow the instructions.
2. This product is not responsible for the translation results.
3. This product is not waterproof, because the machine damage caused by water ingress is borne by the user.
4. Do not place this product in an environment with high temperature, high humidity and damage to the product.

Thank you for purchasing, Herilary provides you a 18-month warranty and quick response & friendly customer service.

If you have any questions, please contact us at any time: herilary@vormor.cn