



CRMA

CRMA

Features

Superior thermal protection
breathable Cryo glove
Mid arm.
Excellent durability
Multi-layered construction
Lightweight and Comfortable
Excellent Dexterity
Cryogenic protection for ultra-cold applications down to -196°C (-320°F)

Sizes


S - XXL

Color

Blue

Specifications

Palm length: 260 mm (size 10)
Total Length: 335-395 mm

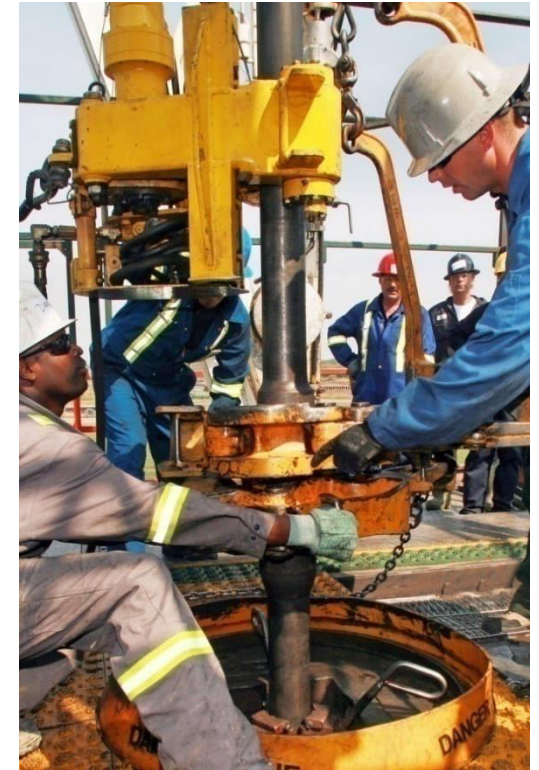

Applications

Fertility Clinics
Bio-Medical
Industrial
Pharmaceutical
Genetic and Bio Technology

CROGENIC GLOVE

Mid arm length cryo gloves are made with acrylic yarn and reinforced palm provide excellent mechanical resistance



MALLCOM INDIA LTD

EN 12, Sector V, Salt Lake City
Kolkata 700091, India

T: +E : safety@mallcom.in, w : www.mallcom.in



Safe hands!!

Limits to use

The maximum duration of exposure at ultra cold temperatures is dependent on many variables, including atmospheric conditions, the task being performed and the users physiology. The thermal flux transmitted through the glove is sufficiently low to allow the user adequate time to safely remove themselves from the hazard

Instructions for storage:

Store in a clean and dry place.

Protective Glove During Extreme Cold Weather Condition

Warning

Not for immersion in liquid cryogenes

Instructions for cleaning

Do not machine wash or dry.

Packaging Instruction:

1 dozen pairs in a polybag
10 poly bags in a carton
120 pairs in a carton

EN 511



EN 388



EN 511: 2006 Gloves giving protection from cold

3: Resistance to convective cold (from 0 to 4)
2: Resistance to contact cold (from 0 to 4)
X: Permeability by water (0 or 1)

Performance according to EN 388:2003

1. Resistance to abrasion (from 0 to 4)
3. Resistance to cut (from 0 to 5)
2. Resistance to tear (from 0 to 4)
3. Resistance to puncture (from 0 to 4)
X. TDM Blade cut resistance level (from A to F)
X – Means not tested

Instruction For Use

Gloves should be loose fitting for maximum performance and for rapid removal in hazardous environments.

Proper fit contributes to product performance – a tight fit leads to thermal loss.

Select an appropriate glove length for your application.

Periodically inspect the condition of your gloves – replace gloves that show excessive wear



MALLCOM INDIA LTD

EN 12, Sector V, Salt Lake City
Kolkata 700091, India

T: +E: safety@mallcom.in, w: www.mallcom.in