



CUSHION & CABLE

Replacement Guide

REVO



CUSHION REPLACEMENT

STEP 1 - Locate Stealth Release™ Tabs

Locate the Stealth Release™ tabs at 3 and 9 o'clock. Depress each one at a time and lift toward you. Note: each clip will have to be disengaged.




STEP 2 - Remove Cushions

Remove the ear cushions from the ear cups of the headphone



STEP 3 - Locate New Cushions

Locate the new ear cushion and make sure it is right side up

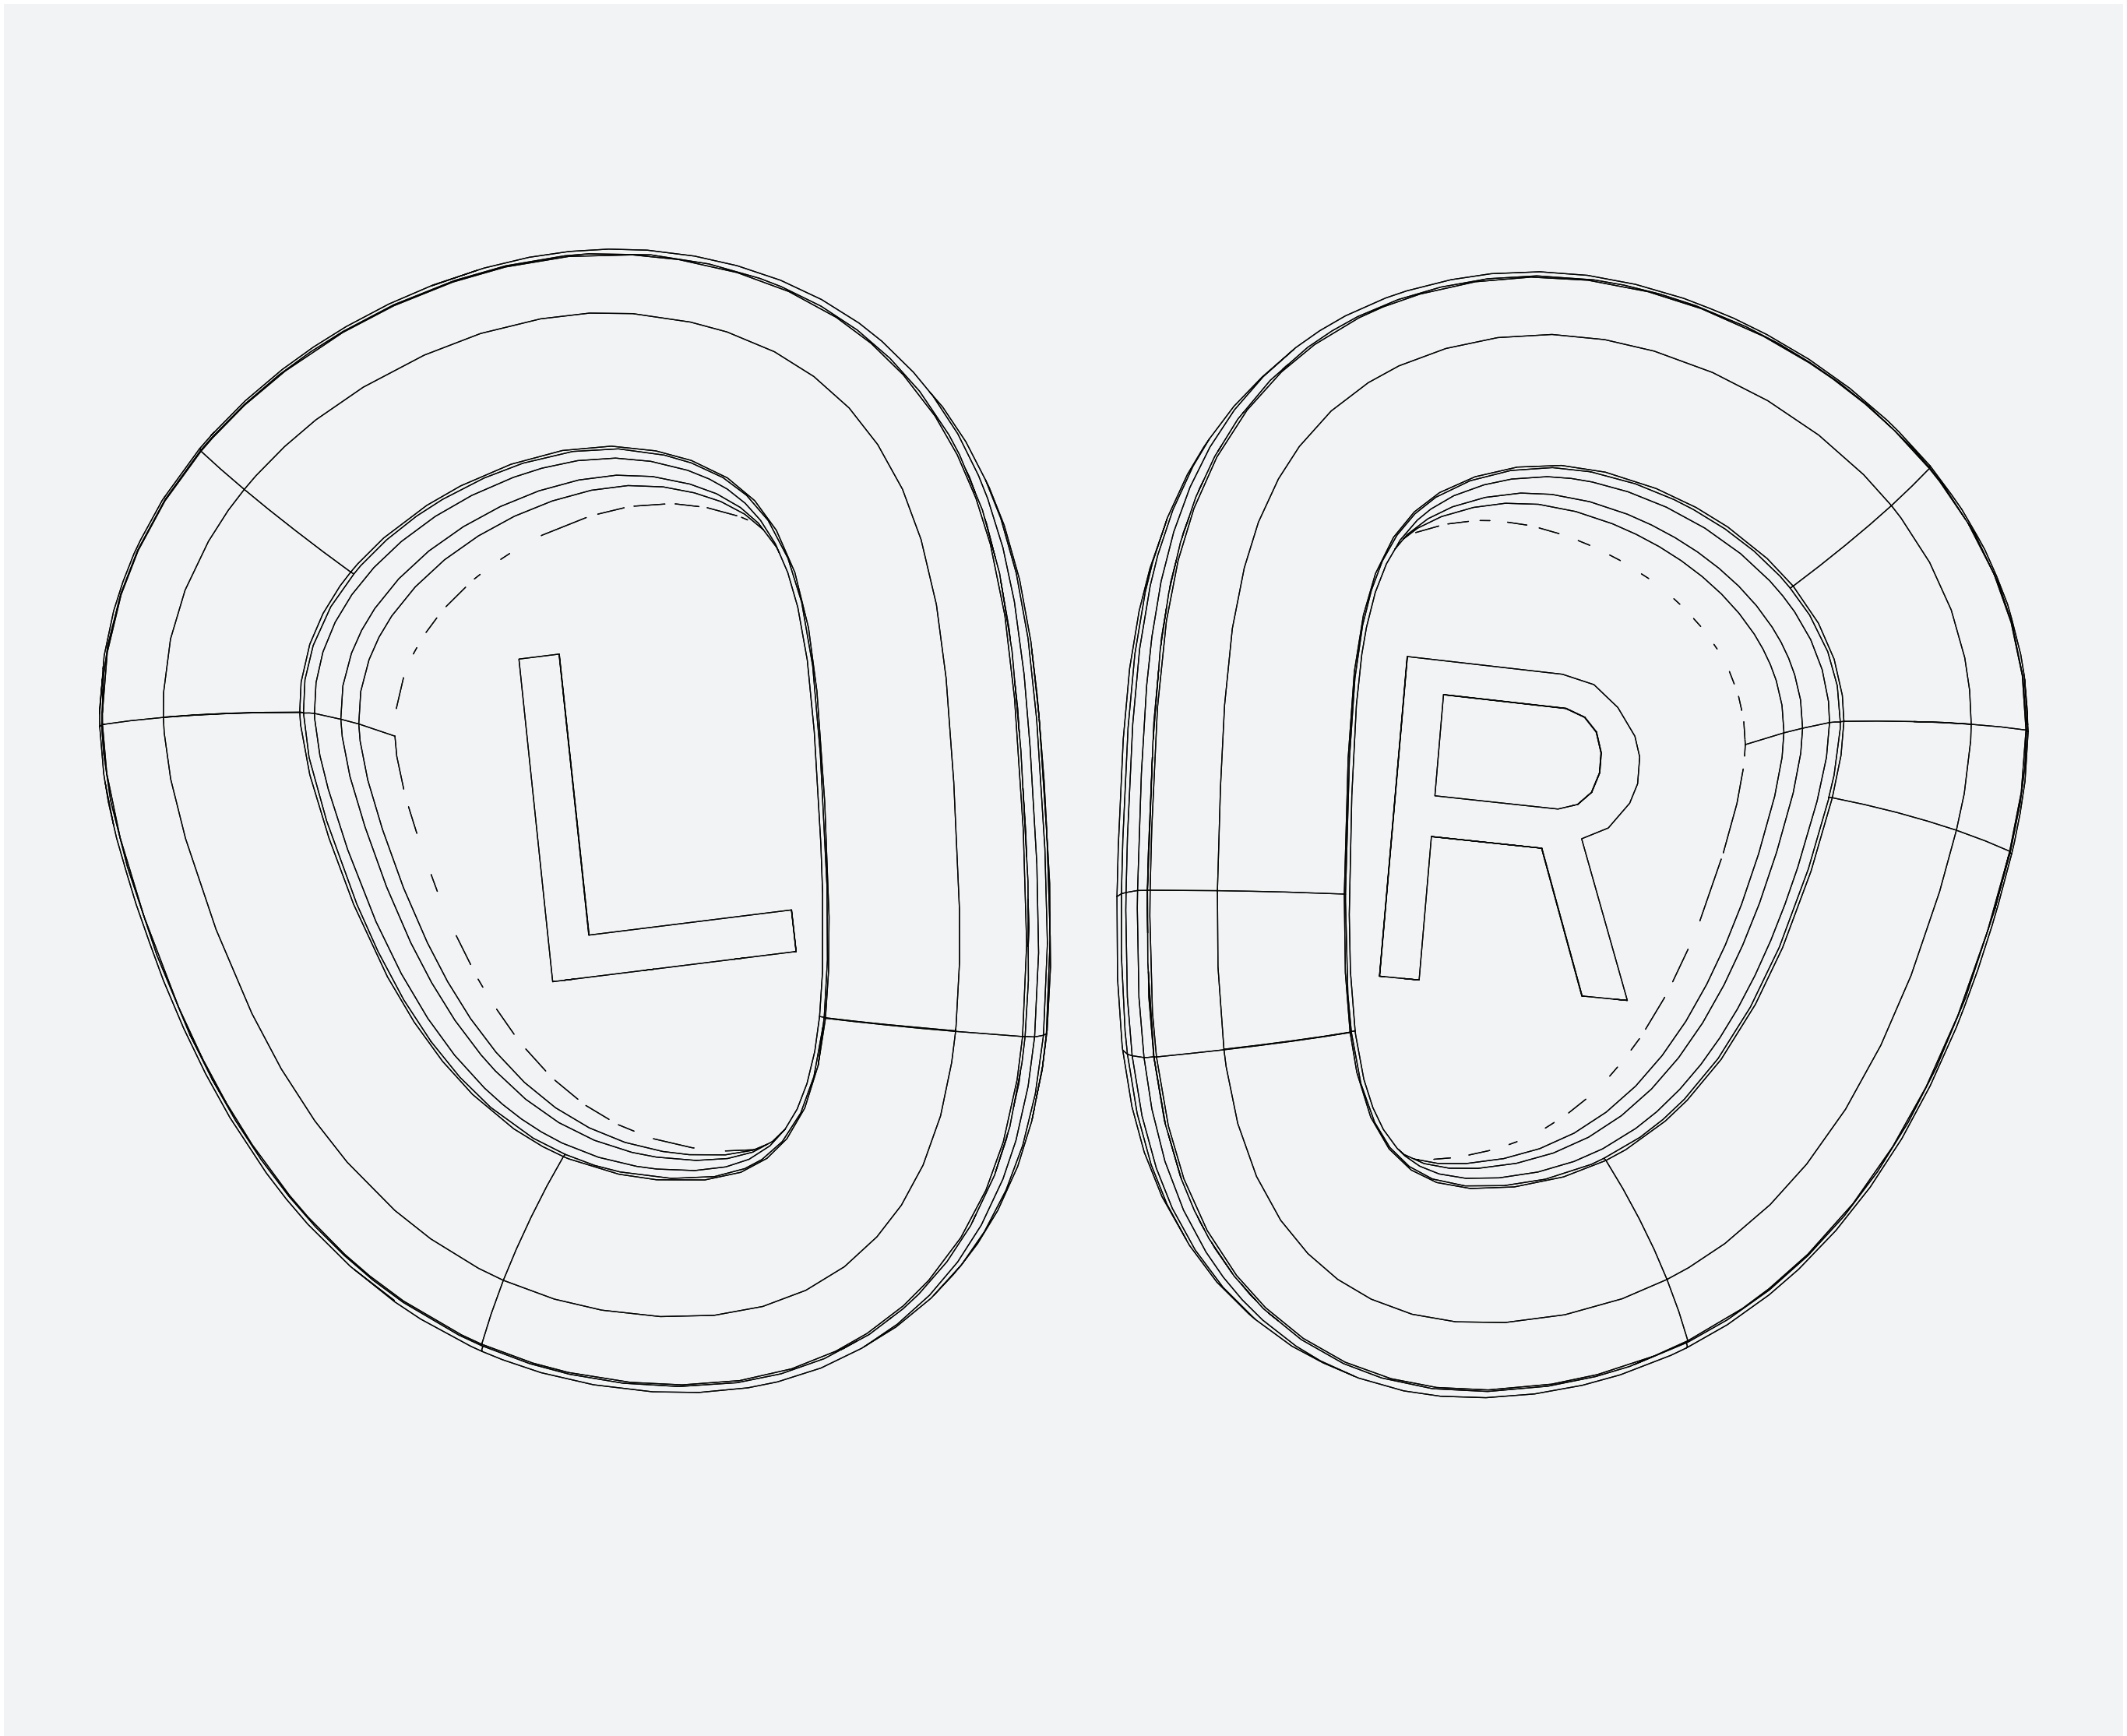

STEP 4 - Reinstall Cushions

Apply pressure to both the tabs at 3 and 9 o'clock. The ear cushion will snap into place.





CABLE REPLACEMENT

STEP 1 - Locate Stealth Release™ Tabs

Locate the Stealth Release™ tabs at 3 and 9 o'clock. Depress each one at a time and lift toward you. Note: each clip will have to be disengaged.




STEP 2 - Remove Cushions

Remove left ear cushion from the ear cup of the headphone



STEP 3 - Locate Pin or Locking Screw

Locate the removable pin or screw on the left ear cup (screw or locking pin depends on model). Using the supplied pry tool or a small standard screw driver, disengage the pin.

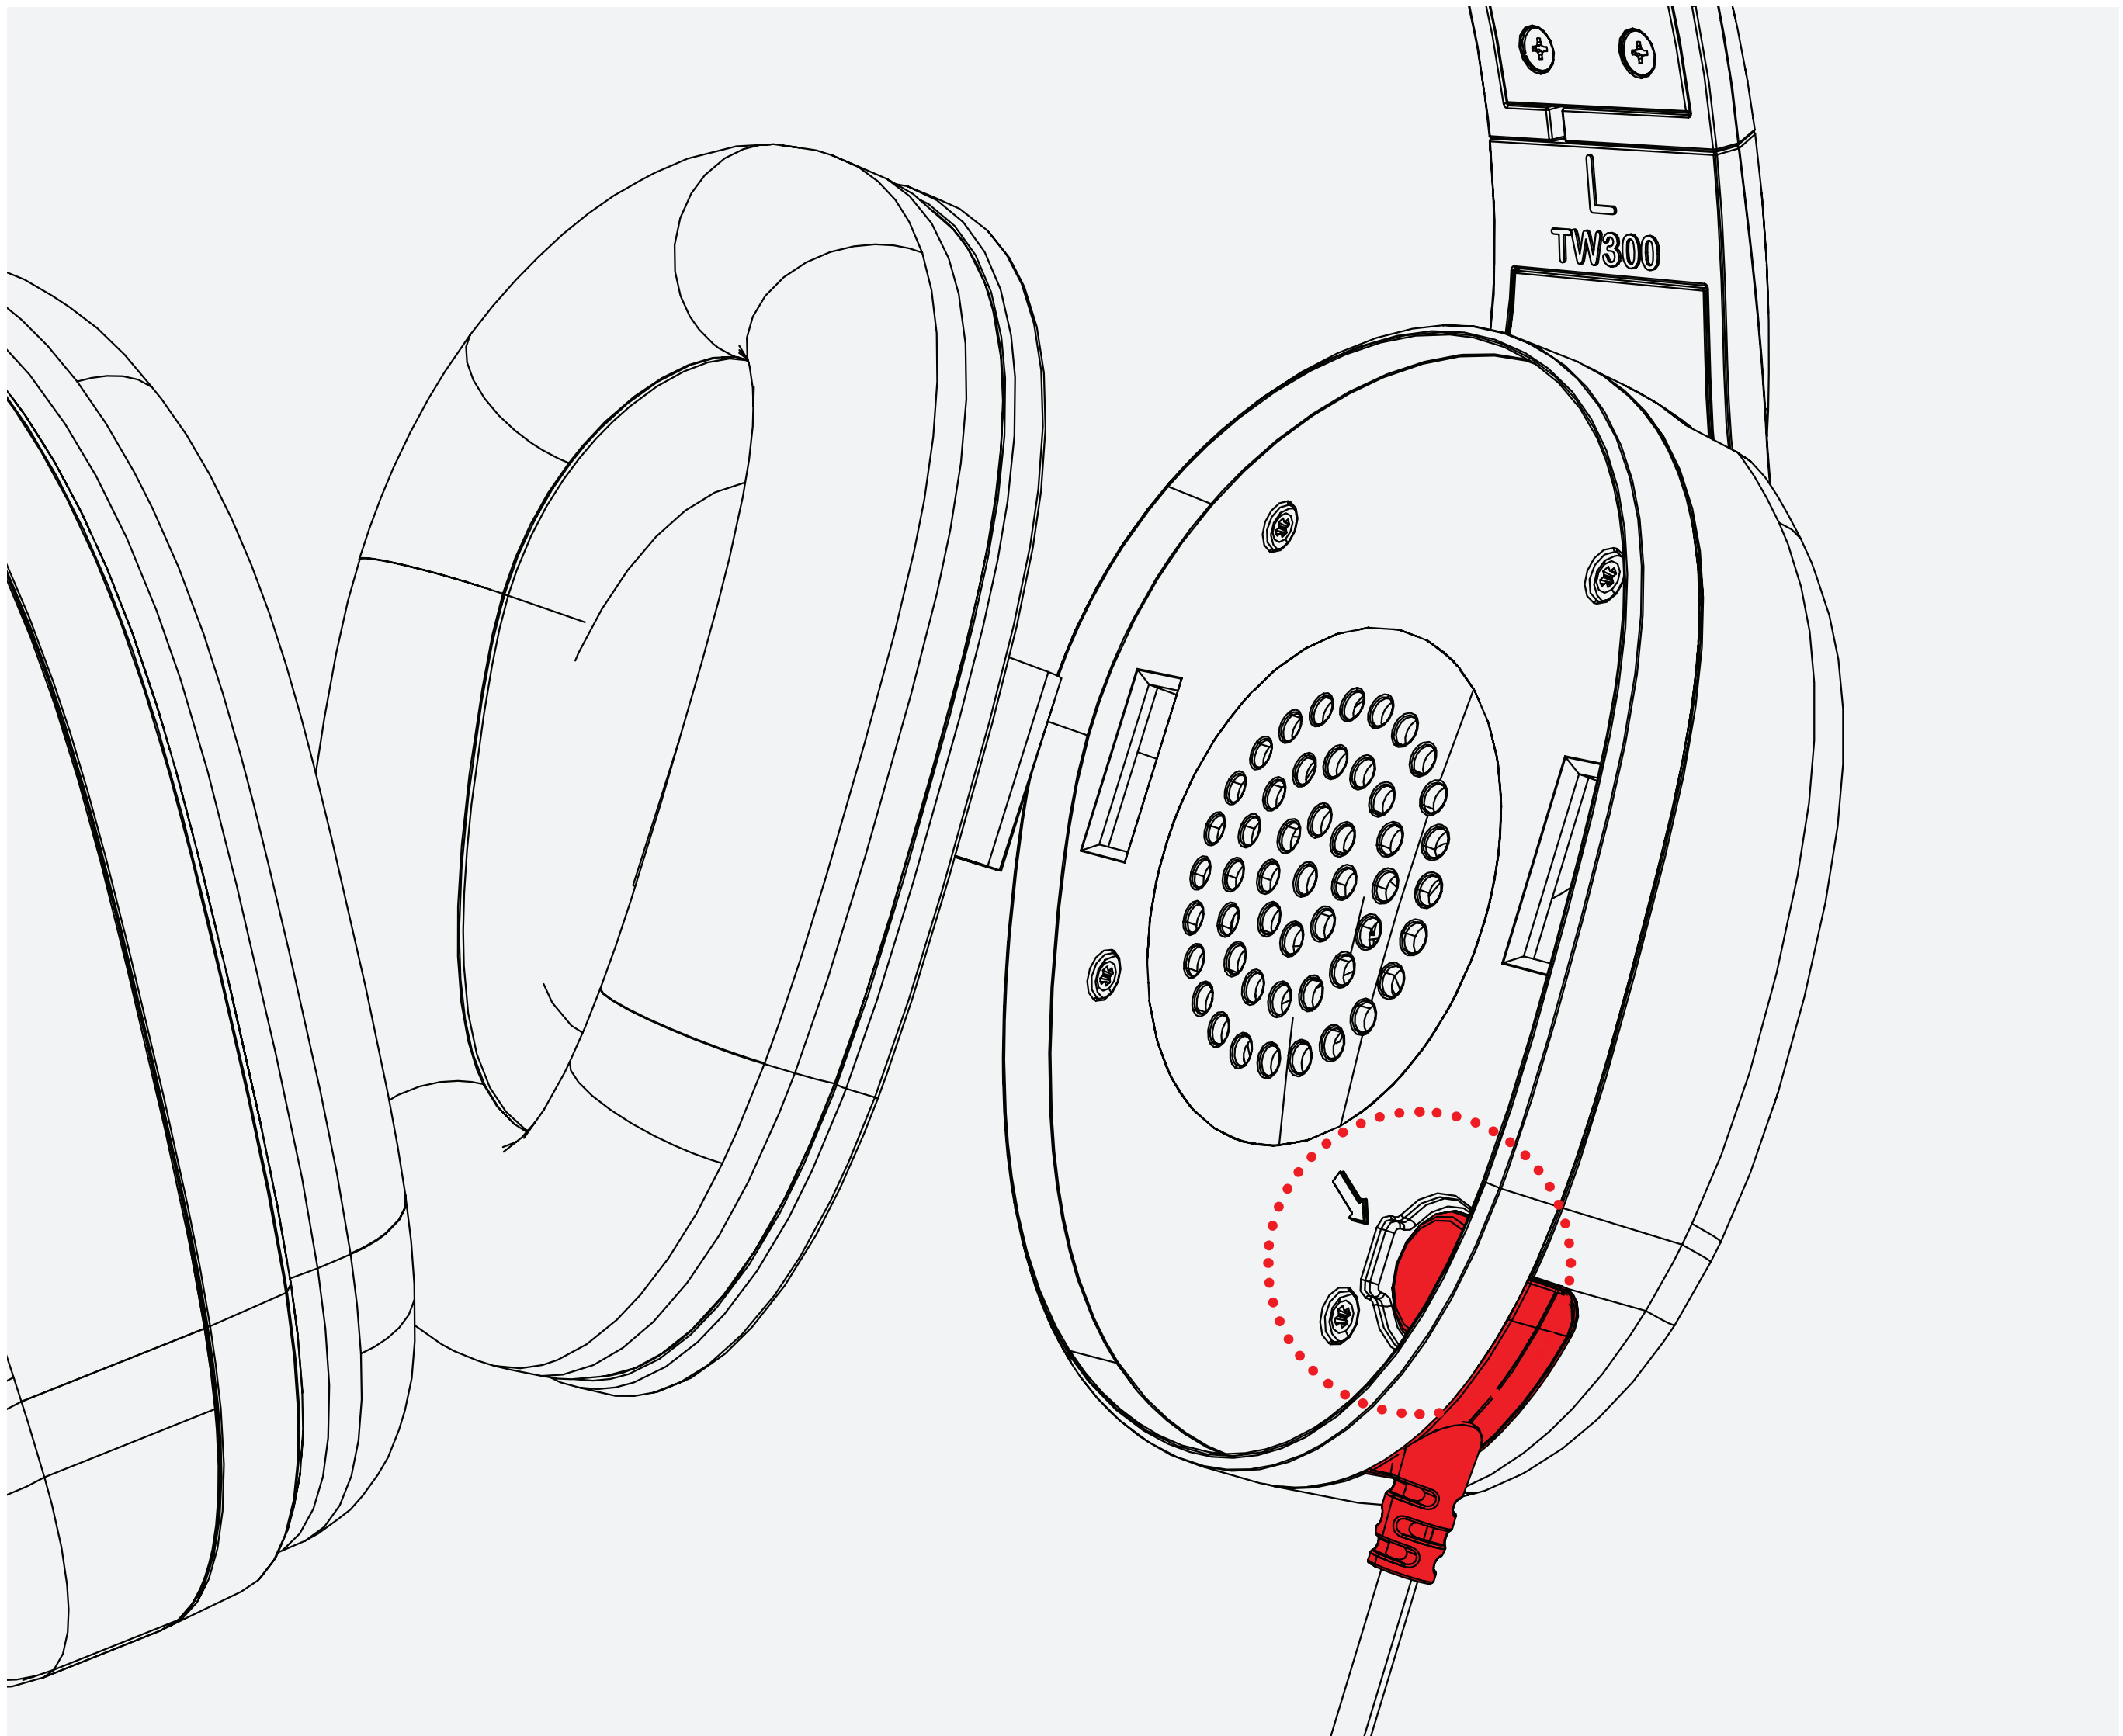


STEP 4 - Remove Cable

Pull the cable straight from the bottom.




STEP 5 - Reinstall Cable

Replace with a new cable. Be sure the cable is engaged.

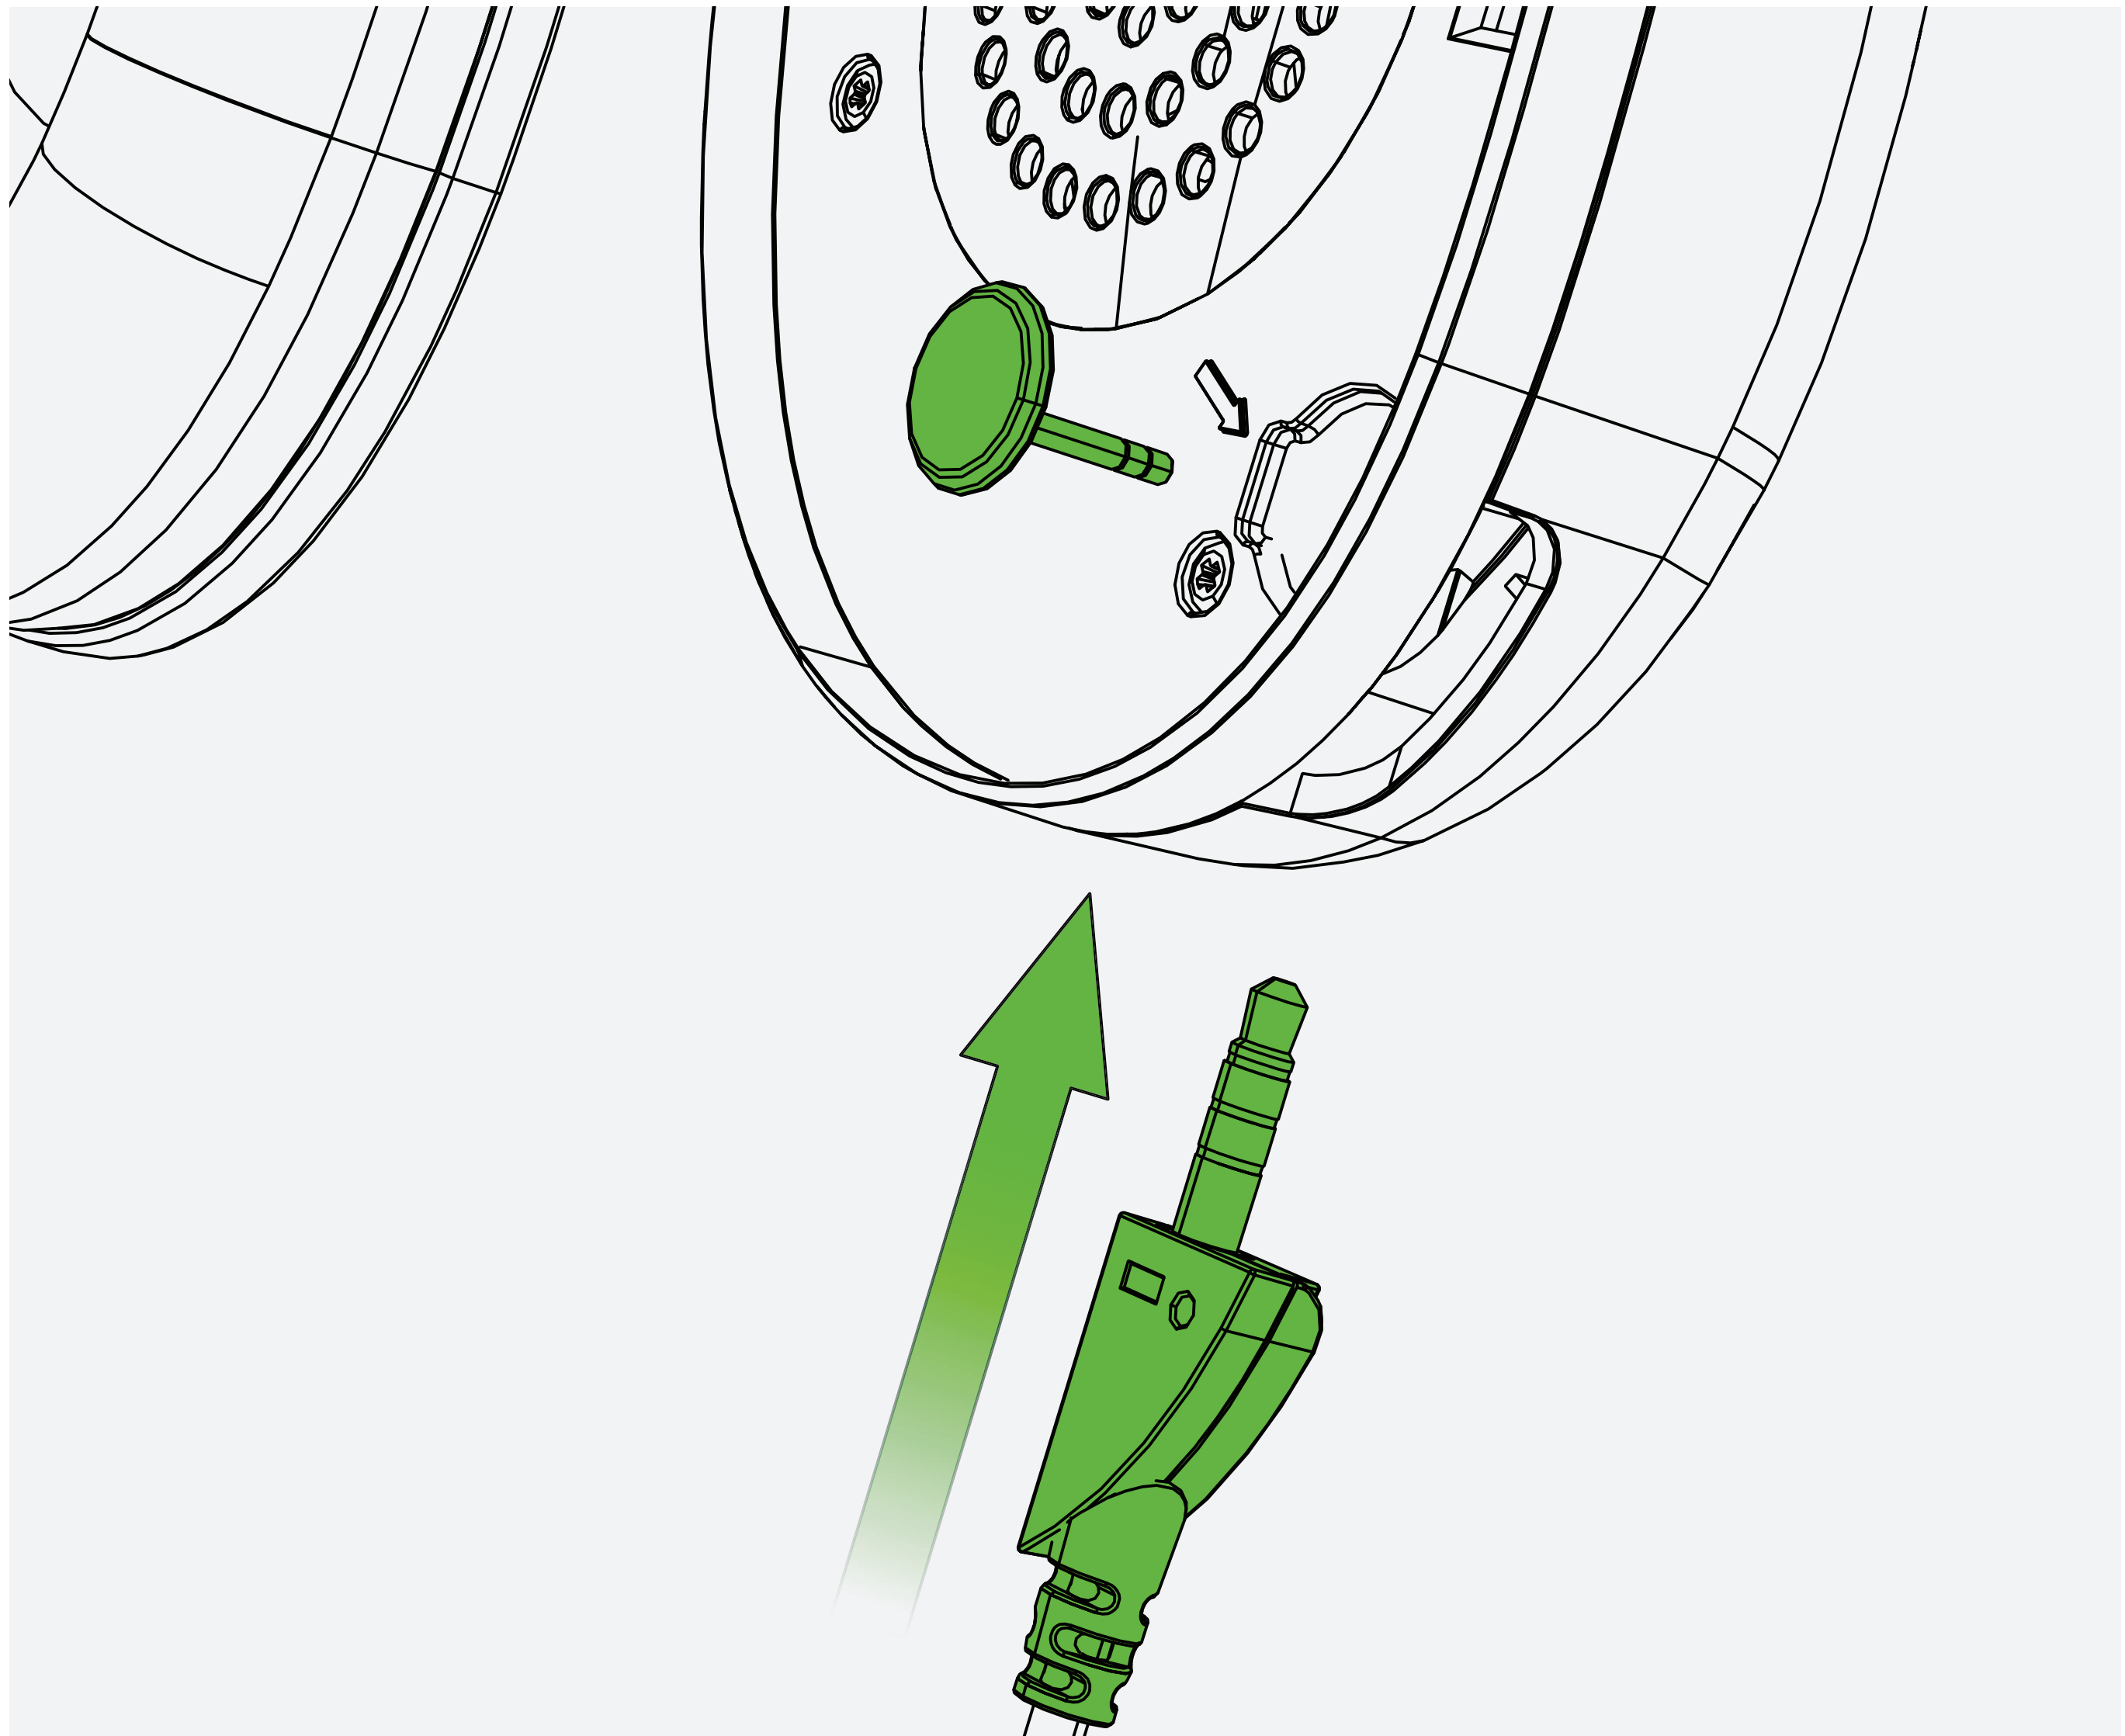

STEP 6 - Reinstall Pin or Locking Screw

Replace with a new cable. Be sure the cable is engaged.

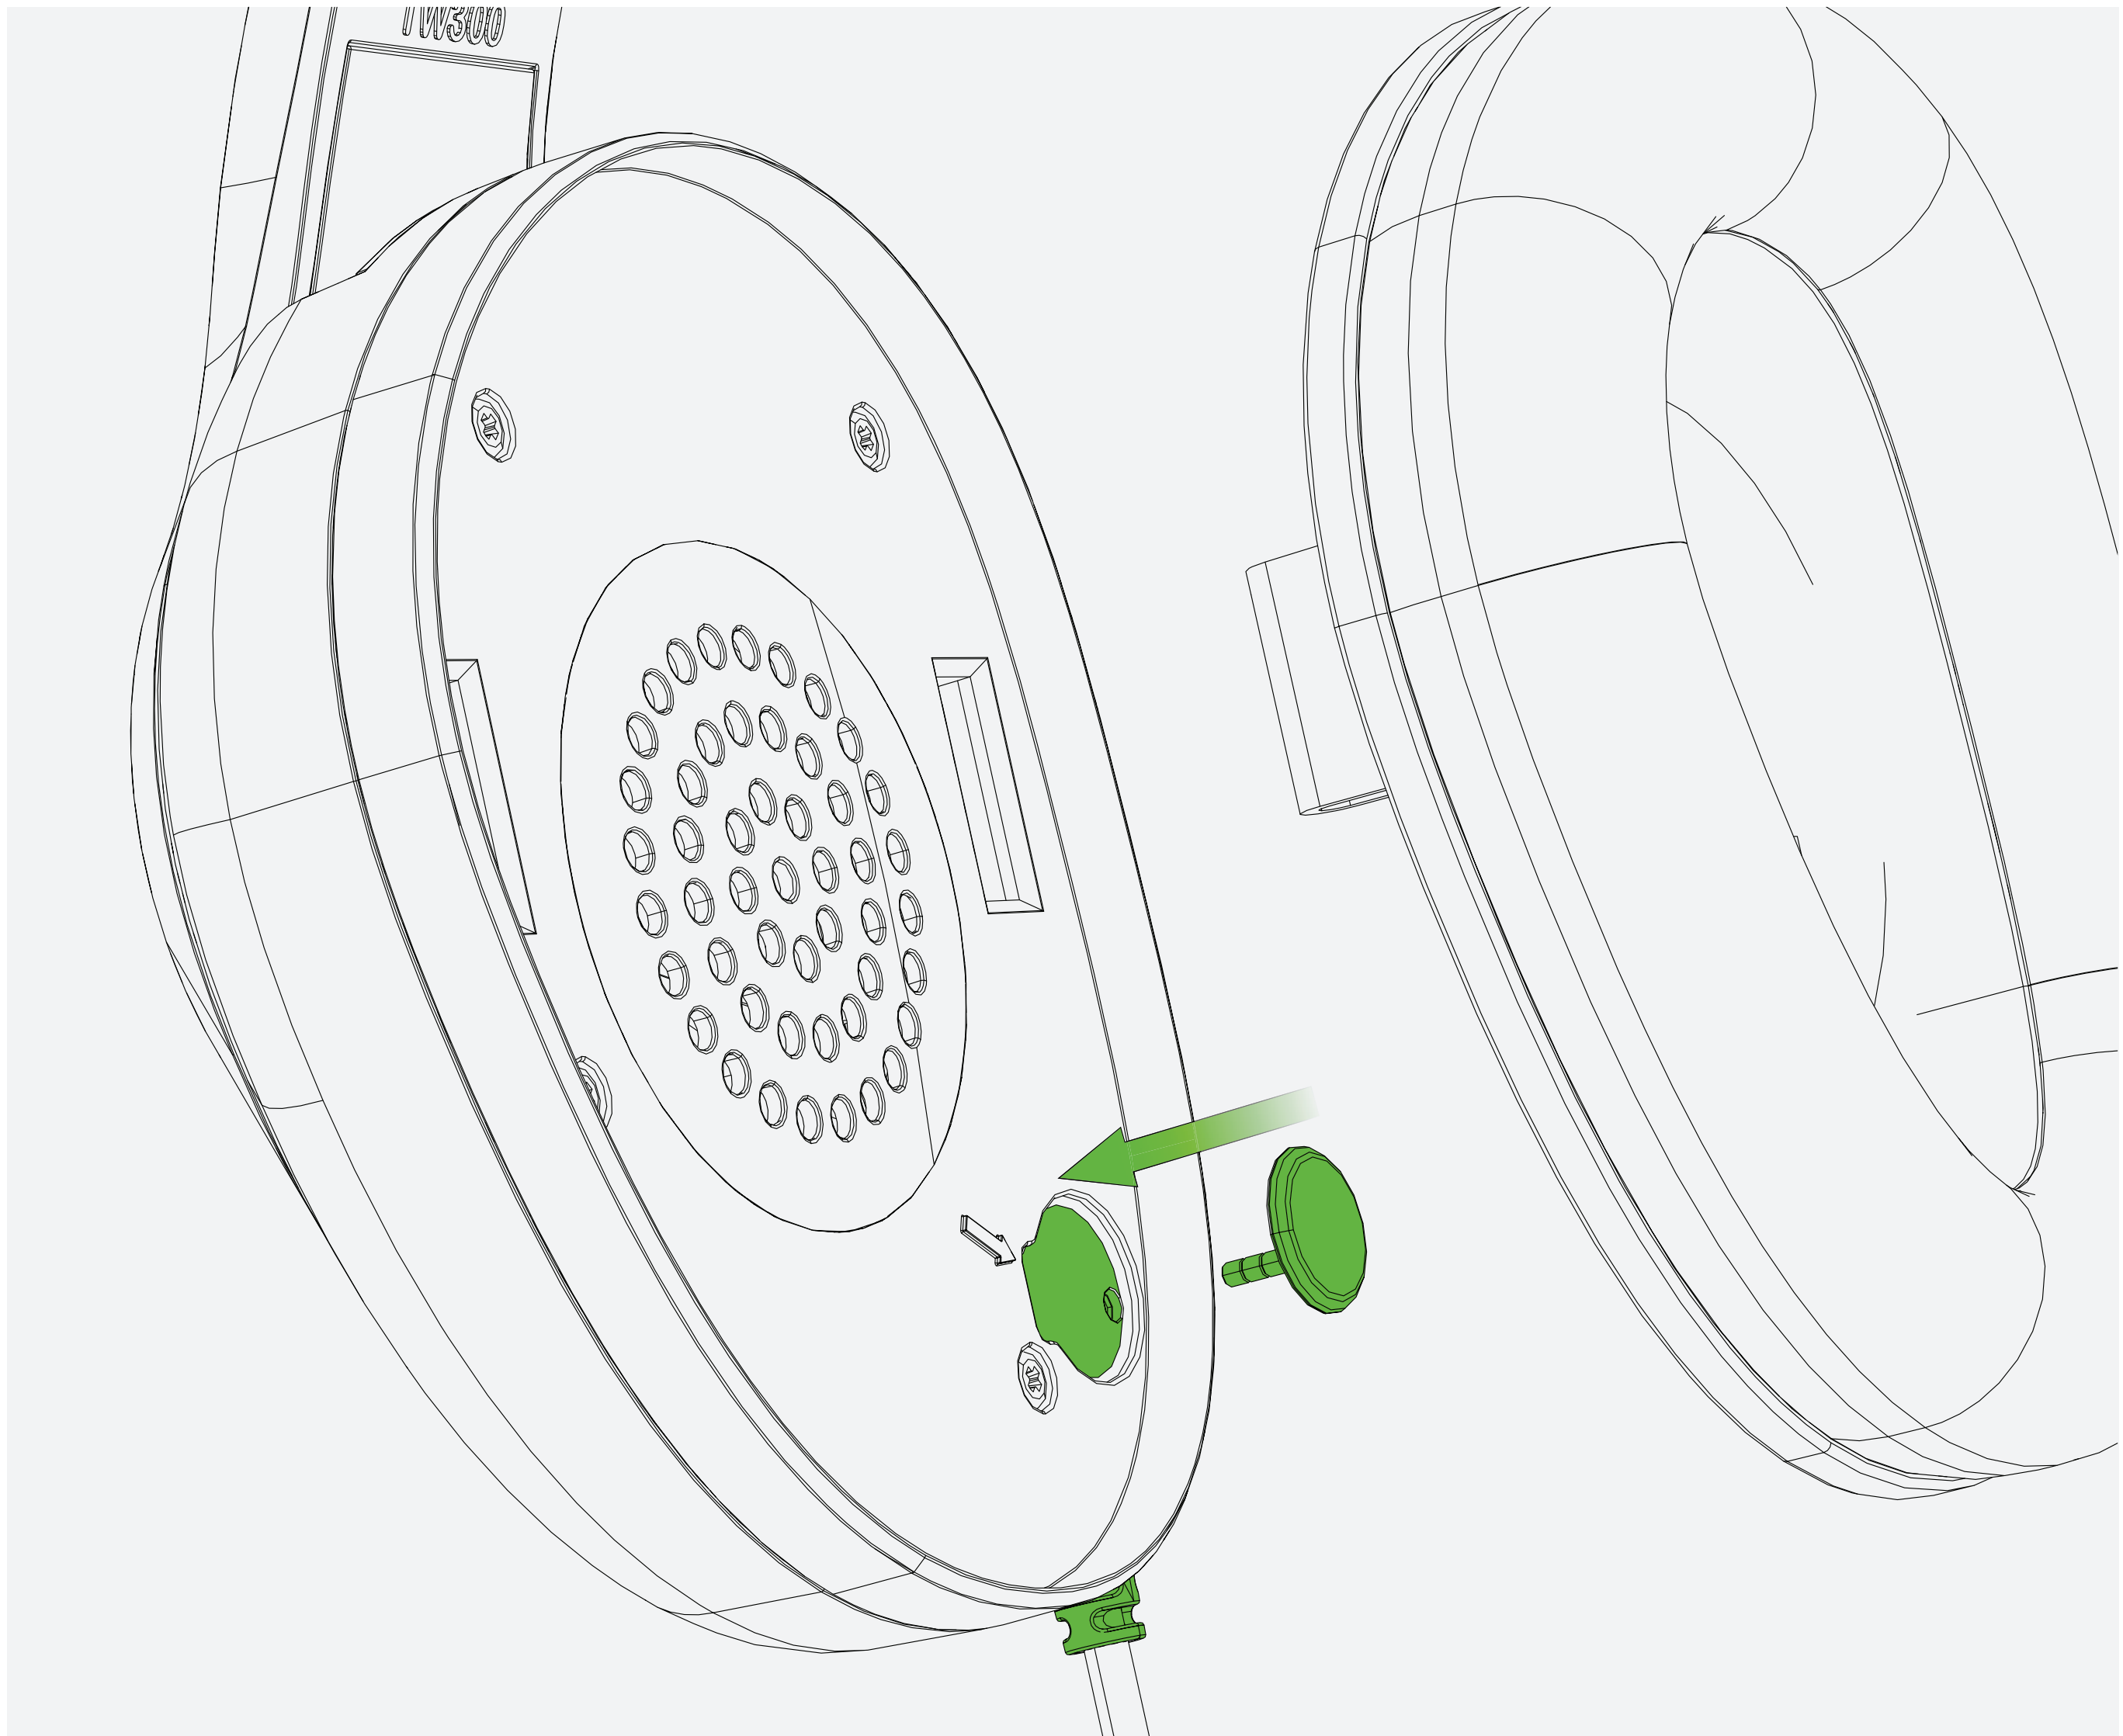

STEP7 - Reinstall Cushion

Locate ear cushion and make sure it is right side up. Apply pressure to both the tabs at 3 and 9 o'clock. The ear cushion will snap back into place

