


INSTALLATION INSTRUCTIONS

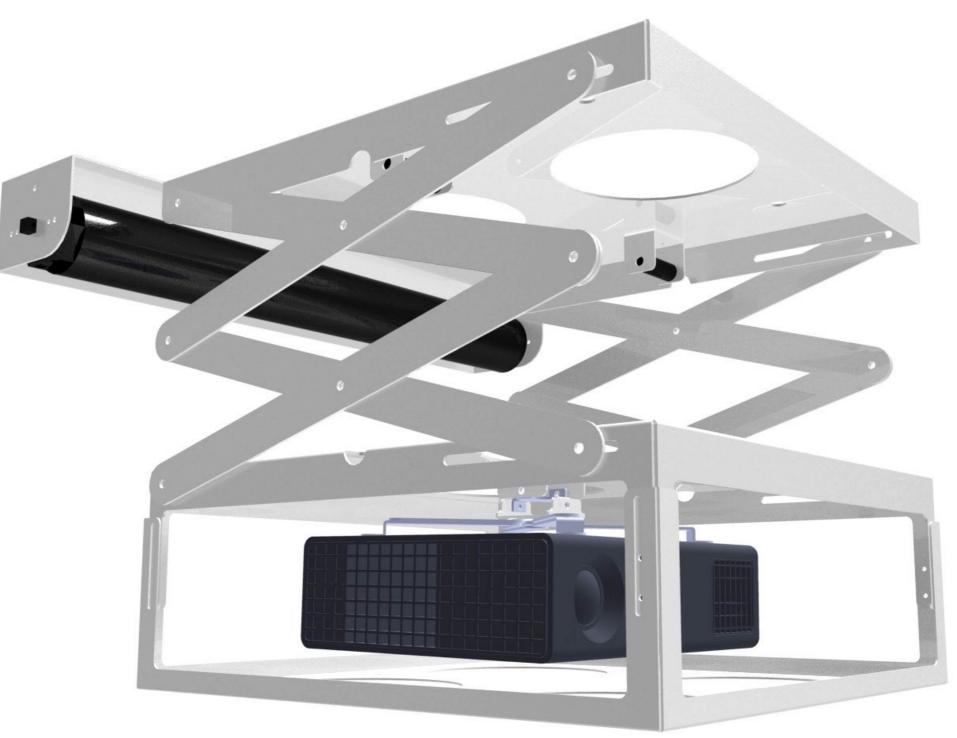

Thank you for buying iConnect products.

The PRL is the latest technology in projector lifts.

Please read this manual carefully before assembling.

PROJECTOR LIFT

PRL-60-240

CONTENTS

ICONNECT

MAIN	I.
CONTENTS	2.
SAFETY	3.
OVERVIEW	4.
LIFT PREPARATION	5-6.
LIFT INSTALLATION	7-10.
FINISHING THE CEILING LIFT	11-12 / 16-17.
ADJUSTMENTS	13-15.
FINISH	18.
DIMENSION	19.
TECHNICAL SPECIFICATION	20.




Projector lift PRL-60-240 must be installed by specialized personnel only.

Before installing the projector lift, please read the following instructions carefully

- I. The projector lift must be used indoors only.
- 2. It is forbidden to stay under the lift.
- 3. never connect more than one lift motor to the same switch.
- 4. In case of maintenance, unplug the power supply.
- 5. Incorrect use, including exceeding the maximum lifting weight, would be dangerous and invalidate the warranty.
- 6. The manufacture do not take responsibility for any damage to property or personal injury, if the lift is used out side of recommended specifications.
- 7. Incorrect servicing could lead to risk of electric shock.
- 8. For any repairing, please contact directly the dealer you purchased the unit from.
- 9. Check at least once a year that the screws of the steel cables are well tightened






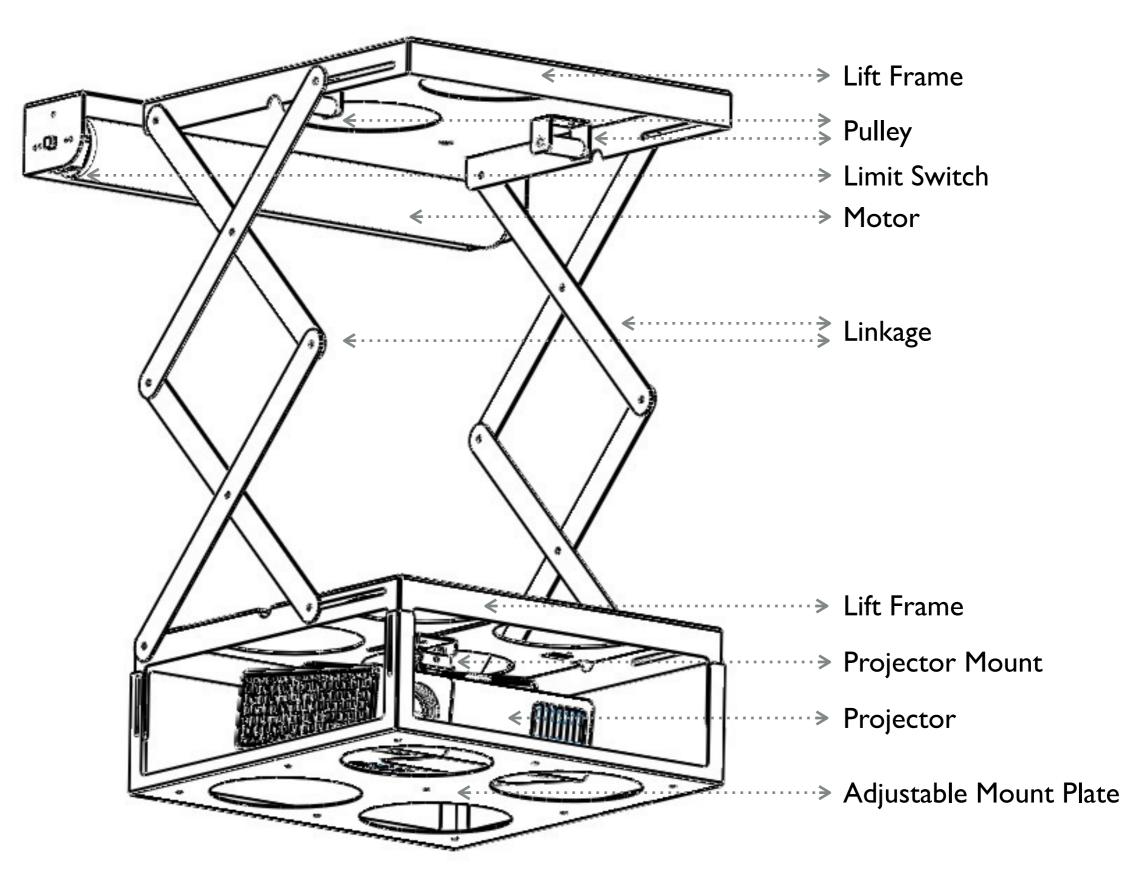




LIFT PREPARATION

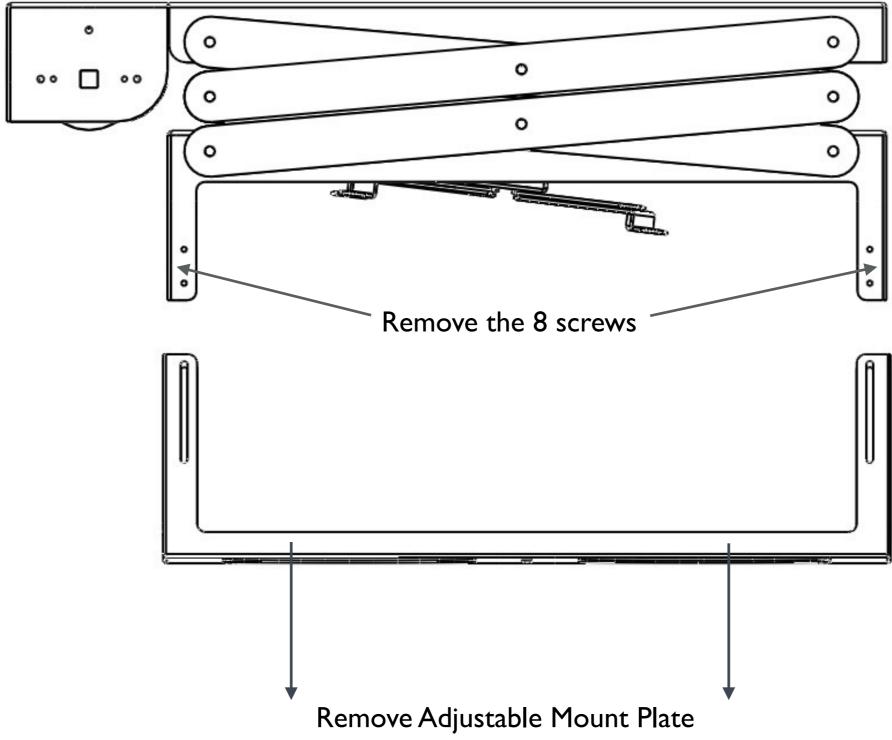





LIFT PREPARATION

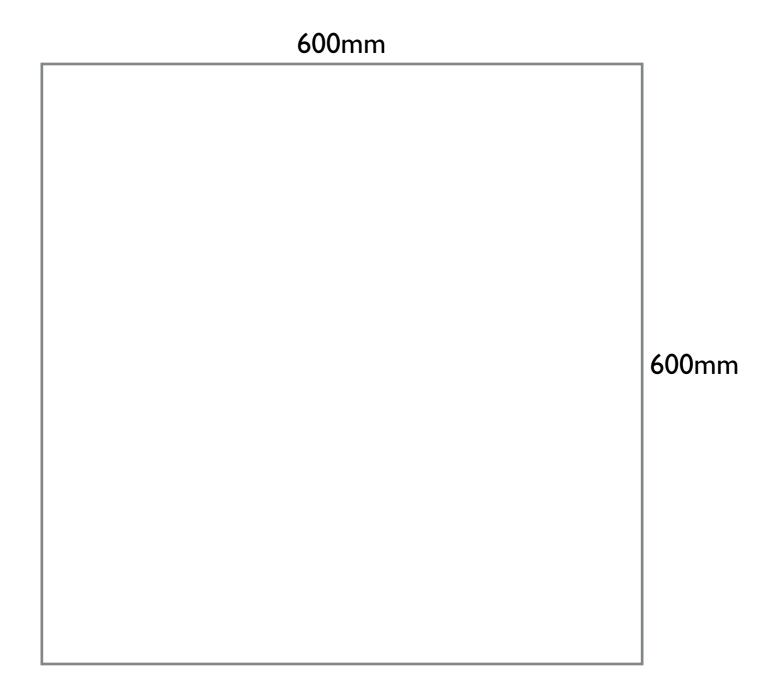


Open a hole in the ceiling

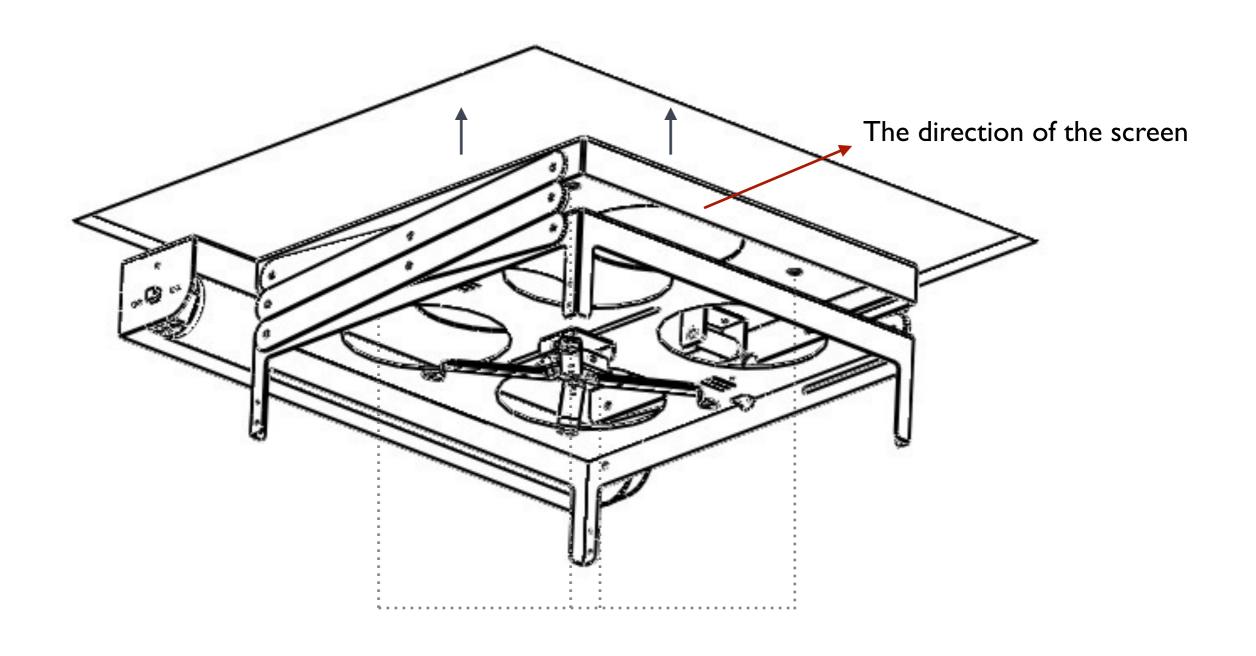



Mark and drill 4 holes in the ceiling with a diameter of 10 mm



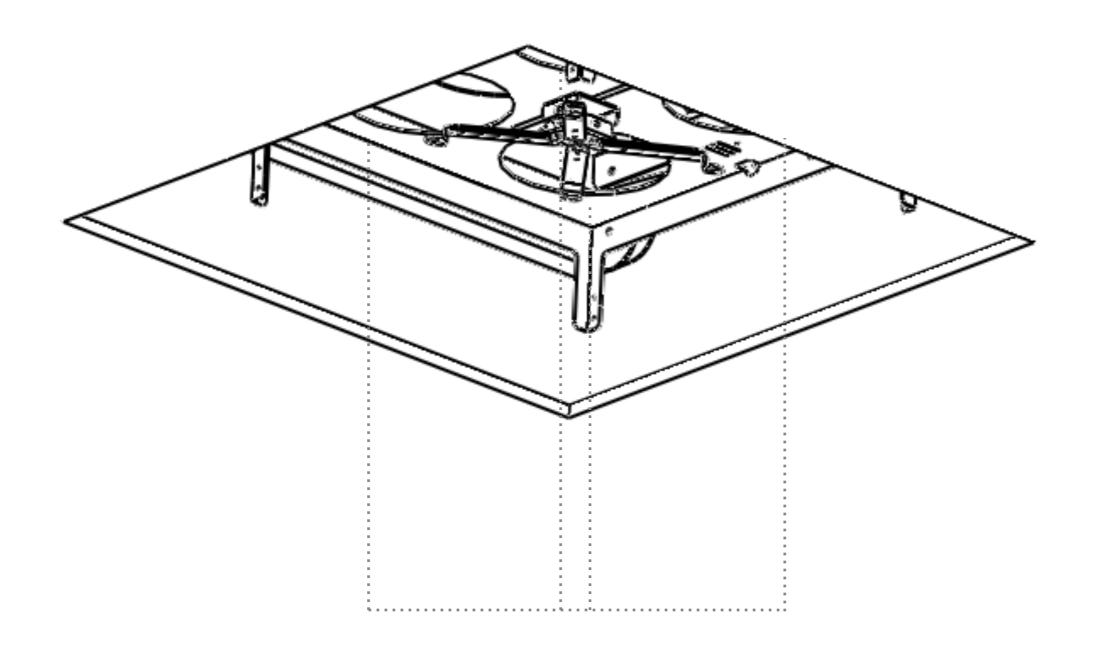




Tighten bolts through the holes designated lift and strong

Make sure you locked well



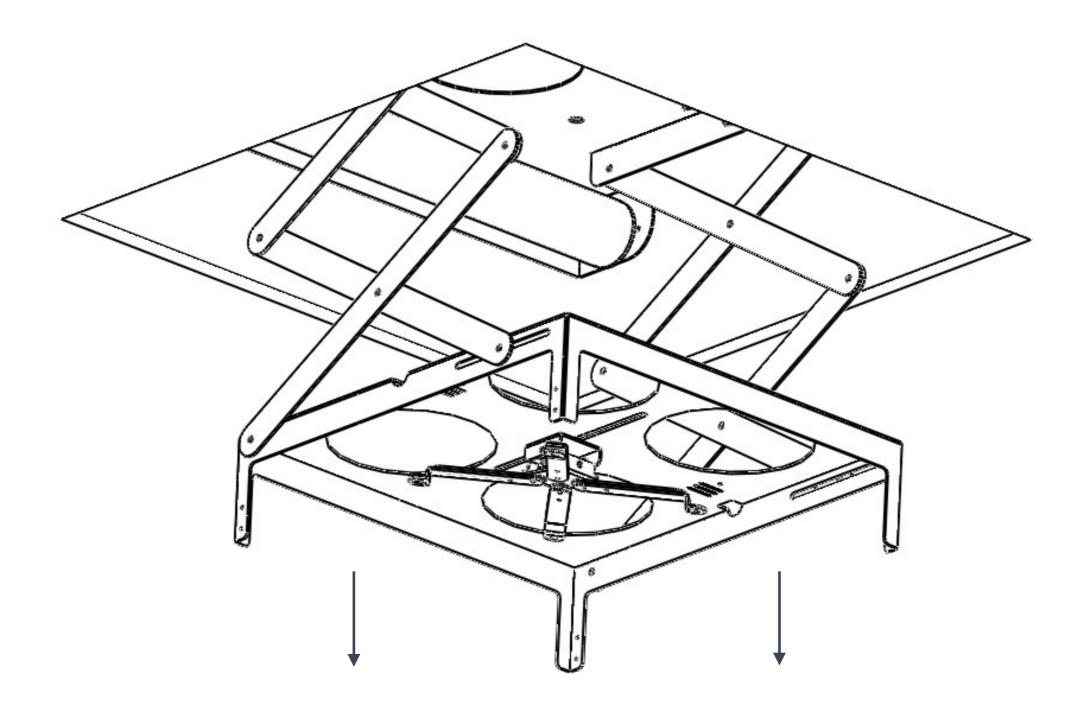


Use a power cable that came with the package. plug the male and female side motor

Connect the other end of the cable to a power source I I 0 V


Press the switch and lower the lift down




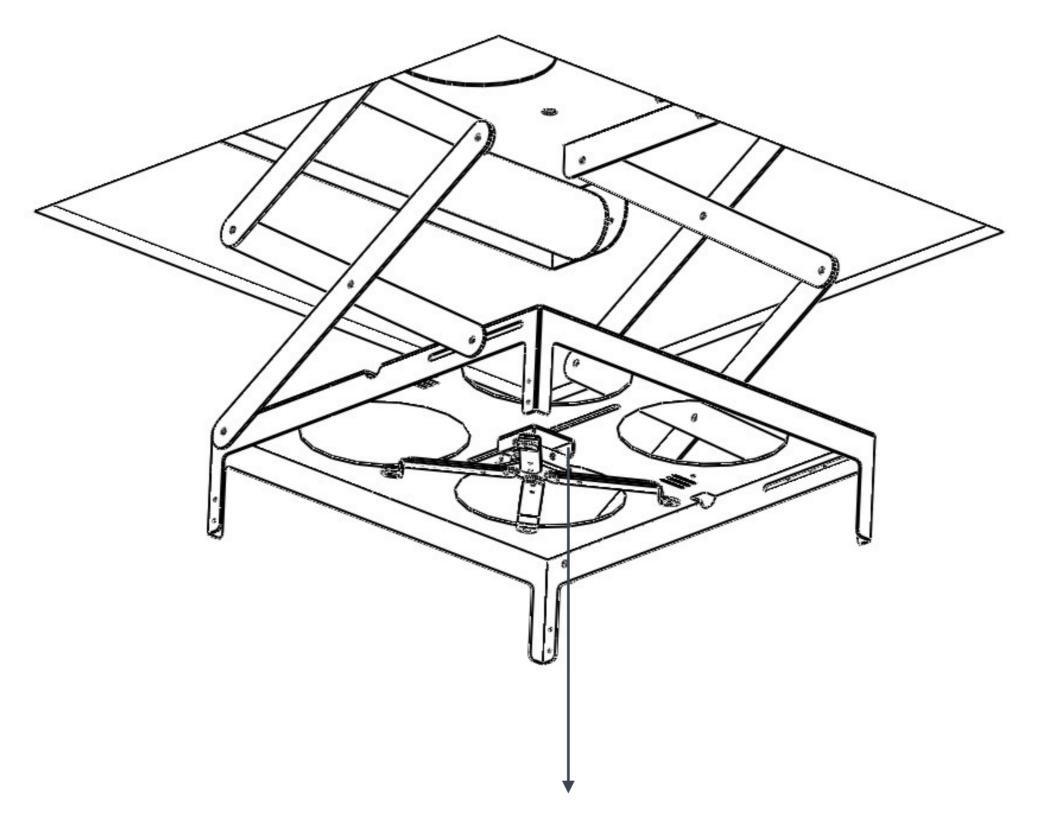

Unplug the projector arm by opening the screw at the top




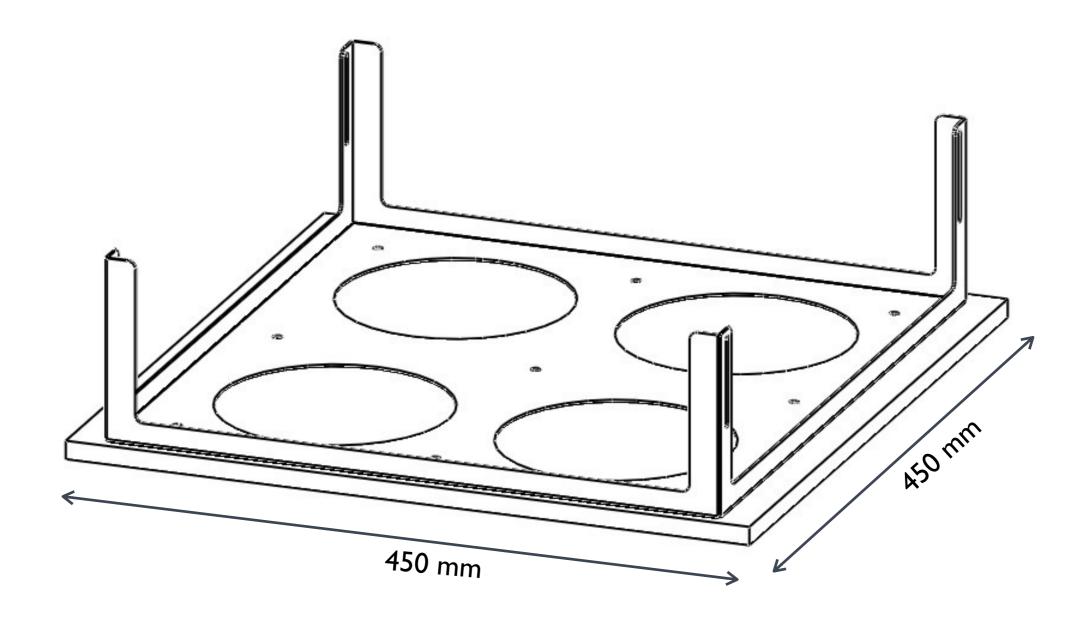




Create a wooden surface thickness of 12 mm and set it with 9 screws



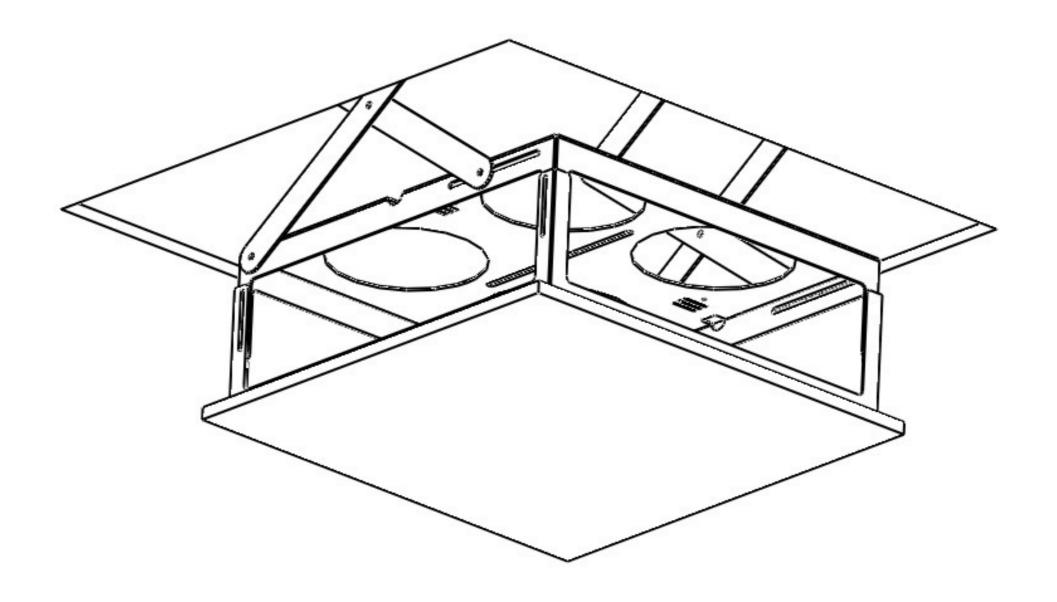




ADJUSTMENTS

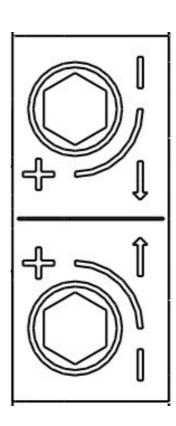


Stop and drop tuning of the lift is preformed by allen plastic screwdriver supplied only The motor two allen screws, one controls the rotation decrease and second rounds of closing ADJUSTMENTS

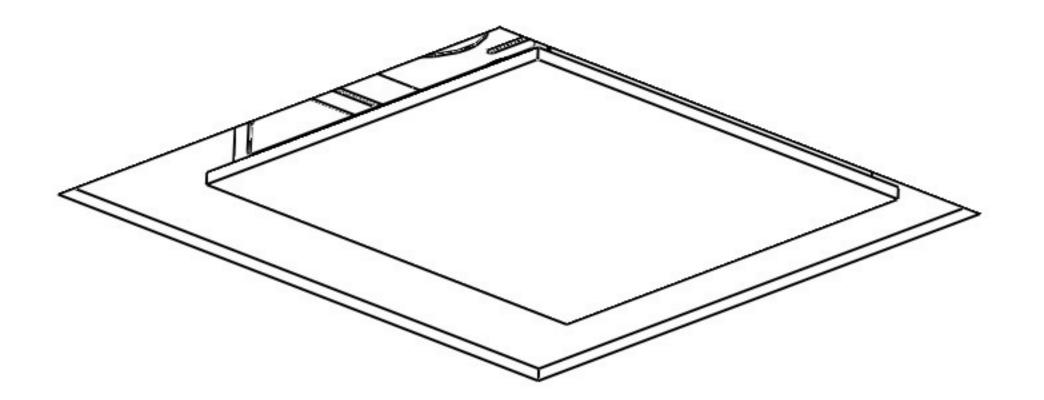




ADJUSTMENTS

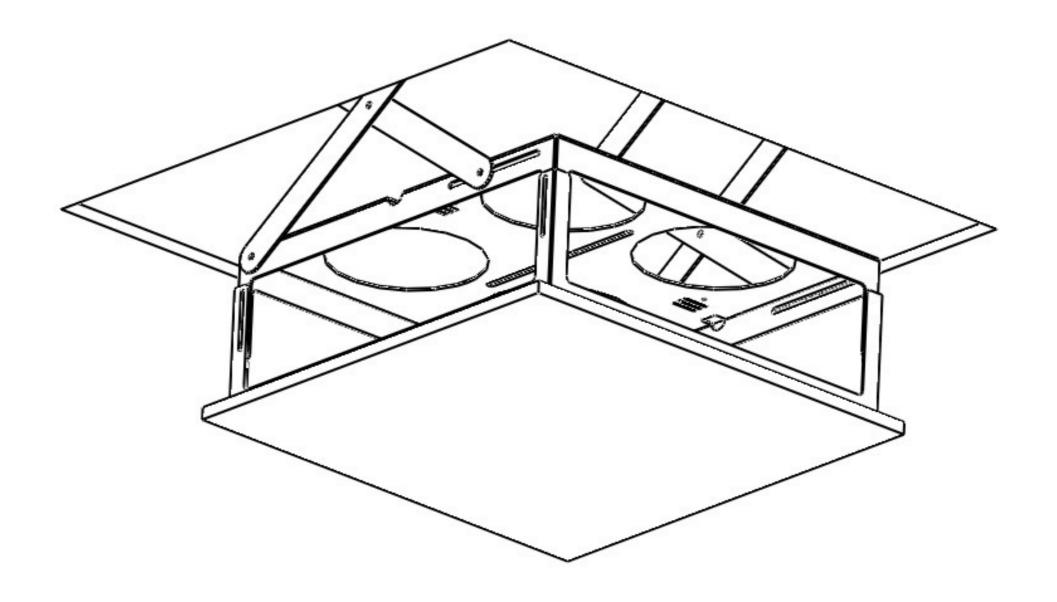






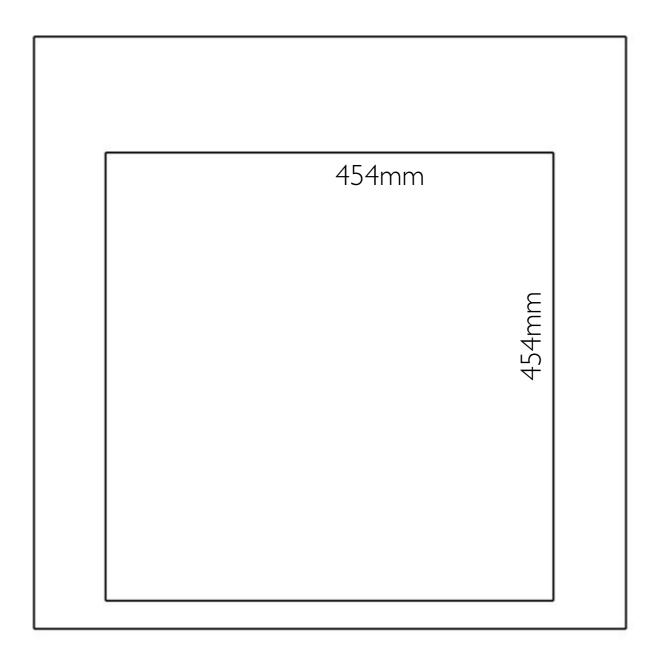

Create a wooden surface close to the desired size, please leave a margin of 2 mm on each side main square




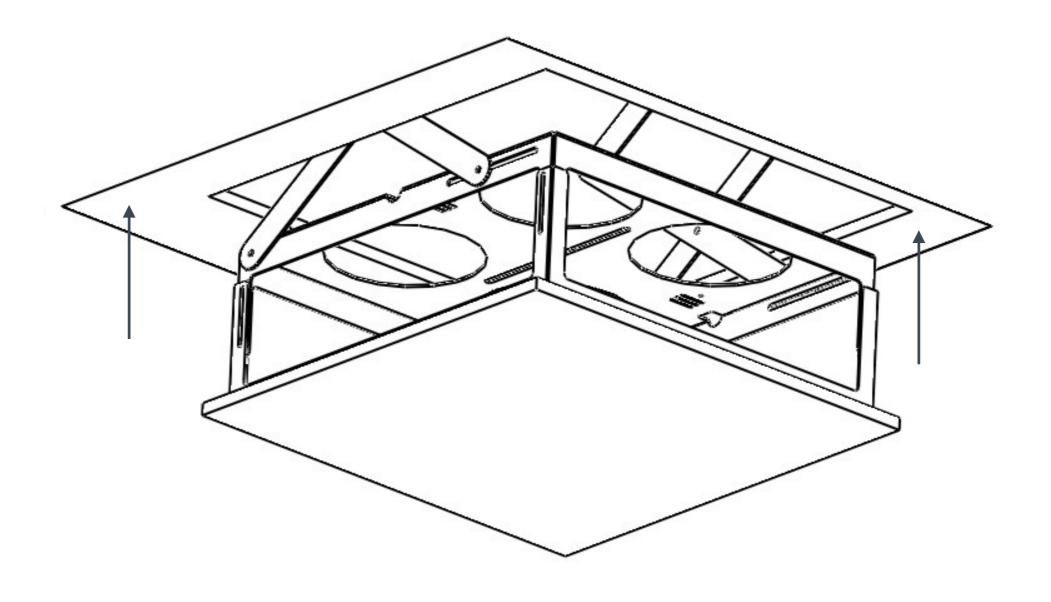

Set the wood surface with a ceiling and make sure it is installed in the desired location




FINISH

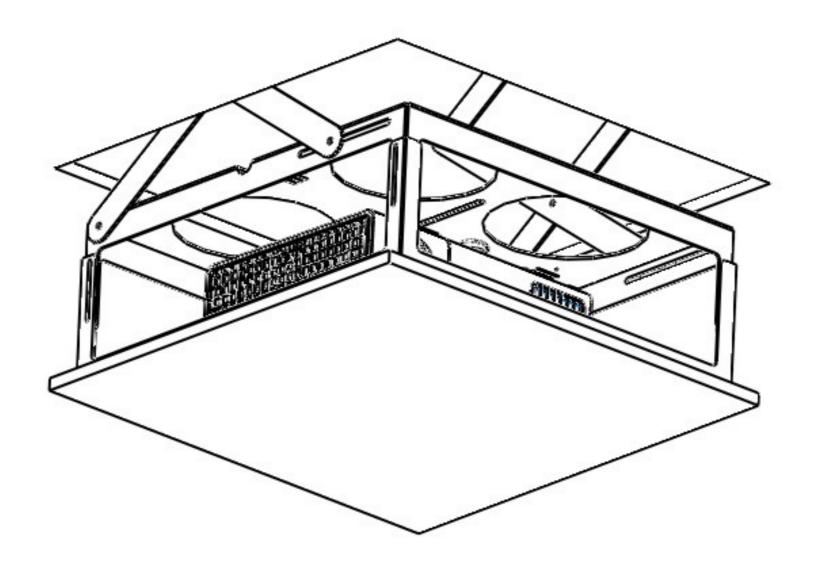


install the projector on the arm and return it to the designated place in the lift, set the projector to the desired location

Enjoy the product (-;



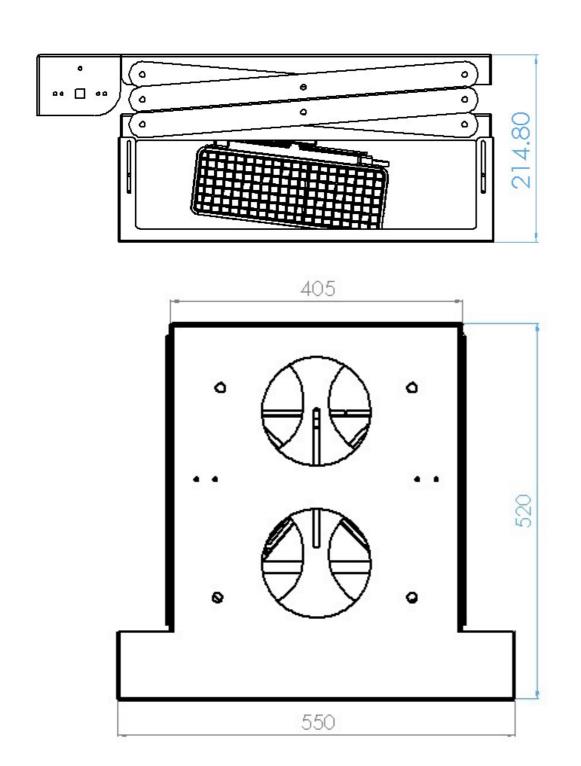

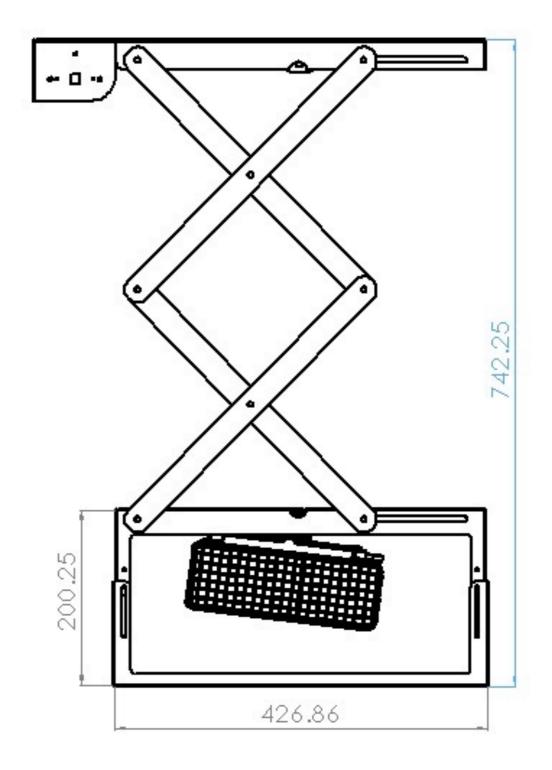





Product Code	PRL-60	PRL-120	PRL-180	PRL-240
Control Options	Contact closure / RF			
Finish / Custom	White RAL 9016	White RAL 9016	White RAL 9016	White RAL 9016
Open Travel	600 mm	1200 mm	1800 mm	2400 mm
Max Weight	I2kg	I2kg	I2kg	I2kg
Dimensions H+W+D	550 x 520 x 215 mm	550 x 520 x 255 mm	550 x 520 x 315 mm	550 x 520 x 355 mm
Weight	I0kg	llkg	l 2kg	I3kg
Power supply	Input 100-240V	Input 100-240V	Input 100-240V	Input 100-240V

