



VIBEASE®

USER MANUAL

Model No: VB21
Android™ compatible

Website: <http://www.vibease.com>

Vibease app: <http://apps.vibease.com>

Read and follow all instructions before use. Do not discard this manual.
Document Version 1.0.3 – 1 Apr 2014

Vibease Overview

Vibease is the world's first wearable smart massager. It's designed to best experience pleasure. The result is nothing short of extraordinary. Vibease team has been working extensively to develop a vibrator that can create a truly immersive sexual experience, to incite all your senses. We understand that physical stimulation alone is not enough. People often forget that the brain is the biggest sex organ. Research shows hearing, mood, emotion and fantasies play a big part in a woman's sexual pleasure and satisfaction.

Welcome and enjoy the new immersive pleasure experience.

For more information about Vibease, please visit us online at www.vibease.com

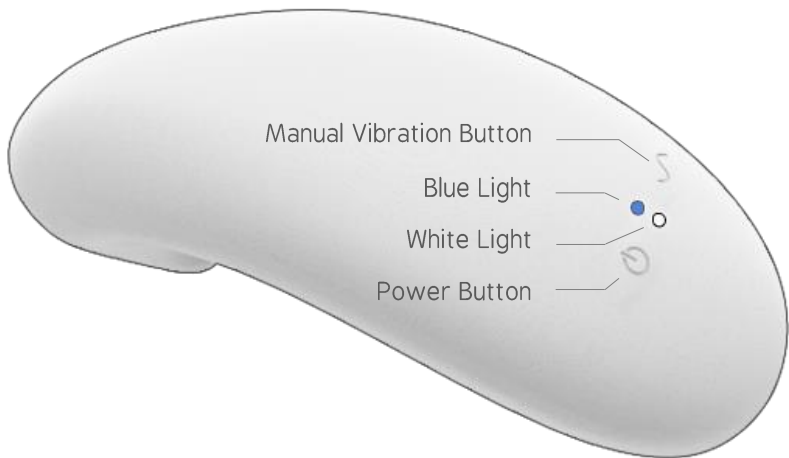


Figure 1 - Top View

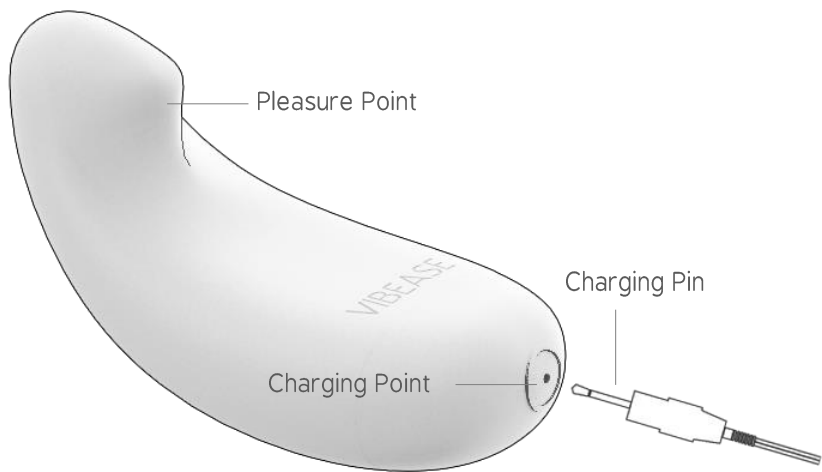


Figure 2 - Bottom View



Figure 3 - Wearable

Before Starting

Clean Vibease massager before use. We recommend cleaning Vibease massager with soap and warm water. While Vibease massager is water resistant, don't submerge Vibease massager in water. Dry it completely before use.

Charging

1. Please plug Vibease USB charging cord into your computer or mobile phone power adapter with 5v output.
2. Push the charging pin to the bottom of Vibease massager until the pin is fully inserted.
3. The white light blinks every one second to indicate the battery is charging.
4. Please let it charge for 3 hours prior to your first use.
5. For subsequent charging, it will take approximately 2 hours to fully charge the battery.
6. The blue light blinks every one second to indicate the battery is fully charged.

IMPORTANT:

For safety issue, all the vibration functions are turned off automatically during charging.

Getting Started

1. To turn on Vibease massager, “Press and Hold” the button for two seconds
2. Press the Vibrations button to change within 5 modes of vibration. This function is not available when the vibrator is connected to the app or during charging.

NOTE: Manual vibration function is temporarily deactivated when Vibease massager is connected through Bluetooth.

3. To turn off Vibease massager, “Press and Hold” the power button for two seconds.

Download Vibease app

Download Vibease android apps from here

<http://apps.vibease.com>

Pairing up Vibease with Android phone for the first time

1. Download Vibease android app
2. Open Vibease app
3. Go to Device tab
4. Press the “Setup” button.
5. Make sure Vibease massager is turned off.
6. On the Vibease massager, Press and Hold the power button for 5 seconds. Don't release the power button before 5 seconds even when the lights are blinking.
7. You should see the blue light turned on for 3 seconds. Vibease massager is now discoverable.

8. Press "Next" button
9. Press "Start Pairing" button
10. The pairing process takes 30 to 120 seconds to complete the setup.
11. The app will prompt you when Vibease massager has been successfully paired.
12. You will see the blue light is turned on to indicate the successful Bluetooth connection.
13. You only need to do the Setup one time. For the subsequent use, you can press the device name from the app to connect.

Setup FAQs

Q: There is no light coming out from Vibease massager

A: Please charge Vibease massager for at least 30 minutes

Q: The blue light is blinking but it doesn't stay turned on for 3 seconds.

A: Turn off Vibease Massager. Please press and hold the power button for 5 seconds. Don't release the power button before 5 seconds even when the lights are blinking.

Care and Maintenance

Always wash Vibease massager before and after use. Ensure it's completely dry before storage.

Store Vibease massager in a cool and dry place.

IMPORTANT SAFETY INFORMATION

READ AND FOLLOW ALL INSTRUCTIONS BEFORE USE. DO NOT DISCARD THESE INSTRUCTIONS.

WARNING! WHEN USING ELECTRICAL PRODUCTS BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED.

Use the product only for its intended purpose as described in this Manual. Use common sense and caution when using the product

DANGER

In order to reduce risk of electric shock.

This product is equipped with a USB + mini jack cable for connecting to computer or to charger.

- DO NOT charge near water or any other liquid
- DO NOT attempt to charge if the product is wet or charger is wet or cord is wet or your hands are wet
- DO NOT use charger or cord or power outlet that appears damaged
- DO NOT touch the metal parts of the cord
- DO NOT use the product whilst it is charging
- DO NOT charge outdoor
- DO NOT use the USB + mini jack cable for other than charging this product
- DO NOT operate or charge the product where aerosol product are being used, or where oxygen is being administered

- ALWAYS be sure your computer is properly grounded before connecting your product to the computer.
- ALWAYS use charger with output 5V === 500mA
- ALWAYS use charger comes with UL certification or Safety mark
- ALWAYS plug charger into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING

To reduce the risk of burns, electrocution, fire or injury

- Always unplug the product when it's fully charged
- Always unplug the product before cleaning
- Always clean the product before and after use
- Do not submerge the product in water
- Do not drop, strike or shake the product
- Do not use attachments not recommended by the product manufacturer
- Do not put the product in the dishwasher or microwave
- Do not expose or dispose the product in a fire
- Do not expose product to extreme heat or cold
- Do not expose product under direct sunlight
- Do not open or dismantle the product
- Do not massage any single are for more than 15 minutes at a time.
- Do not let the product vibrates for more than 45 minutes at a time.
- Do not wear the product for more than 45 minutes at a time
- Do not use the product during indoor and outdoor activities
- Do not use the product on neck and skull areas

- Keep the product out of the reach of children

This product is sold as a novelty only. No medical claim are warranted or implied by the use of this product. To avoid injury or aggravation of pre-existing conditions this product should not be used on swollen, broken, inflamed areas or skin lacerations. In cases of pregnancy, diabetes or illness, consult your physician before use. Do not use the product if you experience any discomfort or pain, during or after use. If you have any health concerns, consult your physician before using this product.

DISCLAIMER

Users of this product use the products at his/her own risk. Neither Vibease nor its retailer assumes any responsibility or liability associated with the use of this product.

Lithium-polymer battery information

This product contains a lithium-polymer battery. The product and battery must be disposed of properly. Contact your local waste management office for information on battery recycling or disposal. Do not dispose the product and the battery as the household waste. Do not dispose the batteries into a fire as they may explode. Batteries may also explode if damaged or punctured.



This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment. For further information, please contact your local or regional authorities.



Contains FCC ID: OC3BM1842

Designed and developed by Vibease in California and Singapore.
Assemble in China.

©2014 Vibease Pte. Ltd. All Right Reserved. Vibease (name and logo) are trademarks of and / or registered trademarks of Vibease Pte. Ltd. in the U.S. and other countries. US and international Patent Pending. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. Android™ and Google Play are trademarks of Google Inc. registered in the U.S. and other countries. Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries.