

Owner's Manual



DIGITAL COIN COUNTER



DCB-275D

Thank you for purchasing the Royal Sovereign Digital Coin Counter, DCB-275D. This manual will provide you with safety information, instructions for optimal use, and proper care and maintenance for your product. Please read this manual carefully before operating.

CONTENTS

SAFETY INSTRUCTIONS	2
BOX CONTENTS	3
PRODUCT VIEW	3
QUICK START GUIDE	4
PRODUCT OPERATION	5
COIN TUBE QUANTITY	5
COIN WRAPPER AVAILABILITY	6
SPECIFICATIONS	6
WARRANTY	7

SAFETY INSTRUCTIONS

When using this machine follow these safety precautions to reduce risk of fire, electric shock, or injury.

CAUTION

1. Do not operate the machine for any purpose other than its intended use.
2. When using the machine, place it on a sturdy and level work place.
3. Do not allow any other materials to enter except coins.
4. Do not alter the construction or design.
5. Do not operate the machine if the electrical plug or power cord is damaged.
6. Do not alter the electric plug in anyway.
7. The machine should be placed near the electrical outlet so that the outlet is easily accessible.
8. Do not immerse the machine in water or permit liquid to get inside the machine.
9. Turn off the power when unattended or not in use. Unplug the machine before moving it or when it is not in use for an extended period of time.

Read & Fully Understand This Owner's Manual Before Using This Machine.

BOX CONTENTS



Coin Counter




Coin Tubes



Adapter


PRODUCT VIEW

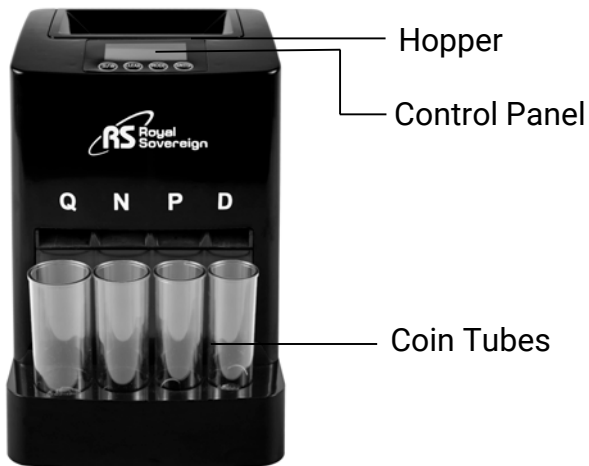

Hopper

Control Panel

Coin Tubes

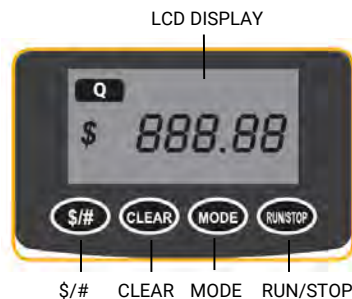

LCD DISPLAY

\$/#

CLEAR

MODE

RUN/STOP

QUICK START GUIDE

1. Plug the pronged end of the adapter cord into the adapter plug on the side of the unit. Plug the adapter into a standard wall unit.
2. Insert preformed coin wrappers (sold separately) into the corresponding tubes (A).
3. Press the “RUN/STOP” button to start coin counting (B)
4. Place loose change into the hopper (C).



A



B



C

For More Detailed Instructions, Go To Page 5

PRODUCT OPERATION

1. Place the machine on a level work surface.
2. Plug the pronged end of the adapter cord into the adapter plug on the side of the unit. Plug the adapter into a standard wall unit.
3. Insert preformed coin wrappers (sold separately) into the corresponding coin tubes.
4. Press the "RUN/STOP" button to start the machine.
5. Gradually insert coins into the coin hopper. Coins will begin to sort into the corresponding coin tubes.
6. Press the "\$/#" button to switch between total dollar amount or individual coin count view. Press the "MODE" button at any time to switch between Quarters, Pennies, Nickels, and Dimes.
7. When a coin tube is full, the machine will stop temporarily. To remove filled wrappers, pull up on the exposed edge of the plastic tube and remove. Then, push the coin wrapper up from the bottom of the tube and fold the edges of the wrapper.
8. Place a new wrapper into the coin tube and return the tube back in place.
9. Press the "RUN/STOP" button to reset the data for the tube that was full. Press the "RUN/STOP" button again to restart the machine.
10. After sorting is finished, press the "RUN/STOP" button to stop the machine. Press the "CLEAR" button to reset the display.

COIN TUBE QUANTITY

COIN	QUANTITY	DOLLAR AMOUNT
Pennies	50	\$0.50
Nickels	40	\$2.00
Dimes	50	\$5.00
Quarters	40	\$10.00

COIN WRAPPER AVAILABILITY

Royal Sovereign offers a wide variety of coin wrappers to suit your coin sorting needs. Royal Sovereign coin wrappers come in sizes of 112, 504, and 1,008. Within each size, Royal Sovereign offers packs that are assorted and by denomination (Quarter, Penny, Nickel, and Dime). Royal Sovereign coin wrappers come preformed and crimped on one end to provide easy and hassle free coin wrapping.



SPECIFICATIONS

MODEL	DCB-275D
Dimensions	5.70" W x 5.90" D x 8.20" H
Speed	120 Coins per Minute
Motor Type	DC Motor
Power Consumption	3W
Power Supply	100-240V 50/60HZ Adapter
Weight	1.35 lbs.

ONE YEAR LIMITED WARRANTY

Royal Sovereign International, Inc. warrants this product to be free from defects in material and workmanship for a period of one (1) year. This warranty is extended to the original purchaser only.

This warranty only covers products that are properly installed, properly maintained, and properly operated in accordance with the instructions provided. This limited warranty does not cover any failures or operating difficulties due to normal wear and tear, accident, abuse, misuse, alteration, misapplication, improper installation, or improper maintenance and service by you or any third party.

Returned product will not be accepted without a Return Authorization number. To request a Return Authorization number, please visit us at www.royalsovereign.com. All transportation costs for the return of damaged product or parts will be the responsibility of the purchaser. Return defective product, in original packaging, to the address below.

Royal Sovereign International, Inc. requires reasonable proof of your date of purchase from an authorized retailer or distributor. Therefore, you should keep your receipt, invoice, or canceled check from the original purchase. The limited warranty shall be limited to the repair or replacement of parts which prove defective under normal use and service within the warranty period.

Royal Sovereign International, Inc. (and its affiliated companies) SHALL HAVE NO LIABILITY WHATSOEVER TO PURCHASER OR ANY THIRD PARTY FOR ANY SPECIAL, INDIRECT, PUNITIVE, INCIDENTAL, OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages so the above exclusion and limitations may not apply to you.

ROYAL SOVEREIGN INTERNATIONAL, INC.

2 Volvo Dr., Rockleigh, NJ 07647 USA

TEL: +1) 800-397-1025

Email: info@royalsovereign.com