VOICE CADDIE

L5

User Manual




(V-Algorithm, Slope & Tournament Mode, Vibration Alert Feature, Scan Mode)

▶ Components



- 1. Laser Light-Receiving Area / Objective Lens
- 2, Laser Light-Emitting Area
- 3. Mode Button
- 4. Power/ Measurement Button
- 5. Ocular Eyepiece and Focus Control Area
- 6. Battery Insert
- Components: Main Body, Dedicated Pouch, CR-2 Battery, Operation Manual, Microfiber Cloth

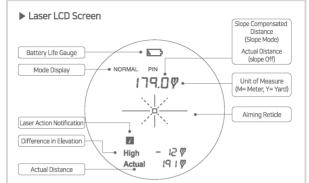

- If battery replacement is required, icon is displayed in the laser LCD window.
- * If the ____icon is present, the device may not be activated and power may be turned off.
 - ※ In Tournament Mode, the slope compensated distance is removed and only the actual distance is displayed

1. Power On

After inserting the battery, press the power button (\circlearrowleft) to turn on the LCD screen.

2. Mode Conversion

Press the N button to convert the mode to an order of Standard Slope Mode (NORMAL) \rightarrow Slope Pin Mode (PIN) \rightarrow Standard Tournament Mode (NORMAL) \rightarrow Tournament Pin Mode (PIN).


3. Yard-Meter Conversion

Press the 0 button for more than three seconds to toggle between Meter-Yard

4, Focus Control

Turn the focus control section of ocular eyepiece to the left and right to adjust the LCD screen clearly.

Slope Mode(Slope on, Switch to the button (M))



158.3m

Actual

Slope Compensated

Distance

Difference in Flevation Actual Distance

* Normal Mode with Slope

- A mode that measures the compensation. distances of a series of different targets.
- It is available with the measurement (power) button pressed and held.



Scan

6x optical lens Measurement Function

Pin Mode with Slope

When you measure the pin right. it will provide a compensated distance with the vibration






Slope Compensated

Vibration Alert Feature

▶ Tournament Mode(Slope Off, Switch to the button(M))




* Normal Mode without Slope

- A mode that continuously measures the actual distance of various targets.
- It is available with the measurement (power) button pressed and held.



6x optical lens

Measurement Function



* Pin Mode without Slope When you measure the pin right, it will provide a compensated distance with the vibration.



Vibration Alert Feature

Warranty Conditions
warranty as follows

- This device was produced through strict quality control and thorough inspection, and may be exchanged or reimbursed in accordance with the Fair Trade Commission Notice Consumer Dispute Resolution Criteria.
- If any change problem to defect occurs in normal use, the product will be repaired free of charge within the warranty period returns for inaccuracies will be at customers
- In case of product abnormality caused by user's carelessness even if it
 is within the free warranty period, or in case that the warranty period
 has expired, it can be repaired on a charge.
- For after-sales service and damage compensation, please present this warranty and proof of purchase (receipt).

This device complies with Part 15 of the FCC Rules. Operation is subject to The following two conditions:(1) this device may not cause harmful Interference, and (2) this device must accept any interference received, Including interference that may cause undesired operation.

Product Name	Voice Caddie L5	
Serial No.		
Purchase Date		
Dealer		
Dealer Contact		
Buyer's Name and Contact		
Name / Phone		
Free Warranty Period	For one year after the purchase of the product (6 months for components)	
Exchange and Refund Period	Change to 30days return	

Precautions

- 1. This device may be affected by the weather such as rain and clouds. and the surrounding environment.
- 2. Depending on your environment and how you use it. battery consumption may increase,
- 3. In order to prevent damage to the lens, do not touch the lens directly with fingers and rough material.
- 4. The lens is coated, so care must be taken when cleaning.
- 5. If the person's eve is exposed directly to laser irradiation, or exposed to the sun or strong light through this device, eyesight may be impaired.
- 6. Please use only a dedicated battery.
- 7. If the device has not been used for a long time, the battery must be set apart from the device

Safety and Precaution of Laser

- 1. The laser emitted from this product is invisible. It is safe to operate by your intention according to the contents of this manual
- 2. Warning: It is dangerous to look at the laser directly. Please do not look at the laser through the telescope. If you handle the product arbitrarily without following the manual, you may be injured by the laser.
- Information about laser: Wavelength: 905nm. Pulse Width: 20nsec. Energy: 0.5µJ or less, Divergence Angle: 10.5mrad
- 4. Class 1M laser product in accordance with IEC 60825-1: 2014

Product Specifications

(1YD=0.91m)

Product Name	Voice Caddie L5		
Key Functions	V-Algorithm, 6x Zoom, Slope & Tournament Modes, Vibration & Notification Function, Scan Function		
Dimensions/ Weight	Width 39.2 x Height 72 x Length 107.9mm/ 151g(battery Excluded)		
Measurement Range	5 to 1,000 YD	Manufacturer/ Made in	VC Inc. / China
Error Range	±1 YD	Importer/ Seller	VC Inc.
Battery	CR2 - 3V		

Customer Center

Telephone Number: 562-926-3978 Street Address: 13951 Valley View Ave Responsible Party - U.S Contact Information

City. State: La Mirada, CA