




Extra Strength Recovery Cream

Sample No. 1135280 August 2022

Analyzed by Anresco Laboratories

Report date: 08/08/2022

Total CBD	61.98 mg/g
Total THC	Not Detected
Key Terpenes	Menthol, Eucalyptus
Purity	PASS
Pesticide screen	PASS

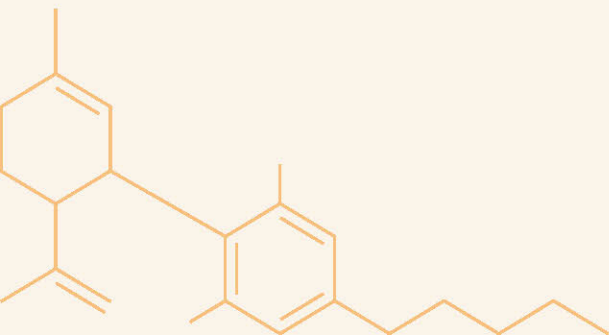

HIVE.

ANALYZED BY:

 Anresco Laboratories
 1375 Van Dyke Avenue,
 San Francisco, CA 94124
 C8-0000052-LIC

MANUFACTURER:

 McKenzie Labs
 San Francisco, CA.

SAMPLE INFORMATION
Sample No.: 1135280
Product Name: HIVE Extra Strength Recovery Cream
Matrix: Topical (Isolate)
Batch #: BC-210005

Date Received: 08/04/2022
Date Reported: 08/08/2022

TEST SUMMARY

Cannabinoid Profile:	✔ Tested	Terpenoid Profile:	✔ Tested
Microbiological Screen:	✔ Pass	Pesticide Residue Screen:	✔ Pass
Residual Solvent Screen:	✔ Pass	Heavy Metal Screen:	✔ Pass
Foreign Material:	✔ Pass	Mycotoxin Screen:	✔ Pass

Cannabinoid Profile

08/08/2022

Method: MF-CHEM-15
Instrument: Liquid Chromatography Diode Array Detector (LC-DAD)
Limit of Detection 0.067 mg/g
Limit of Quantification 0.2 mg/g

Cannabinoid	mg/g	%	mg/ml
Δ8-THC	ND	ND	ND
Δ9-THC	ND	ND	ND
Δ9-THCA	ND	ND	ND
THCV	ND	ND	ND
THCVA	ND	ND	ND
CBD	61.98	6.198	57.46
CBDA	ND	ND	ND
CBC	ND	ND	ND
CBCA	ND	ND	ND
CBDV	ND	ND	ND
CBG	ND	ND	ND
CBGA	ND	ND	ND
CBN	ND	ND	ND
Total THC	ND	ND	ND
Total CBD	61.98	6.198	57.46
Total Cannabinoids	61.98	6.198	57.46
Sum of Cannabinoids	61.98	6.198	57.46
g/ml Conversion Factor	0.927		

Terpenoid Profile

08/08/2022

Method: American Herbal Pharmacopoeia
Instrument: Gas Chromatography Mass Spectrometry (GC/MS)
Limit of Detection 0.0004 %
Limit of Quantification 0.0013 %

Terpene	mg/g	%
α-Pinene	0.015	0.0015
Isopulegol	0.113	0.0113
Camphene	ND	BLOQ
Menthol	60.672	6.0672
β-Myrcene	ND	ND
(-)-Borneol	0.204	0.0204
β-Pinene	ND	ND
Terpineol	ND	ND
δ-3-Carene	ND	ND
Citronellol	ND	ND
Limonene	0.040	0.0040
Geraniol	ND	ND

Terpene	mg/g	%
α-Terpinene	ND	ND
β-Caryophyllene	ND	ND
trans-beta-Ocimene	ND	ND
α-Humulene	ND	ND
cis-beta-Ocimene	ND	ND
cis-Nerolidol	ND	ND
p-Cymene	0.021	0.0021
trans-Nerolidol	ND	ND
Eucalyptol	0.448	0.0448
Guaial	ND	ND
γ-Terpinene	0.015	0.0015
Caryophyllene Oxide	ND	ND
Terpinolene	ND	ND
α-Bisabolol	ND	ND
Linalool	ND	ND
Eudesmol	ND	ND
Total Terpenes	61.528	6.1528

Microbiological Screen ✔ Pass

08/08/2022

Analyte	Method	Findings	Status
Salmonella	AOAC 2016.01	Negative/25g	Pass
STEC	3M MDS STEC/EAE	Negative/25g	Pass

Pesticide Residue Screen ✔ Pass

08/08/2022

Method: MF-CHEM-13

Instrument: Liquid Chromatography Tandem Mass Spectrometry (LC-MS/MS) & Gas Chromatography Tandem Mass Spectrometry (GC-MS/MS)

Analyte	LOD/LOQ (µg/g)	Findings (µg/g)	Limit (µg/g)	Status
Abamectin	0.04/0.10	ND	0.3	Pass
Acephate	0.02/0.06	ND	5.0	Pass
Acequinocyl	0.04/0.10	ND	4.0	Pass
Acetamiprid	0.02/0.06	ND	5.0	Pass
Aldicarb	0.02/0.06	ND	0.02	Pass
Azoxystrobin	0.02/0.06	ND	40.0	Pass
Bifenazate	0.02/0.06	ND	5.0	Pass
Bifenthrin	0.04/0.10	ND	0.5	Pass
Boscalid	0.02/0.06	ND	10.0	Pass
Captan	0.2/0.6	ND	5.0	Pass
Carbaryl	0.02/0.06	ND	0.5	Pass
Carbofuran	0.02/0.06	ND	0.02	Pass
Chlorantraniliprole	0.02/0.06	ND	40.0	Pass
Chlordane	0.02/0.06	ND	0.02	Pass
Chlorfenapyr	0.02/0.08	ND	0.02	Pass
Chlorpyrifos	0.02/0.06	ND	0.02	Pass
Clofentezine	0.02/0.06	ND	0.5	Pass
Coumaphos	0.02/0.06	ND	0.02	Pass
Cyfluthrin	0.10/0.30	ND	1.0	Pass
Cypermethrin	0.10/0.30	ND	1.0	Pass
Daminozide	0.02/0.06	ND	0.02	Pass
DDVP (Dichlorvos)	0.02/0.06	ND	0.02	Pass
Diazinon	0.02/0.06	ND	0.2	Pass
Dimethoate	0.02/0.06	ND	0.02	Pass
Dimethomorph	0.02/0.06	ND	20.0	Pass
Ethoprop(hos)	0.02/0.06	ND	0.02	Pass
Etofenprox	0.02/0.06	ND	0.02	Pass
Etoxazole	0.02/0.06	ND	1.5	Pass
Fenhexamid	0.02/0.06	ND	10.0	Pass
Fenoxycarb	0.02/0.06	ND	0.02	Pass
Fenpyroximate	0.02/0.06	ND	2.0	Pass
Fipronil	0.02/0.06	ND	0.02	Pass
Flonicamid	0.02/0.06	ND	2.0	Pass
Fludioxonil	0.02/0.06	ND	30.0	Pass
Hexythiazox	0.02/0.06	ND	2.0	Pass
Imazalil	0.02/0.06	ND	0.02	Pass
Imidacloprid	0.02/0.06	ND	3.0	Pass
Kresoxim Methyl	0.02/0.06	ND	1.0	Pass
Malathion	0.02/0.06	ND	5.0	Pass
Metalaxyl	0.02/0.06	ND	15.0	Pass

Analyte	LOD/LOQ (µg/g)	Findings (µg/g)	Limit (µg/g)	Status
Methiocarb	0.02/0.06	ND	0.02	Pass
Methomyl	0.02/0.06	ND	0.1	Pass
Methyl parathion	0.02/0.06	ND	0.02	Pass
Mevinphos	0.02/0.06	ND	0.02	Pass
Myclobutanil	0.02/0.06	ND	9.0	Pass
Naled	0.02/0.06	ND	0.5	Pass
Oxamyl	0.02/0.06	ND	0.2	Pass
Pacllobutrazol	0.02/0.06	ND	0.02	Pass
Pentachloronitrobenzene	0.04/0.10	ND	0.2	Pass
Permethrins	0.10/0.30	ND	20.0	Pass
Phosmet	0.02/0.06	ND	0.2	Pass
Piperonyl Butoxide	0.02/0.06	ND	8.0	Pass
Prallethrin	0.04/0.10	ND	0.4	Pass
Propiconazole	0.02/0.06	ND	20.0	Pass
Propoxur	0.02/0.06	ND	0.02	Pass
Pyrethrins	0.10/0.30	ND	1.0	Pass
Pyridaben	0.02/0.06	ND	3.0	Pass
Spinetoram	0.02/0.06	ND	3.0	Pass
Spinosad	0.02/0.06	ND	3.0	Pass
Spiromesifen	0.04/0.10	ND	12.0	Pass
Spirotetramat	0.02/0.06	ND	13.0	Pass
Spiroxamine	0.02/0.06	ND	0.02	Pass
Tebuconazole	0.02/0.06	ND	2.0	Pass
Thiacloprid	0.02/0.06	ND	0.02	Pass
Thiamethoxam	0.02/0.06	ND	4.5	Pass
Trifloxystrobin	0.02/0.06	ND	30.0	Pass

Comments

The sample was extracted in extraction solvent that is 5X higher than the usual amount. As a result, the sample may have LOD/LOQ 5X as listed due to extra extraction solvent needed for this sample matrix.

Residual Solvent Screen ✔ Pass

08/08/2022

Method: USP OVI <467>

Instrument: Gas Chromatography Mass Spectrometry (GC/MS)

Analyte	LOD/LOQ (ppm)	Findings (ppm)	Limit (ppm)	Status
1,2-Dichloroethane	0.2/0.5	ND	1	Pass
Acetone	67/200	ND	5000	Pass
Acetonitrile	67/200	ND	410	Pass
Benzene	0.2/0.5	ND	1	Pass
n-Butane	67/200	ND	5000	Pass
Chloroform	0.2/0.5	ND	1	Pass
Ethanol	67/200	ND	Not Applicable	Pass
Ethyl acetate	67/200	ND	5000	Pass
Ethyl ether	67/200	ND	5000	Pass
Ethylene oxide	0.2/0.5	ND	1	Pass
n-Heptane	67/200	ND	5000	Pass
n-Hexane	67/200	ND	290	Pass
Isopropyl alcohol	67/200	ND	Not Applicable	Pass
Methanol	67/200	ND	3000	Pass
Methylene chloride	0.2/0.5	ND	1	Pass
n-Pentane	67/200	ND	5000	Pass
Propane	67/200	ND	5000	Pass
Toluene	67/200	ND	890	Pass
Total xylenes (ortho-, meta-, para-)	67/200	ND	2170	Pass
Trichloroethylene	0.2/0.5	ND	1	Pass

Heavy Metal Screen ✔ Pass

08/08/2022

Method: MF-CHEM-16

Instrument: Inductively Coupled Plasma Mass Spectrometry (ICP-MS)

Analyte	LOD/LOQ (µg/g)	Findings (µg/g)	Limit (µg/g)	Status
Arsenic	0.02/0.05	ND	1.5	Pass
Cadmium	0.02/0.05	ND	0.5	Pass
Mercury	0.02/0.05	ND	3	Pass
Lead	0.02/0.05	ND	0.5	Pass

Foreign Material ✔ Pass

08/08/2022

Method: MF-MACRO-5

Analyte	Findings	Limit	Status
Sand, Soils, Cinders, and Dirt	ND	25%	Pass
Mold	ND	25%	Pass
Imbedded Foreign Material	ND	25%	Pass
Insect Fragment	ND	1 per 3g	Pass
Hair	ND	1 per 3g	Pass
Mammalian Excreta	ND	1 per 3g	Pass

Mycotoxin Screen ✔ Pass

08/08/2022

Method: MF-CHEM-13

Instrument: Liquid Chromatography Tandem Mass Spectrometry (LC-MS/MS) & Gas Chromatography Tandem Mass Spectrometry (GC-MS/MS)

Analyte	LOD/LOQ (µg/kg)	Findings (µg/kg)	Limit (µg/kg)	Status
Aflatoxin B1	2/5	ND	-	-
Aflatoxin B2	2/5	ND	-	-
Aflatoxin G1	2/5	ND	-	-
Aflatoxin G2	2/5	ND	-	-
Total Aflatoxins	8/20	ND	20	Pass
Ochratoxin A	6/20	ND	20	Pass

Comments

The sample was extracted in extraction solvent that is 5X higher than the usual amount. As a result, the sample may have LOD/LOQ 5X as listed due to extra extraction solvent needed for this sample matrix.

Total THC = Δ9-THC + (0.877 * Δ9-THCA)

(-) = Not Tested, ND = None Detected, <LOQ = Below Limit of Quantitation, LOD = Limit of Detection

Total CBD = CBD + (0.877 * CBDA)

Total Cannabinoids = Σ (neutral cannabinoids) + [0.877 * Σ (acidic cannabinoids)]

Reported by




 Vu Lam
 Lab Co Director


Scan to verify