


AUDIOLOGIST IMPRESSION GUIDE




Please use high-viscosity silicone for the ear impression material. Refrain from using impression guns with low-viscosity silicone which may result in a bad fit.


For the ideal fit, take open-mouth impressions using a 1-2" bite block. A complete mold of the ear without large voids or bubbles is required. Please see details below.

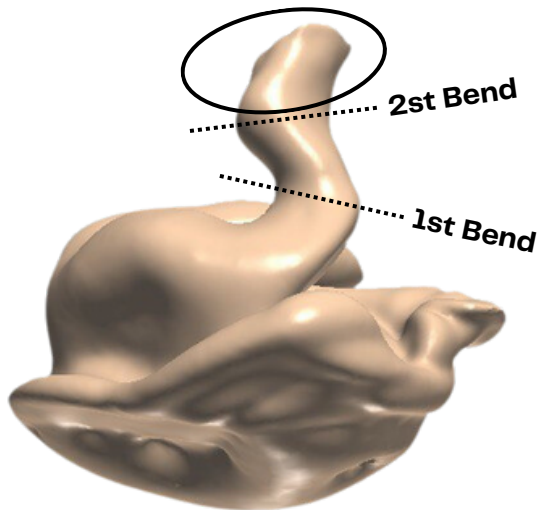


1 Impression must go beyond the 2nd Bend

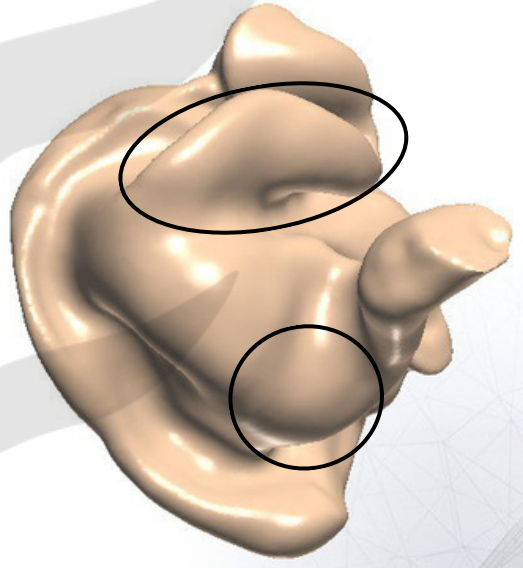

2 Cymba and Bowl must be fully captured

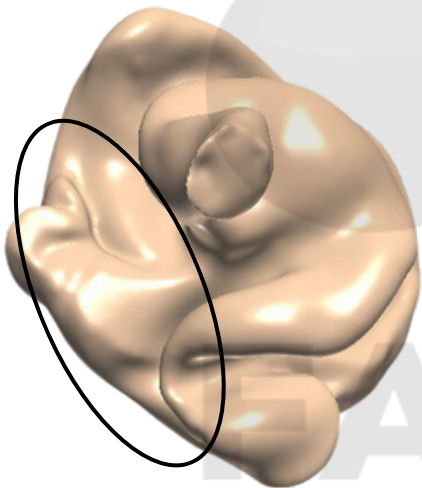

3 Extra material needed for connector area

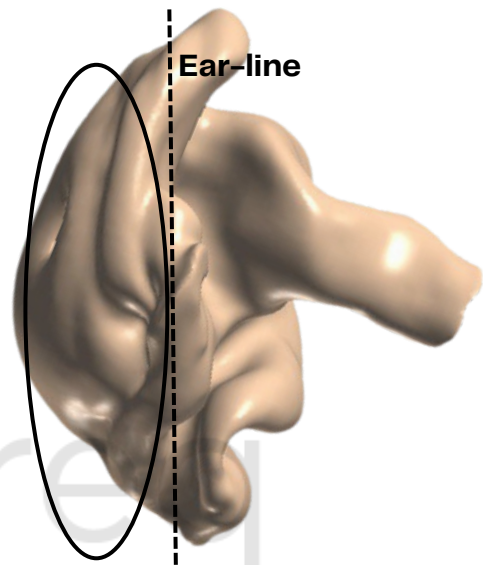

4 Extra material needed on outer ear, beyond ear-line

[IMPORTANT] Send 5-7 pictures of your physical impressions from different angles, or your digital scans in .STL format [HERE](#) to hello@fatfreq.com for approval.

Once approved, complete the form below and include it in your shipment to us. Do ensure enough padding to prevent damage to your fragile impressions.

Physical Impression Packing Form



IEM MODEL: _____

Order Number: _____

Name: _____

Email: _____

Contact No: _____

Return Address:

Additional Notes:

Please complete this form, place it in the parcel with your Impressions, and mail them to:

**Fatfreq - Impressions
29A Mosque Street,
Singapore 059507**