

CATLINK | Link everything for cat's life.

User Manual

CATLINK AI Feeder - One Young(Only Pet)

*Please read this manual carefully before using the product and keep this manual properly for future use.

*In order to provide better products, we will be improving our products on a regular basis. Therefore, the product picture might be slightly different than the actual product. Please refer to the actual product if so.

Note: Please handle with care.

To protect the weighing sensor placed at the bottom of the bowl tray;
To extend the service life of the weighing sensor to ensure data accuracy.

V1_20210805

Contents

Packing List & Product Structure	03
LED Light Indicators	04
Unpacking Instructions	05
Wi-Fi Connection	06
Scale Reset Instructions	07
Button operation & Desiccant Use Instructions	08
Cleaning and Precautions	09
Product Specifications & CATLINK Features	10
After-sale Service	15
Service Card	16

Packing List & Product Structure

Packing List



Feeder



Ceramic Bowl




USB cable




Manual

Product Structure

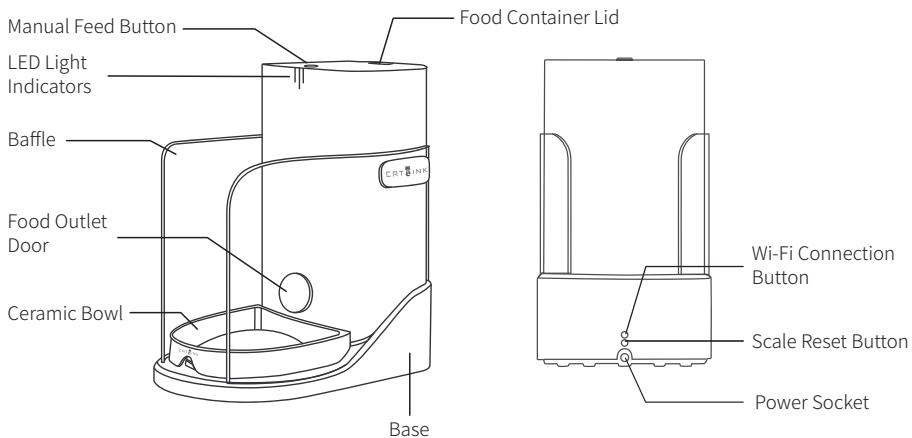

LED Light Indicators

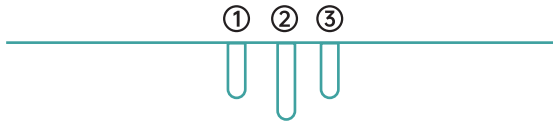

LED Light	Meaning
All three lights flashing slowly in blue	Standby
All three lights flashing slowly in white	Standby (Manual Feeding button locked)
All three lights flashing quickly in green	Configuring network
All three lights flashing slowly in red	Insufficient Food
All three lights are in solid red	Offline
No. 1 light flashing quickly in red	Scale Error
No. 2 light flashing quickly in red	Food Dispenser Error
No. 3 light flashing quickly in red	Food Dispensing Outlet Error

Unpacking Instructions

1. Check whether the items are complete according to the **【Packing List】** (Page 3).
2. Assemble the product properly according to the **【Product Structure】** (Page 3).
3. Make sure to use the power adapter that comes with the product; The feeder will be automatically turned on when power is on.
4. Refer to the **【Wi-Fi Connection】** (Page 6) to connect the feeder to your Wi-Fi and pair the feeder with your cell phone on the Catlink App.
5. Make sure to reset the scale while there is nothing in the ceramic bowl.
6. Add enough food to the food container, below the Max mark.
7. After completing the steps above, the feeder can be used functionally.

Wi-Fi Connection



1. Search for CATLINK in your mobile Application store, download and install the CATLINK App, or scan the QR code on the right to download.
2. Connect your mobile phone to 2.4GHz Wi-Fi. Currently, the fountain doesn't support 5GHz Wi-Fi or Wi-Fi that requires special certification such as hotels and airports Wi-Fi.
**Please note that the Wi-Fi name cannot contain Chinese, spaces, or other special characters, so as not to affect the network configuration.*
3. Please open the CATLINK App to register and log in. Then click "add equipment", choose "CATLINK Feeder", and follow the instructions to finish the rest of the setup.
**Please authorize location information on your phone. (GPS needs to be turned on for Android phones.)*
4. Long press the network configuration button on the back of the feeder until you hear a beep sound and the LED light indicator flashes in green, then release the button.
**Please keep the feeder as close as possible to the router and make sure that the feeder is powered on.*

The Wi-Fi Connection Button
at rear side of the product



5. Check and complete all the steps on the CATLINK App and click next; Enter the Wi-Fi password and click next, and then wait for the network configuration to be completed.
**If there is a network configuration failure, please be patient and perform the network configuration again, and check whether the Wi-Fi password entered is correct. There may be network configuration problems for some Android phones. If possible, you can use another phone for network configuration. After success, share the device with your own phone.*
**Please contact our customer service staff for assistance in time if you have followed the network configuration instructions correctly yet still failed at configuring multiple times.*


6. After completing the above steps, all functions related to the feeder can be used on the CATLINK.

Scale Reset Instructions

1. Empty the ceramic bowl to ensure there's nothing in the bowl.
2. Place the ceramic bowl properly.
**Handle with care, to protect the weighing sensor placed at the bottom of the bowl tray, and to extend the service life of the weighing sensor to ensure data accuracy.*
3. Long press the scale reset button until there is a beep sound and the LED light indicator flashes in blue; then release the button.


**Please refer to the weight data on the Catlink App. When the weight data on the App shows 0, the scale has been reset.*

The scale reset button on
the back of the feeder

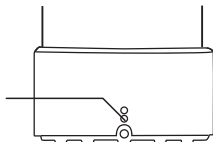

4. After completing the steps above, the ceramic bowl has been weighed and reset to zero.

Button operation

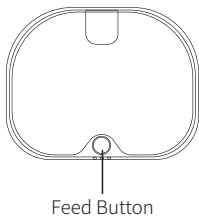

- **Dispensing one portion of the food:** short press the feed button once and then release;
- **Continuous dispensing:** long-press the feed button to dispense the food continuously; release the button to stop dispensing;
- **Lock the feed button:** Press the feed button three times to lock it; press the feed button three times again to unlock it.

Desiccant Use Instructions




1. There is a desiccant storage box attached to the food container lid.
2. It is recommended to replace the desiccant regularly.

**It is recommended to replace the desiccant according to the reminders on the CATLINK App*

Cleaning and Precautions

1. **Shut down the feeder** (both main power and backup power if in use).
2. **Parts that can be washed directly:** safety doors, food container lid (desiccant needs to be removed beforehand), desiccant storage box, food container liner, ceramic bowl.
*Make sure to wipe the parts with dry paper towels after washing
3. **Parts can only be cleaned with wet wipes:** exterior and interior of the feeder base (including food dispensing channels, etc.)
*Contains electronic components; can not be washed directly

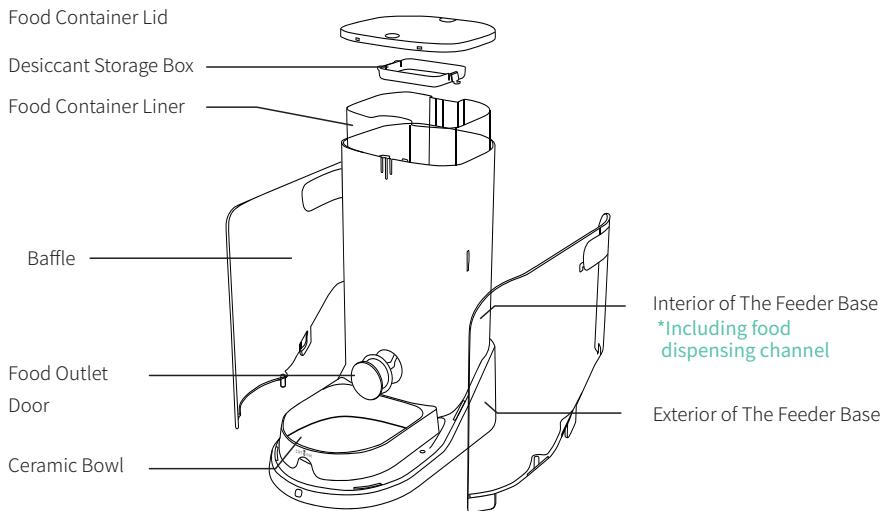

Product Specifications

Product Name	CATLINK AI Feeder - One Young(Only Pet)
Product Model	CL-F-02
Primary Materials	HIPS
Size	226x397x390mm
Rated Voltage	5V===1A
Rated Power	1.5W
General Scope	Cat or Small Dog Breed
Weight	6KG
Carried Standard	GB 4706.1-2005

*There may be differences in product specifications for different product models or batches.

CATLINK Features

1 【Health Ecosystem】

The device has function of multi-cat recognition, and the health report of each cat can be viewed in the Catlink App.

Version: Catlink AI Litter Box-Scooper(Luxury/ Standard/ Luxury Pro/ Standard Pro);

Catlink AI Feeder for Multiple Pets-One

Catlink AI Water Fountain-PURE

Note: The Catlink AI Litter Box-Young does not have this function (It is not connected to the Internet)



2 【CATLINK equipment sharing】

The main account can share unlimited permissions to family members and friends, and they can control the device or view health reports through the APP.

3 【CATLINK unlimited numbers of cat】

A single device can be associated with multiple cats without limitation.


The cat's customized health report will summarize the related data received on all of the cat's devices.

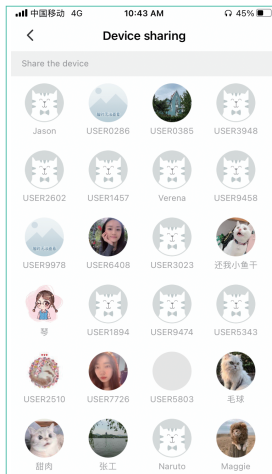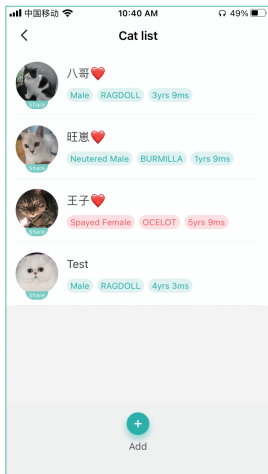


4 【CATLINK protection function】

In order to guarantee the rights and interests of overseas users and overseas exclusive agents, products that have not been purchased through official certification may not be connected overseas. Please be sure to purchase our products through formal form.

CATLINK AI Litter Box-Scooper (Standard Version)

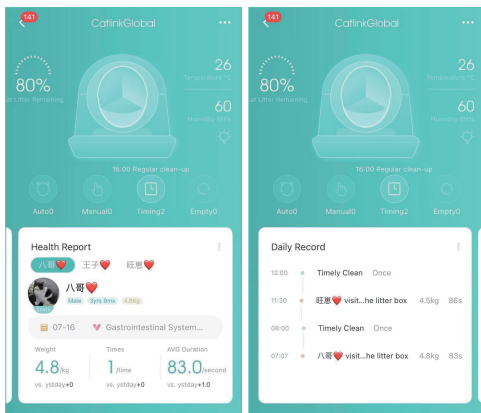

Health report on excretion

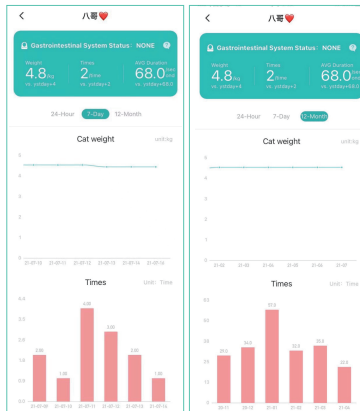


CATLINK AI Feeder for Multiple Pets-One




Health report on diet



CATLINK AI Water Fountain-Pure

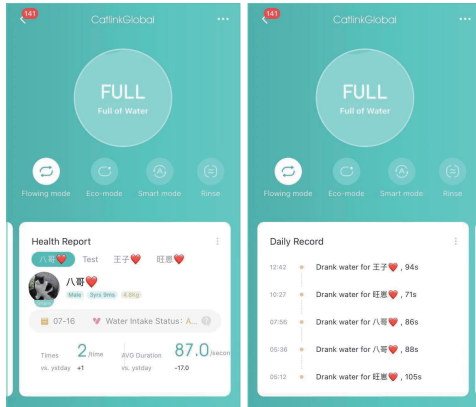

Health report on drinking

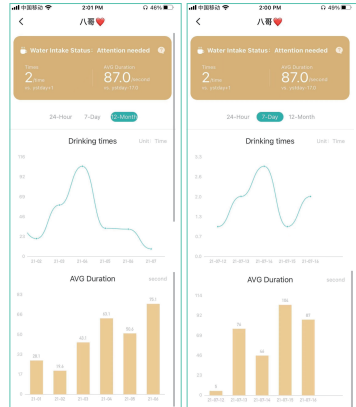

The CATLINK APP page will be updated from time to time. The actual report page may be different from the above picture. The above picture is for reference only.

After-sale Service

According to China's national regulations, we will provide customers with a one-year free warranty service.

After-sales service contact information in Mainland China

1. Customer service of your CATLINK
2. Tel Number of after-sale: (+0086)18117545826、(+0086)18121136180
3. mailbox of after-sale: customer@catlink.cn、support@catlink.cn

*For after-sales service in other regions, please contact your local dealer.




Service Card

Dear CATLINK user, thanks for using CATLINK series products, please read the following warranty clauses carefully before using this product.

1. The warranty period of this product is: within one year from the date shown on the valid purchase certificate.
2. During the one-year warranty period, our company will provide free warranty service for failures caused by the quality of the product when the user uses the product normally.
3. The following conditions are not covered by the warranty service:
 - (1) Wrong installation, use and malicious destruction;
 - (2) Unauthorized disassembly and repair;
 - (3) Failure caused by the use of other accessories;
 - (4) Use in a hostile environment;
 - (5) Exceeding the promised warranty period;
 - (6) No valid certificate of purchase;
 - (7) Equipment failure caused by irresistible external events.
4. You can communicate with the after-sales specialist to confirm whether you are entitled to free warranty service.
5. When you send the product back, please complete the form on this page and send this form together with the product.

【Service Card】

Name of user	
Tel of user	
Address of user	
Name of product	
Purchase date	
The way of buying	
Problem Description	

CAT  LINK | Link everything for cat's life.

Shanghai Catlink Intelligent Technology Co., Ltd

Company address: No.800 Naxian road, Pudong new district, Shanghai, China

Company number:(+0086)021-50686520

Company mailbox:business@catlink.cn

Company website:www.catlink.cn