


M1使用说明书
规格: 350*140mm 成品折叠后: 140*70mm

封面



MODEL: DP-HYDRO-B
888 852 7873
WWW.DRINKPOD.COM

User guide

Step 1
Connect the charging cable for the first time use. Recharge to activate the bottle. When the screen lights up, you have successfully activated the bottle.

Step 2
Click the APP to search for **CONNECT**. After its activated, then start to synchronize the drinking data.

Step 3 **NOTE!**
Please calibrate it for the first time. See below Figure 3 in Point 8 for details.

Touchable area
NOTE: when you touch the screen please touch the place without numbers.

1. Temperature Display

Green 0-96.8 F Orange 98.6-140 F Red 141-210 F

There are 2 Options for Temperature Display, Celsius & Fahrenheit. This Can Be adjusted on the APP.

Click The Screen on the Bottle. The Screen will light and the temperature will be displayed in green, orange or red according to the temperature range.

2. Hydrate Reminder

Cancel the alarm Set up alarm

There are two ways for alarm setting.

1. Alarm setting on the lid
There are 3 alarm options on the lid: 1H, 1.5H and 2H. Double click on the screen each time to switch the alarm from 1H to 1.5H to 2H.

The alarms will be cancelled automatically after 8 hours without touch screen.

2. Alarm setting on APP
You can set any time in the alarm reminder setting of the APP. Please note that after setting alarm reminders in the APP, you will not be able to switch the alarm reminder on the lid.

3. Drinking Date Option

Switch the screen from temperature to percentage. (Percentage = Daily / Target drinking.)
eg: 69% = 1380ml / 2000ml

4. Charging

The battery symbol grid is rotating while charging.

5. Expired water reminder

When the water in the bottle has not been drunk for more than 8 hours (without touching the lid) The display shows the "X" symbol, and the screen is red.

Specs

Model	DP-SMART-B1
Capacity	20 OZ
Battery	220mAh
Waterproof	IPX7
Display	LCD
Charging USB	Magnetic charging
Size	9.56 x 2.8 x 2.8 inch
Certification	FCC FDA CE RoHS

Details of materials for food contact

Item	Material	Material description
Lid	Plastic	Food grade PP (Polypropylene)
Bottle body	Metal	Food grade Titan 304 stainless steel
Temperature sensor		
Sealing ring	Silicon	Food grade silicon
Liner	Coating	Food grade Ceramic paint

Warning

- Do not expose to high temperature sunlight
- Do not store carbonated drinks
- Do not use to keep dairy products or baby food for a long time
- Do not use heating equipment such as microwave ovens to heat the product
- Do not use in dishwasher
- When hot water is installed, please place the product out of the reach of children.
- Do not violently bump, so as not to cause deformation/breakage of the cup body
- Non-professionals do not open the lid for repair or replacement parts
- Do not put too much boiling water to avoid boiling water overflow when screwing on the lid

This product has passed the IPX7 waterproof rating test, you can rest assured to wash, but the Electronic chip components built in cap lid are not suitable for long-term soaking in water, and boiling in water is prohibited.

APP installation

1. Download the APP

You can download the APP: Smart Life or TuyaSmart in the App Store or Google Play Store. The icons are as follows.


TuyaSmart Smart Life

2. Turn on Bluetooth


For Android
*BT support 4.0 or above
*Android OS support Android 8.0 or above

For IOS
*BT support 4.0 or above
*IOS support 10.0 or above


3. Open the APP, enter the following interface, and then click "+" to add the device.
Or when "Devices to be added" appears, click "Go to add".

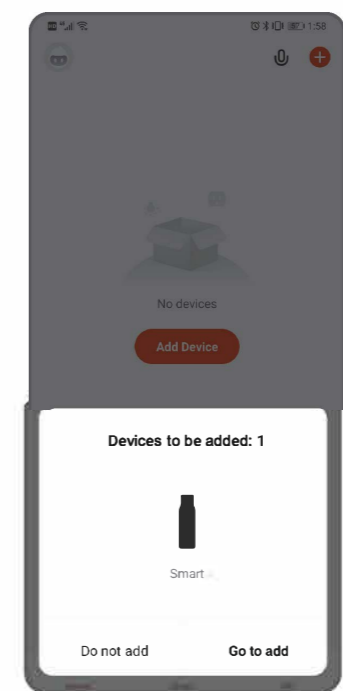


4. Find Exercise & Health, click Smart Glass(BLE).

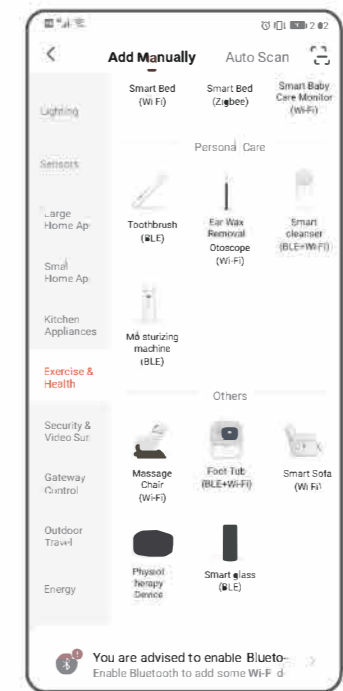

5. Check "Confirm the indicator is blinking rapidly", then click "Next".

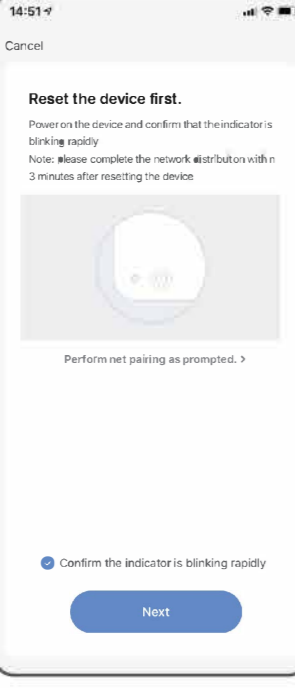

6. Start to find the smart bottle automatically, when the following Smart Bottle icon appears, click "+".
7. Check the Smart Bottle icon and click "Next".

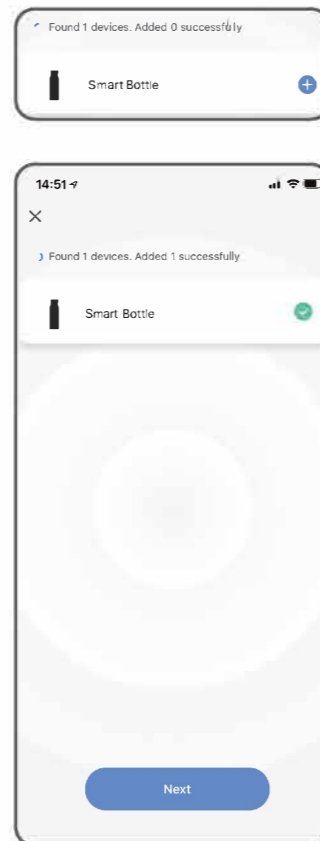

8. APP interface function introduction

After drinking water, please cover the lid then wait for around 10s to synchronize data.

Switch to check the daily/weekly/monthly drinking data

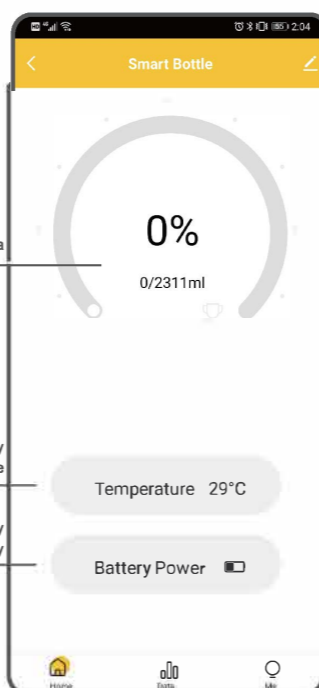


Figure1




Figure2

Data Calibration Operation

It will appear 6 in the lid
Waiting lid screen ending blushing
Click edit symbol to "Remove Device"
Disconnect and wipe data
Calibration is completed after confirmation

Click the bottle icon 5 times in a row

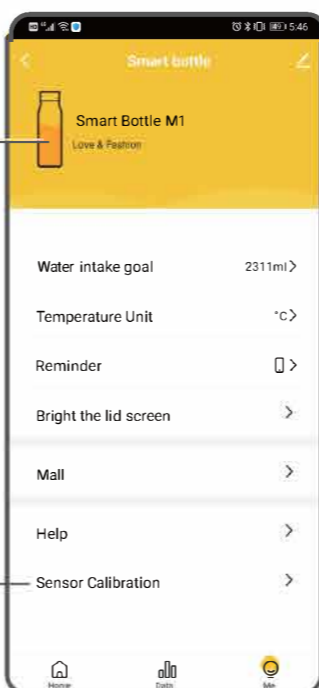


Figure 3

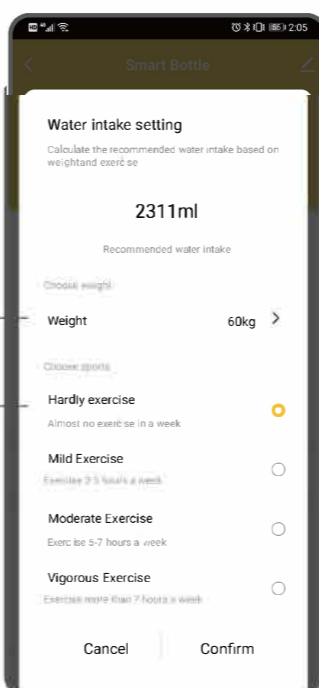


Figure 4

9. Cancel the connection between the APP and the smart bottle

Click the upper right corner of the APP interface, click "Remove Device", and select "Disconnect".

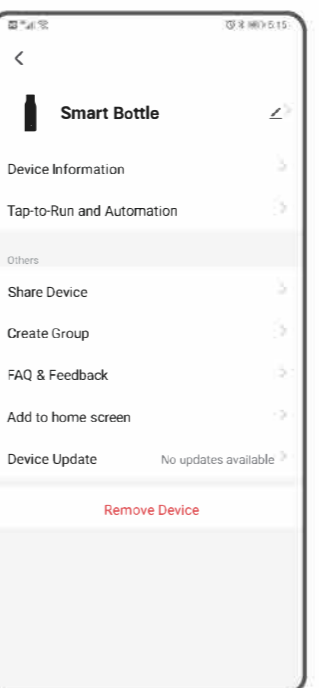



Figure 5

DRINKPOD
HYDRomate
MODEL: DP-HYDRO-B



FDA FC CE RoHS
WWW.DRINKPOD.COM

封底