

BioLite PowerLight Mini

IMPORTANT: Read all instructions and warnings before use.


Care & Maintenance: If PowerLight Mini gets dirty, just wipe away with damp towel. The PowerLight Mini is weather resistant. Do not leave out in rain for prolonged period of time and do not submerge in water.

Product Specifications: Water Resistant. Dimensions: 3.35 x 2.10 x 0.59 in; 85 x 51 x 15 mm **Weight:** 2.82 oz/80g **Inputs:** Micro USB charge in **Outputs:** USB charge out **Burn Time:** 52 LO/5 HI **Lumens:** 135 Lm **Battery:** 1350 mAh lithium-ion

WARNING: The PowerLight Mini contains batteries. Keep away from heat. Store in cool dry area when not in use.


In the Box: PLM, Micro-USB Cable, Universal Front/Rear Bike Mounting Clamp (20-30 mm), Quick Start Guide

Prior to First Use: The PowerLight mini comes packaged in a **Demo Mode** that allows you to cycle through all the lighting modes and then turns off. To disable Demo Mode, **hold the power button for 10 seconds** until the lantern blinks twice. Alternatively, you may also disable Demo Mode by plugging the PowerLight Mini in via micro-USB to any USB power source.

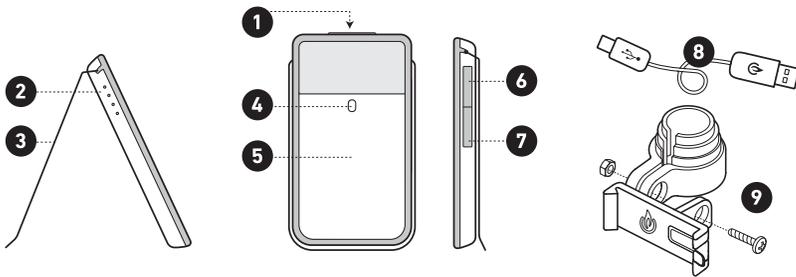


Components & Controls


- 1. Power Button
- 2. LED Battery Indicator
- 3. Clipstand
- 4. Point Light
- 5. Lantern Panel
- 6. USB Charge Out
- 7. Micro USB Charge In
- 8. USB Cable
- 9. Bike Mount

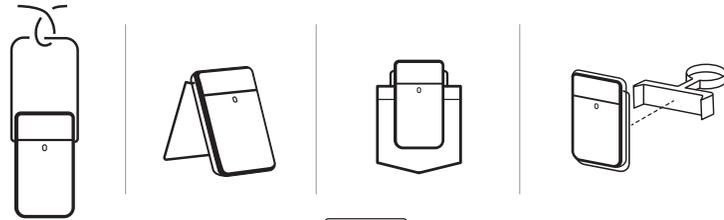


1.1

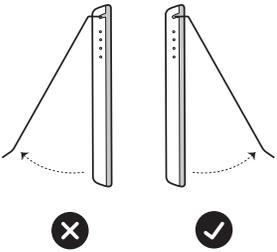


1.2

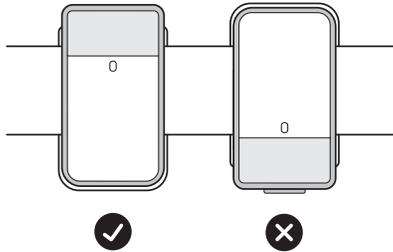


1.3

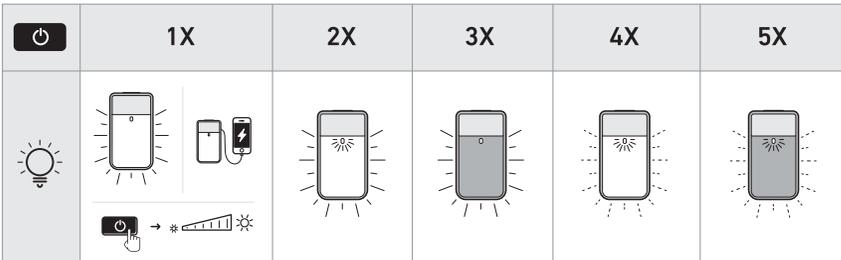


2.1

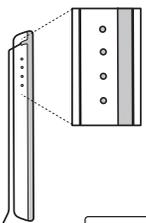

2.2

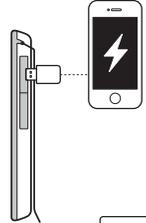


2.3

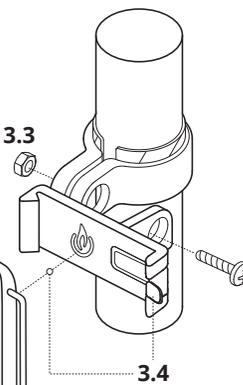

3.3

3.4



3.1

3.2

1 SETUP

- Prior to first use, charge up your PowerLight Mini via micro-USB. The LED indicator will blink upwards to show the PowerLight Mini is charging and the 4 LEDs will turn solid when the battery is full (approx. 3 hours).
- The PowerLight Mini features an integrated clipstand that can transform the PowerLight mini into a Lantern, Wearable Light, or Bike Light. (1.1)
- To Use as Lantern:** Rotate the clipstand out **counterclockwise** from the light panel to your desired angle. **Note: Do attempt to force the clipstand clockwise beyond its range of motion, it is intended to stay rigid in that direction for wearability.** (1.2)
- To Use as Wearable Light:** Gently push the clipstand clockwise from the light panel and slip onto your shirt collar, pocket, or strap. **Note:** The clipstand performs best when the PowerLight Mini is vertical. This eliminates the risk of slippage. (1.3)
- To Use as Bike Light:** Keep Clipstand flush with the PowerLight mini and attach to included bike mount. See end of this manual for Bike Mount installation tips.

2 LIGHTING

Press -

- 1x for White Lantern and to Activate Charging. Press & Hold to Dim White Lantern
- 2x for White Lantern + Point Light
- 3x for Red Lantern
- 4x for White Strobe
- 5x for Red Strobe

- The PowerLight Mini has 5 lighting modes; White Lantern, Red Night Vision, Red/White Strobe, and White Point Light. (2.1)
- To turn the PowerLight Mini ON, press power button once. To change lighting modes, click power button again within 2 seconds and keep clicking until you reach desired mode.
- Lantern mode is **dimable**, allowing you to control your light strength and prolong battery life. To DIM, hold the power button down. Light will flash when you have reached the lowest setting.
- To turn PowerLight Mini OFF, press power button once or cycle through all 5 lighting modes.

USAGE TIP: When turning on, the PowerLight Mini's memory returns to its last used lighting function. Press to preferred setting. If White Lantern is dimmed, press and hold to dim to preferred setting.

LOCK MODE: If you want to lock the PowerLight Mini to avoid accidental activation, hold the power button for 3 seconds while it is OFF. When you want to unlock it, hold again for 3 seconds. It will flash once to show that it is out of Lock Mode.

CHARGING TIPS:

- The PowerLight Mini can provide a backup boost of power to your phone and other devices. Note that charging devices will shorten the lighting hours of the PowerLight Mini.
- There are 4 LED lights on the side of your PowerLight Mini to represent the power reserves of the internal 1350mAh battery. When all 4 LED lights are solid, the PowerLight Mini is fully charged. (2.2)
- To charge devices, insert the USB end of the device's approved charging cable into the PowerLight Mini's USB charge-out station located on the side of the light. To engage charging, press PowerLight Mini power button once. **The PowerLight Mini will not charge devices via the micro-USB panel.** (2.3)
- To re-charge the PowerLight Mini, plug in via micro-USB to any USB power source.
- When charging, the solid LED lights will show the fullness of the battery while the remaining blinking lights convey active charging and how much remains until full.

NOTE: Battery Reserve Feature: When the battery level goes below 5% of available reserves, the battery panel will begin to flash a single LED. The PowerLight Mini will stop offering charge-out via USB to other devices and will switch into its lowest-light setting to prolong burn time. Connect the PowerLight Mini to a power supply to recharge battery and reactivate all lighting and charging functions.

3 BIKE MOUNT INSTALLATION

- Slide the black clamp (3.1) onto the handlebar or seat post of your bike. Line the interior with the included rubber shims to customize the fit. (3.2)
- When clamp is secure, use a phillips head screwdriver (not included) to attach the rectangular mount to the clamp. (3.3)
- The PowerLight Mini clip stand clips into the mount. To remove the PowerLight Mini from the bike mount, push the lever. (3.4)

WARRANTY

BioLite has a 1-year limited warranty. Should this product not function properly under normal use within 1 year of purchase, contact BioLite or your local distributor for return process information. BioLite alone will determine if the problem is due to a manufacturing flaw. If so, BioLite will repair or replace the unit at its discretion and send it to you, free of charge. This warranty does not cover any damage or malfunction arising from misuse, improper maintenance, negligence, normal wear and tear, or accident. Never alter the PowerLight Mini in any way or use with any part or accessory not expressly approved by BioLite. This warranty applies only to the original purchaser and proof of purchase is required. All implied warranties required under law are limited to one year. BioLite shall not be liable for any consequential or incidental damages whatsoever. BioLite shall not be held liable if the product or defect herein causes damage or failure of other equipment. This warranty gives you specific legal rights. You may also have other rights that vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation or exclusion of implied warranties, so the above exclusions or limitations may not apply to you.