

## WARNINGS

1. The installation must be carried out by a qualified installer.
2. Incorrect placement of furniture can cause damage to facilities and / or injury to bathroom users.
3. Check the resistance of the wall or partition before placing the furniture.
4. Do not attempt to extract or manipulate the drawers by grabbing them by the handrails. They are not made for that purpose.
5. Follow the placement instructions indicated in the brochure.

## Vanity Leg Installation

1. Place the furniture in a horizontal position, with the front facing upwards.
2. At the bottom of the cabinet, remove the handling protectors stapled on the edges of both sides.
3. Screw the legs over the corners of the base, sharing each one between the side and the bottom of the furniture (see illustration 1).
4. Orient the 4 legs towards the inside of the base. Place them flush with the perimeter.
5. Place the furniture in vertical position and place it in its final location.  
(Bag with 4 legs and fixing screws included in the furniture).

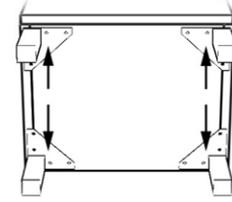


Illustration 1

## Wall Mounted Vanity

1. On a horizontal and level line mark four points on the wall (two for each wall plate), at a height of 714 mm (for a total height of 850 mm) and separated according to the width of the furniture (see illustration 2).
2. Drill holes with an 8 mm diameter bit on the marked points on the wall.
3. Place the plugs in the holes and screw the plates to the wall.
4. Check that the distance between the two wall plates is correct.
5. With the help of another person, hang the module in its final position making the nail of the hanger coincide on the flap of the wall plate (see illustration 3).
6. Adjust the furniture vertically with the help of the upper adjustment screw of the hanger (figure 1 of illustration 3).
7. Horizontally regulate the furniture with the help of the lower adjustment screw of the hanger (figure 2 of illustration 3).  
(Bag with 2 wall plates and mounting screws included in the cabinet)

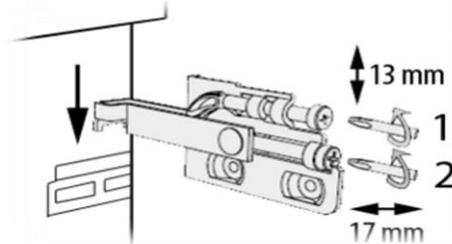
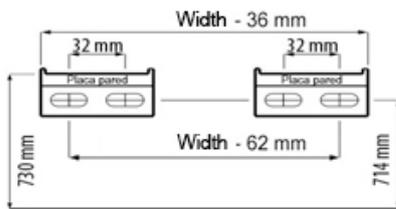


Illustration 3

## Hettich Drawer Removal

### Front Removal

1. Remove the trim cover on each side of the drawer.
2. Press the blue button on both sides of the sides and pull the front outwards (see illustration 4).

### Full Drawer Removal

1. Open the drawer completely and press the latches on each side, located at the bottom of each rib, and pull the drawer upwards (see illustration 5).  
Do not remove the drawer by grabbing it by the handrails.

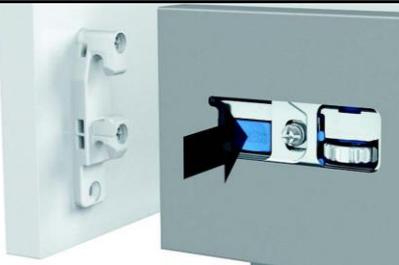


Illustration 4



Illustration 5



Innotech Drawer QR Code

## High-End Drawer Adjustments (Hettich)

1. Horizontally adjust the drawer front by turning the horizontal adjustment screw with the aid of a Phillips screwdriver (see illustration 6).
2. Adjust the drawer front vertically by turning the vertical adjustment wheel located on each side of the drawer (see illustration 7).
3. Adjust the front inclination by turning the railing on each side of the drawer (see illustration 8).

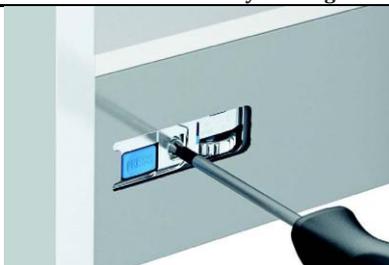


Illustration 6

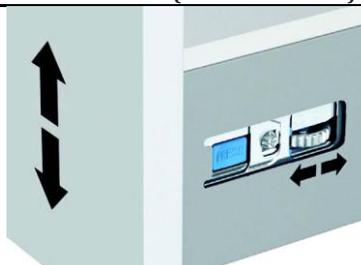


Illustration 7

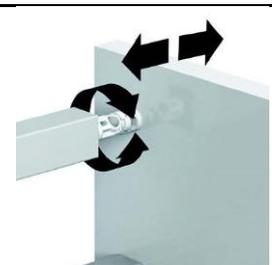


Illustration 8