



# **OptiGlow Wide-Angle LED Headlamp**

# Key Features



350  
Lumens



Motion  
induction



5 Light  
Modes



IPX4  
Water  
resistant




2M Impact  
resistant



USB  
charging

# The OptiGlow Headlamp

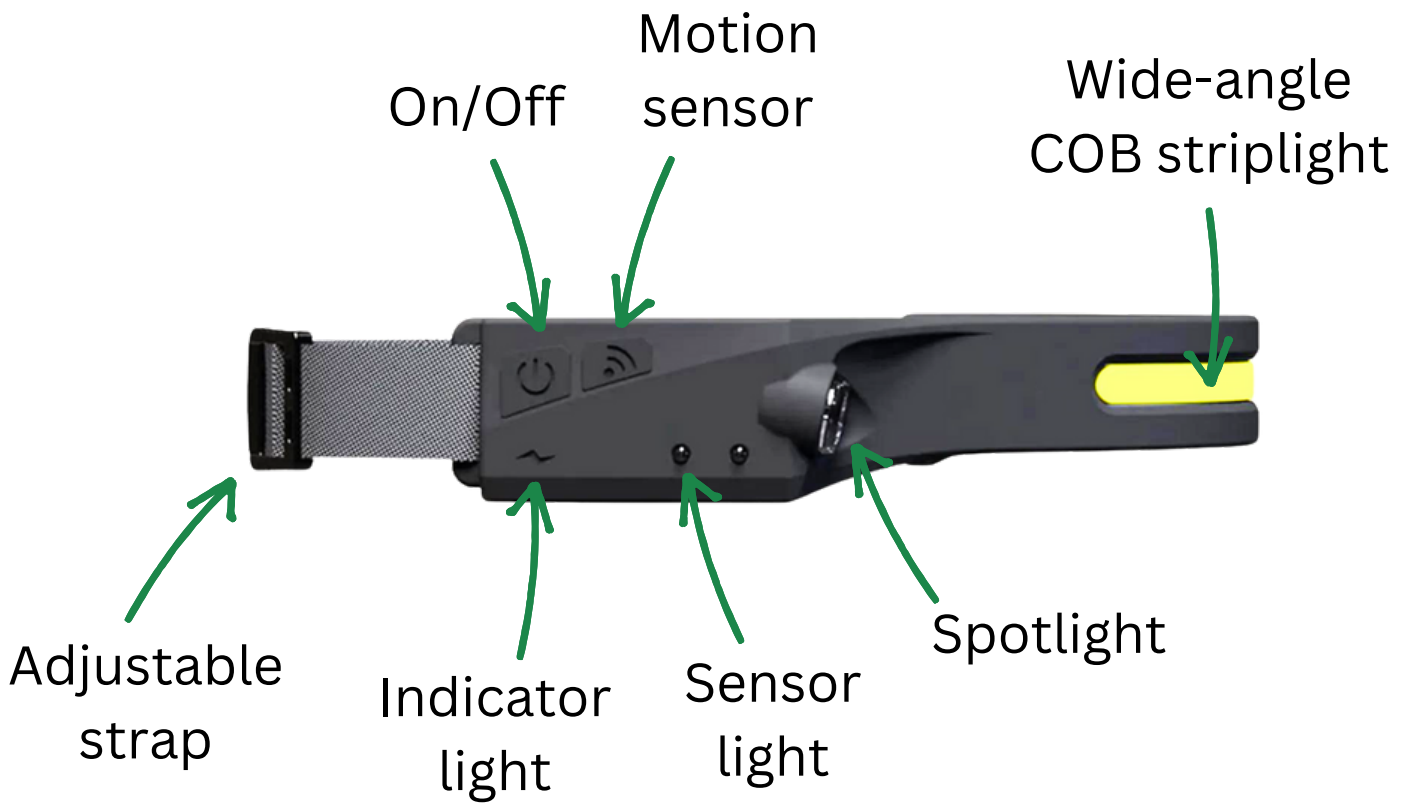

# OptiGlow Headlamp

## Light Modes

Light mode	Brightness	Working time	Motion function?
1. Wide-Angle COB 100%	350 Lumen	2.5 Hours	
2. Wide-Angle COB 40%	150 Lumen	5 Hours	
3. Wide-Angle SOS	N/A	8 Hours	
4. Spotlight 100%	150 Lumen	4 Hours	
5. Spotlight 40%	60 Lumen	8 Hours	

**MODE 1, 2, 4, & 5:** Press on button to adjust light mode

**MODE 3:** Press on button, release and hold for 3 seconds

# How to Use The OptiGlow Headlamp

1. Adjust the headband to fit over your head, hat, or hardhat

---

2. Toggle to find the light mode best suited for the task at hand. The 230° wide-angle strip light is best used for activities including hiking, camping, and dog walking, whereas the spotlight is more suitable for precision tasks like car maintenance and house repairs

---

3. On the go? Activate the motion sensor feature by pressing the button next to the power button and wave your hand over the sensor to turn on and off with ease. When this mode is activated, the indicator light will shine red and green

---

4. Turn off the headlamp by pressing the off button

---

5. When the indicator light shines red, it is in need of charging

---

6. The indicator light will shine red when charging, and when charging is complete it will shine green

# What's in The Box?

- 1x OptiGlow LED Headlamp
- 1x USB charging cable

Please get in touch with us if you'd like  
to discuss your order at:  
[team@survivalsquad.com.au](mailto:team@survivalsquad.com.au)

