




Latest instructions and videos: <u>www.velocirax.com/</u> <u>pages/assembly</u>

# Ski & Snowboard Adaptor, Instruction Manual

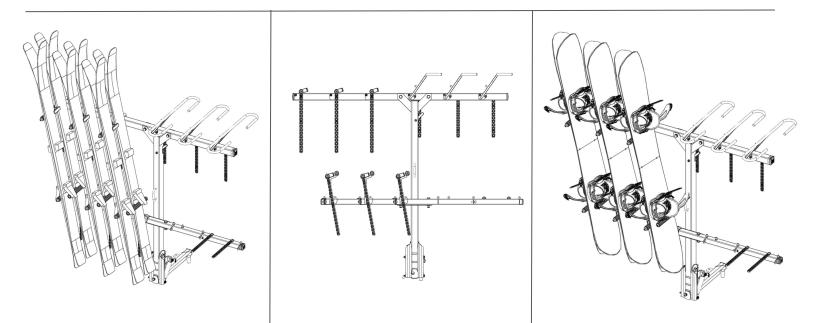

Ski and Snowboard Transport with VelociRAX (rack, skis and boards not included)






- KNOW YOUR VEHICLE / LOADED SKI HEIGHT BEFORE YOU DRIVE INTO A PUBLIC OR PRIVATE PARKING GARAGE. SKIS EXTEND ABOVE MANY VEHICLES.
- CONFIRM BOTH TOP AND BOTTOM STRAPS ARE SECURED TIGHTLY WITH VELOCIRAX STRAPS FOR TRANSPORTING.
- PLACE THE STOP PIN IN THE NO HINGE POSITION (POSITION A) WHILE TRANSPORTING..
- DO NOT USE WITHOUT A PROPERLY INSTALLED HITCH PIN AND SECURED ANTI-RATTLE WEDGE.
- DO NOT HINGE A LOADED VELOCIRAX WITHOUT HINGE DAMPERS ENGAGED.
- DO NOT HINGE A LOADED VELOCIRAX WITH SKIS OR SNOWBOARDS UNLESS THEY ARE STRAPPED.
- DO NOT DRIVE VEHICLE WHILE THE VELOCIRAX IS IN THE HINGED OR LOADING POSITION.
- RACK CAPACITY 230 lbs / 104 kg TOTAL AUXILIARY CAPACITY, 55 lbs / 25 kg CAPACITY PER SLOT
- USE CLASS III 2" (50 MM) HITCH WITH TONGUE CAPACITY OF 500 lbs




#### PACKAGE CONTENTS

Box 1. Ski & Snowboard Adaptor Components

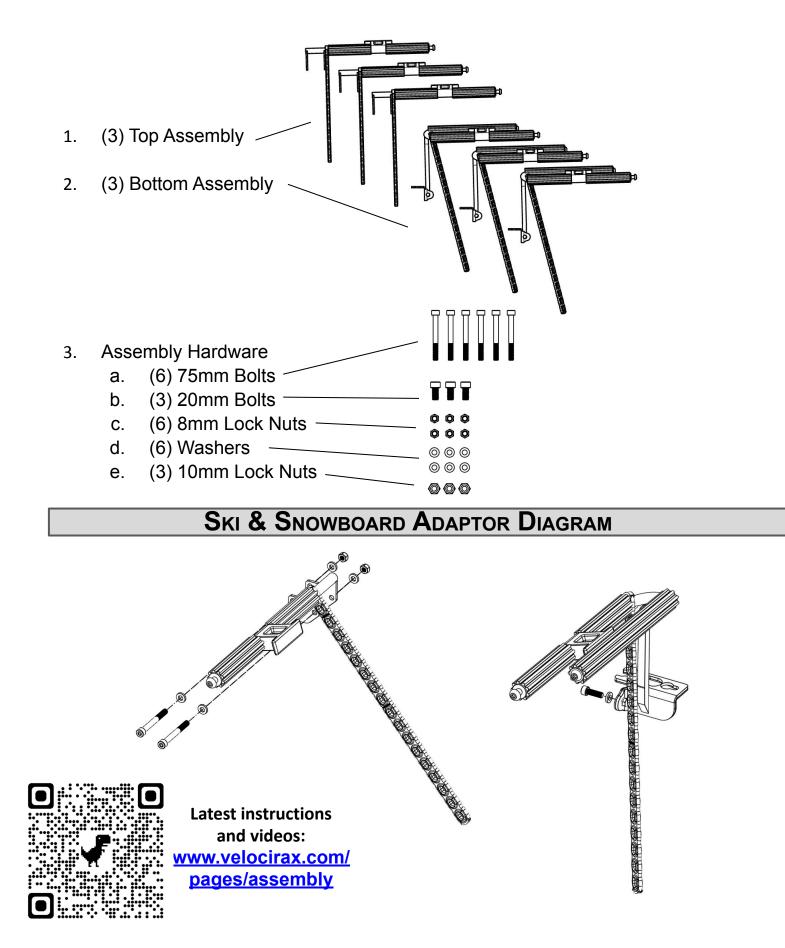

#### TOOLS REQUIRED FOR ASSEMBLY

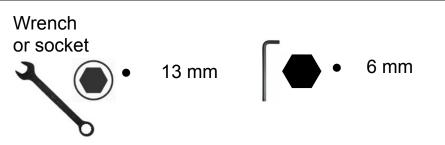


#### **ASSEMBLY INSTRUCTIONS**

Latest instructions and videos: <a href="http://www.velocirax.com/pages/assembly">www.velocirax.com/pages/assembly</a>

Read all instructions carefully before proceeding




**1.** Remove Pre Existing Tire Hoops and Straps

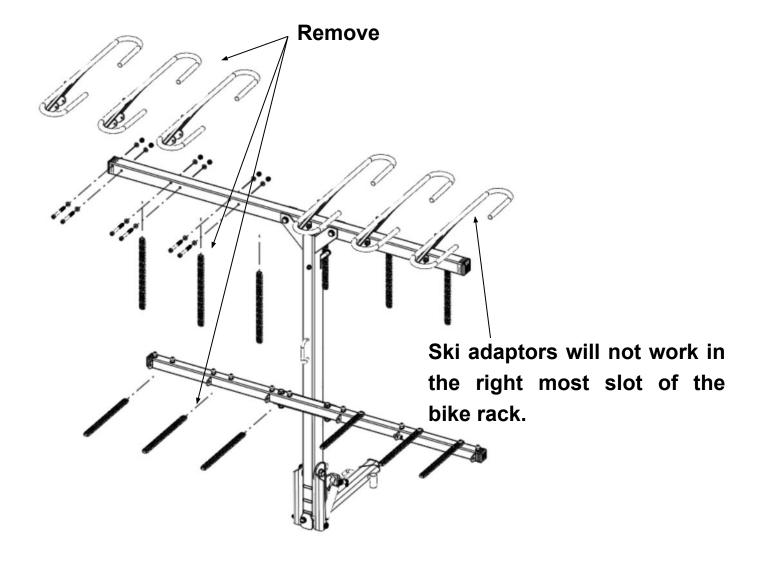


### **ASSEMBLY INSTRUCTIONS - CONTINUED**

#### **2.** Install Top Mount With New Hardware and Tighten

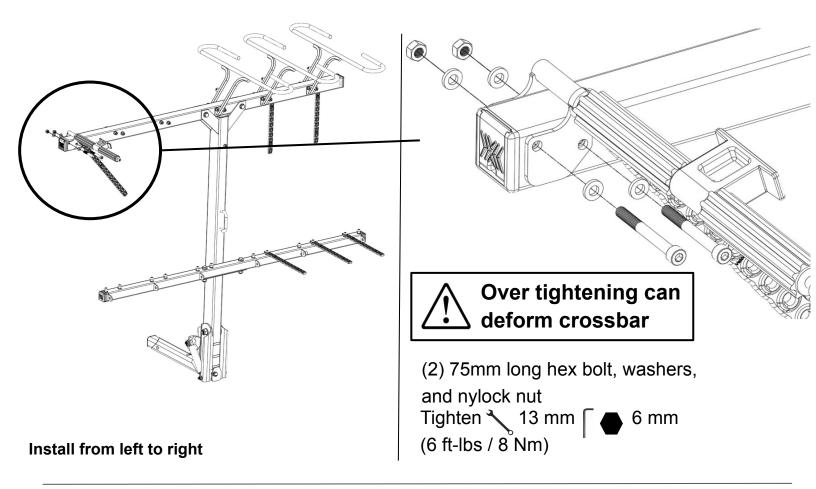


**3.** Slide Bottom Mount Over Anchors and Slide to the Left and Tighten in Place

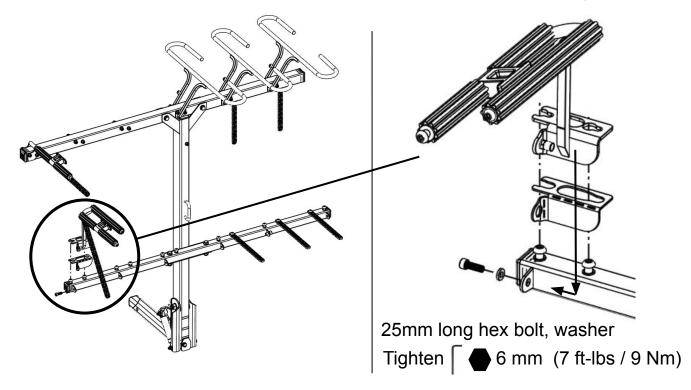

4. Repeat Steps 1 Through 3 Until All Adaptors are Installed



**5.** Mix and match skis, snowboards and bikes to fit your needs.

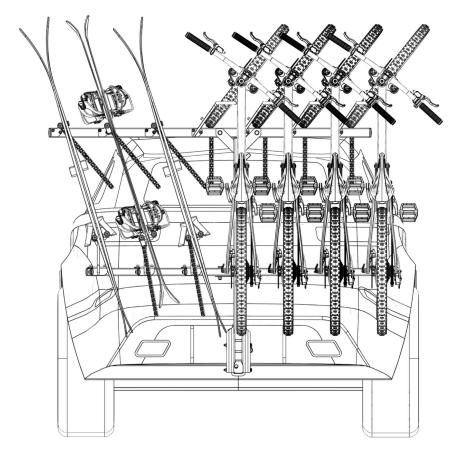

Congratulations on your VelociRAX purchase!

For support contact us at: <u>Support@velocirax.com</u>

For the latest version of these instructions, along with helpful instructional videos, please go to:

www.velocirax.com/pages/assembly

### WARRANTY INFORMATION

2 Year Limited Warranty for defects in materials and/or This workmanship for the original retail purchaser. warranty does not cover normal wear and tear, scratches, accidents, misuse, or overloading.

## **CONTACT INFORMATION**

## **VELOCIRAX**

support@velocirax.com

Fmail: Phone:

Web address: www.VelociRAX.com 435.344.4446