



TRIMMING STAND ASSEMBLY INSTRUCTIONS

ASSEMBLY

IN THE BOX:

- The trimming stand includes two separate components: a folded base-structure (legs assembled, folded and locked in place) and headpiece (chain attached). **Figure A**



FIGURE A

FOR ASSEMBLY:

- Begin with folded structure face down on its top. **Figure 1**
- Remove pin from center brackets to unlock legs from the folded position. **Figure 2a & 2b**

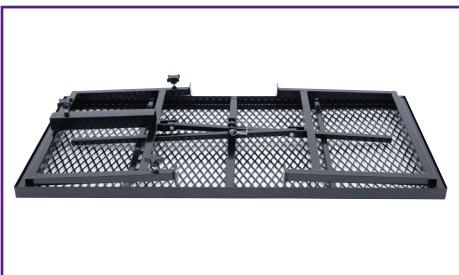


FIGURE 1



FIGURE 2A



FIGURE 2B

FOR ASSEMBLY CONT.:

- Extend legs to outright position, align cross-support bars with center brackets and replace the pin to lock cross-support bars into place. *Be sure to lock pin into place with wire snap. **Figures 3a, 3b, 3c, 3d**



FIGURE 3A



FIGURE 3B



FIGURE 3C

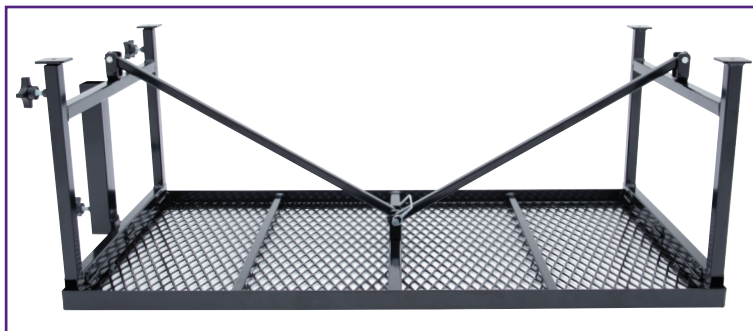


FIGURE 3D

- Flip structure upright onto legs. **Figure 4**
 - To assemble headpiece: first loosen thumbscrews to ensure smooth insertion. **Figure 5**
 - Insert headpiece shaft into slot, adjusting for desired height, and tighten thumbscrew to lock into place. **Figure 6**
- **Ensure correct headpiece attachment – wide opening of jaw bars facing inward. (See Figure 6)**



FIGURE 4



FIGURE 5



FIGURE 6

FOR USE:

- To adjust front legs, ensure thumbscrews are loose and extend legs to desired position; tighten thumbscrews to lock into place. **Figures 7a & 7b**
- Plastic chain wraps around headpiece for safe storage and is secured with a square hook. **Figure 8**

**For replacement head chain, see:
Trimming Stand Headpiece Conversion Kit (80-1060-BK).
Plastic Goat Chain (80-1020-WH), (80-1021-WH), or (80-1022-WH)



FIGURE 7A



FIGURE 7B



FIGURE 8

**The minimum animal height measurement is 30-1/2", measured from top of platform to jaw bars – to reflect animal height from hoof-to-jaw. Headpiece adjusts for increased height requirements.

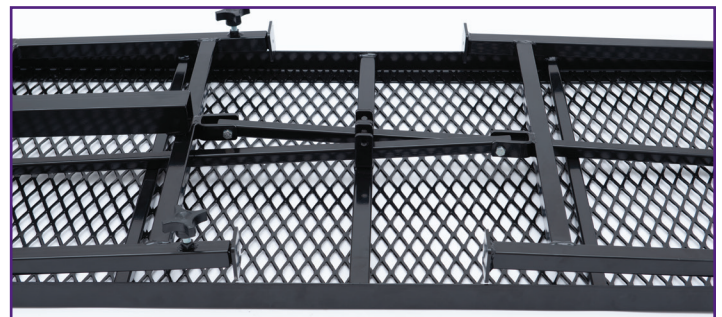


FIGURE 9A

DISASSEMBLY

FOR DISASSEMBLY:

- Ensure adjustable front legs are fully collapsed and tightened in place.
- Remove headpiece from slot and place off to the side.
- Flip the stand over onto top for easy access to folding mechanisms.
- Remove pin from center brackets to release cross-support bars.
- Fold legs in, ensuring that the cross-support bars fold under the leg frames and rest in the center brackets. Replace pin and lock with wire snap to secure legs in folded position. **Figures 9a & 9b**
- For safe and easy headpiece storage, insert shaft into slot so that headpiece lies across the folded structure (not outwards) and tighten into place with thumbscrew – it should be flush with the platform and not sticking out. We recommend that the stand and headpiece be stored together and attached as such. **Figure 10**



FIGURE 9B

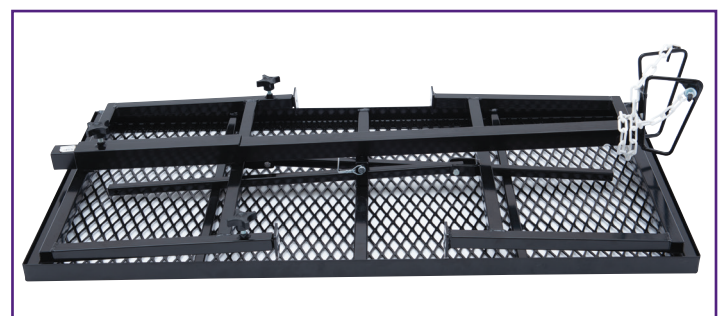


FIGURE 10