

MADE IN THE USA

# Quick Fist

## RATCHET CLAMP



Item #70070

Install the Quick Fist Ratchet Clamp with three #10 bolts or screws (not included). The clamp can be installed in any direction (see examples below), but when mounting the clamp horizontally, the winding mechanism should be upward for ease of use. After putting the webbing around the object, pull the webbing tight and then turn the winding mechanism clockwise (takes less than one rotation).

To release, push the Release Lever. While holding the Release Lever, turn the winding mechanism ½ turn counterclockwise, making the object easy to remove by lifting it out from the webbing (The clamp is fastest to use by not pulling the loose end of the webbing out from the axels).

If you want to shorten the webbing, melt the cut end with an open flame to seal and prevent fraying.

Bottles are best located with base on the floor or deck.

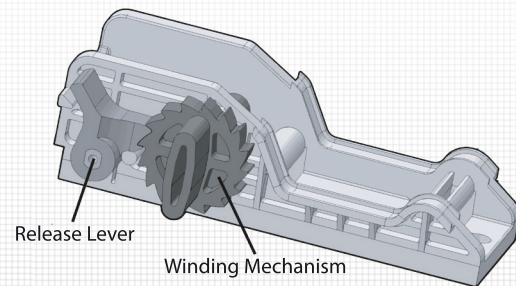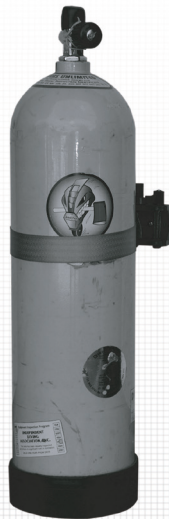

If you wish to attach equipment to a roll bar, this clamp attaches to the QUICK FIST Roll Bar Kit #90050 (sold separately).

