## **ASSEMBLY INSTRUCTIONS**





# EQUITY BI-LEVEL WITH KEYBOARD LIFT

Computer workstation with hand-crank adjustment

#### Parts Included

#### Leg Package:

- (2) Legs (A and B)
- (2) Leg Top Plates
- (2) Feet
- (4) Toe Caps
- (1) Top Crank Assembly
- (1) Drive Shaft Assembly
- (1) Hardware Bag

# Keyboard Surface – Lift Package:

(1) Keyboard Surface – Lift with Hardware

#### Table Package:

- (1) Cross Brace
- (2) Table Tops

### Tools Needed:

#2 Phillips Screwdriver or Power Driver

## Hardware

#### Hardware Bag with:




```
(8) ¾" Cross Brace
Bracket Fastener
```

(4) #8 x 1<sup>3</sup>/<sub>4</sub>" Wood Screws

(8) ¼" x ¾" Fasteners

(16) #10 x 1" Screws for Leg Top Plates

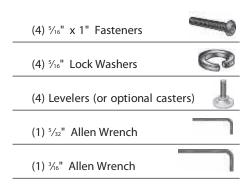



FRENERICE

Instructions for models: EQ 361416 KBL, EQ 481416 KBL, EQ 601416 KBL, EQ 4230 CKBL

# STEP ONE

Unpack and identify all parts.

Place table tops upside down on padded surface and identify front edge.

## STEP TWO


Identify the legs (A and B) and their orientation as shown in the diagram.



Look at the bottom of the leg to identify the leg letter (A or B).



Legs must be positioned in correct orientation to operate. Shaft couplers face inward.

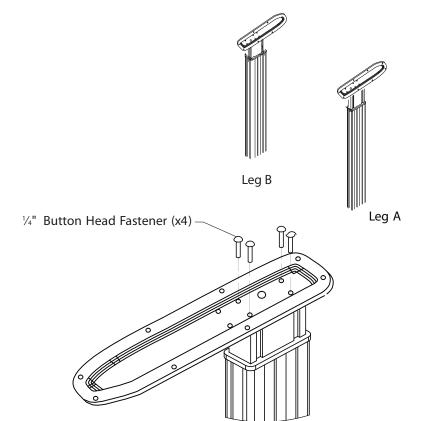

## STEP THREE

Attach leg top plates to legs using four 1/4" button head fastener per plate as shown.


## STEP FOUR

Attach feet to legs using two  $\%_6$ " button head fasteners and lock washers per foot.

Insert toe caps and levelers.




Feet are offset to the front of the table.

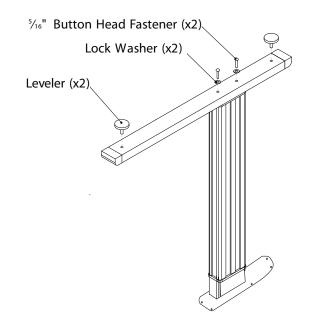

# STEP FIVE


Attach cross brace bracket to cross brace using four #8  $1\frac{3}{4}$ " screws as shown.

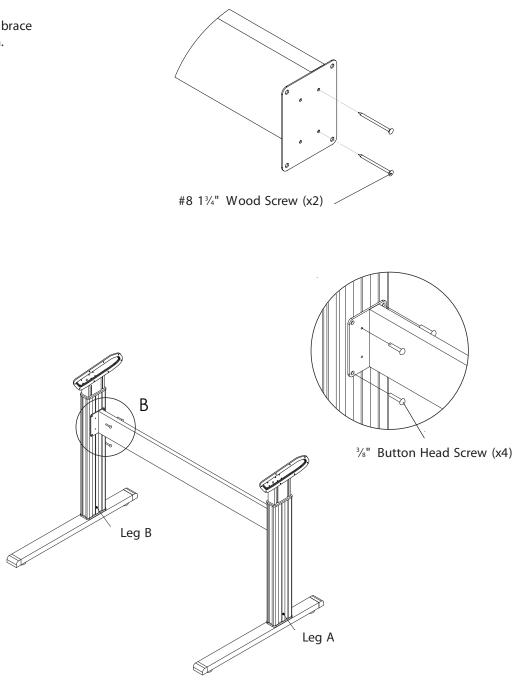


Attach cross brace bracket to legs as shown.

## STEP SIX

Attach mounting plates to tabletops using #10 x 1" screws.

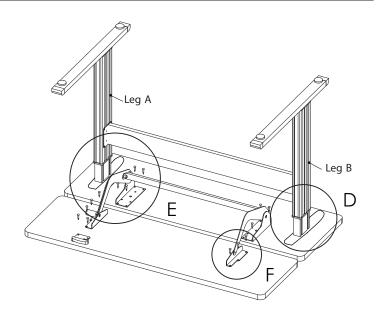

Attach Keyboard Surface-Lift using #10 x 1" screws as shown.

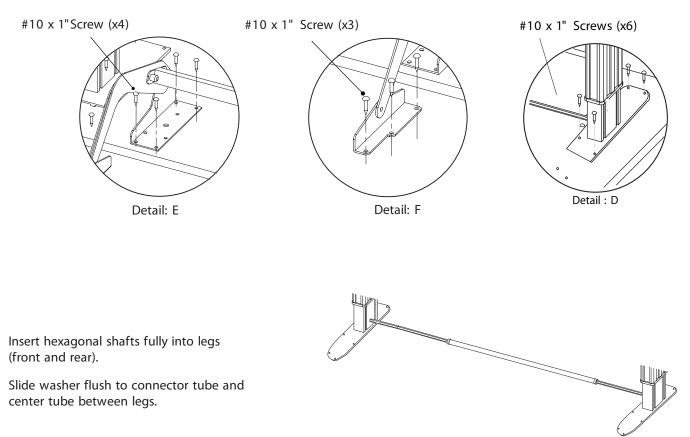

## STEP SEVEN

Gently turn table over and adjust levelers if required.

Insert the top crank handle through the rear table top directly into the crank tube. Keyboard surface lift raises and lowers with front lever. Tilt adjustment is made with a knob.

Clean with soft cloth and mild cleaners suitable for furniture.