



INSTRUCTION MANUAL


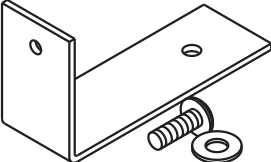
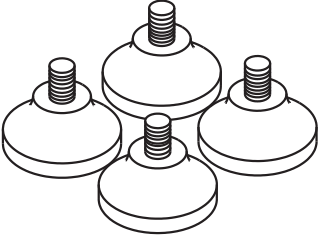
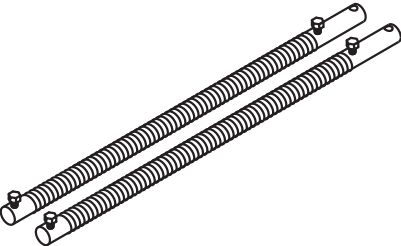
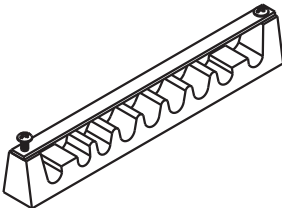
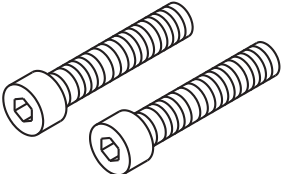
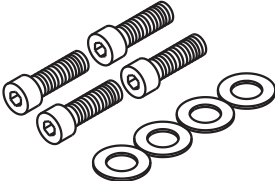
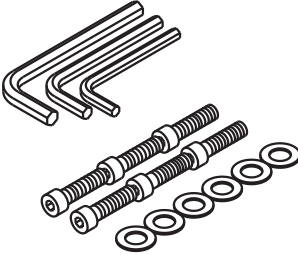
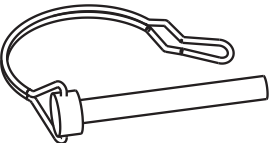
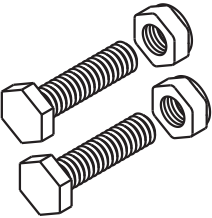
TATSOUL 370-S



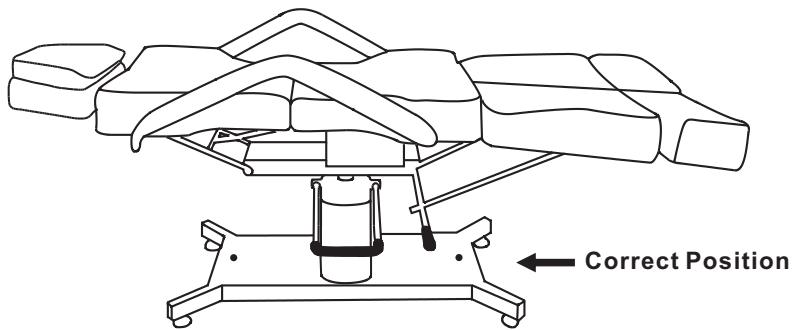


When a client is getting on the chair,
ALWAYS have the chair locked and the bed
set in a parallel position to the base as shown.





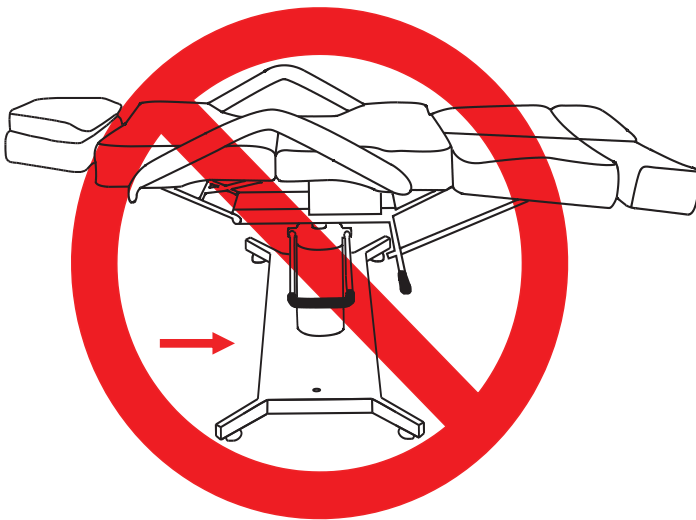


CONTENTS


 <p>P1 (60027) Connector Bolt P2 (60045) Connector Washer</p>	 <p>S1 (60030) Spring Hook S2 (60032) Hook Screw</p>	 <p>W (60040) Adjustable Foot Pegs</p>
 <p>Y (60042) Leg Bars</p>	 <p>X (60037) Back Teeth</p>	 <p>X (60041) Back Teeth Bolts</p>
 <p>T1 (60033) Base Bolt T2 (60034) Base Washer</p>	 <p>U1 (60035) Top Frame Bolt U2 (60036) Top Frame Washer Z1 (60043) Large Allen Wrench Z2 (60044) Medium Allen Z3 (60045) Small Allen</p>	 <p>Z4 (60046) Lock Pin</p>
		 <p>O1 (60047) Connector Bolts O2 (60048) Since The Lock Nuts</p>

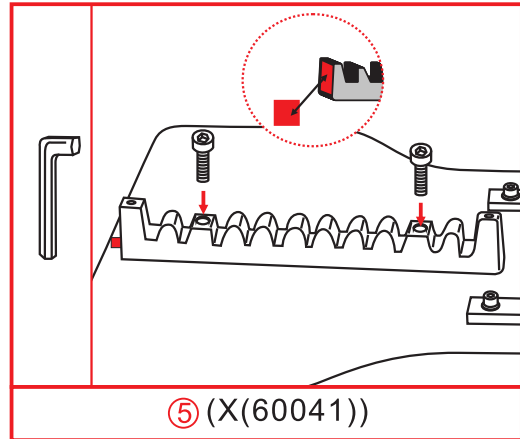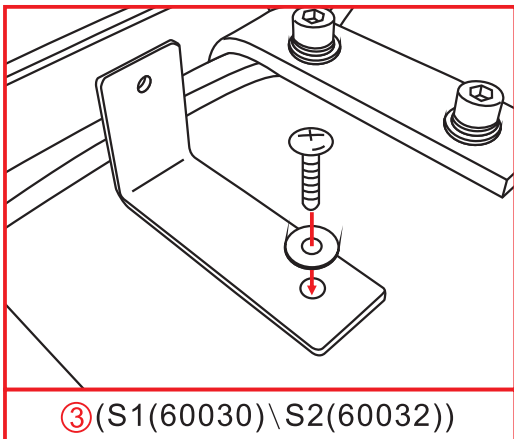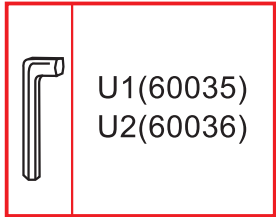





ASSEMBLY INSTRUCTIONS

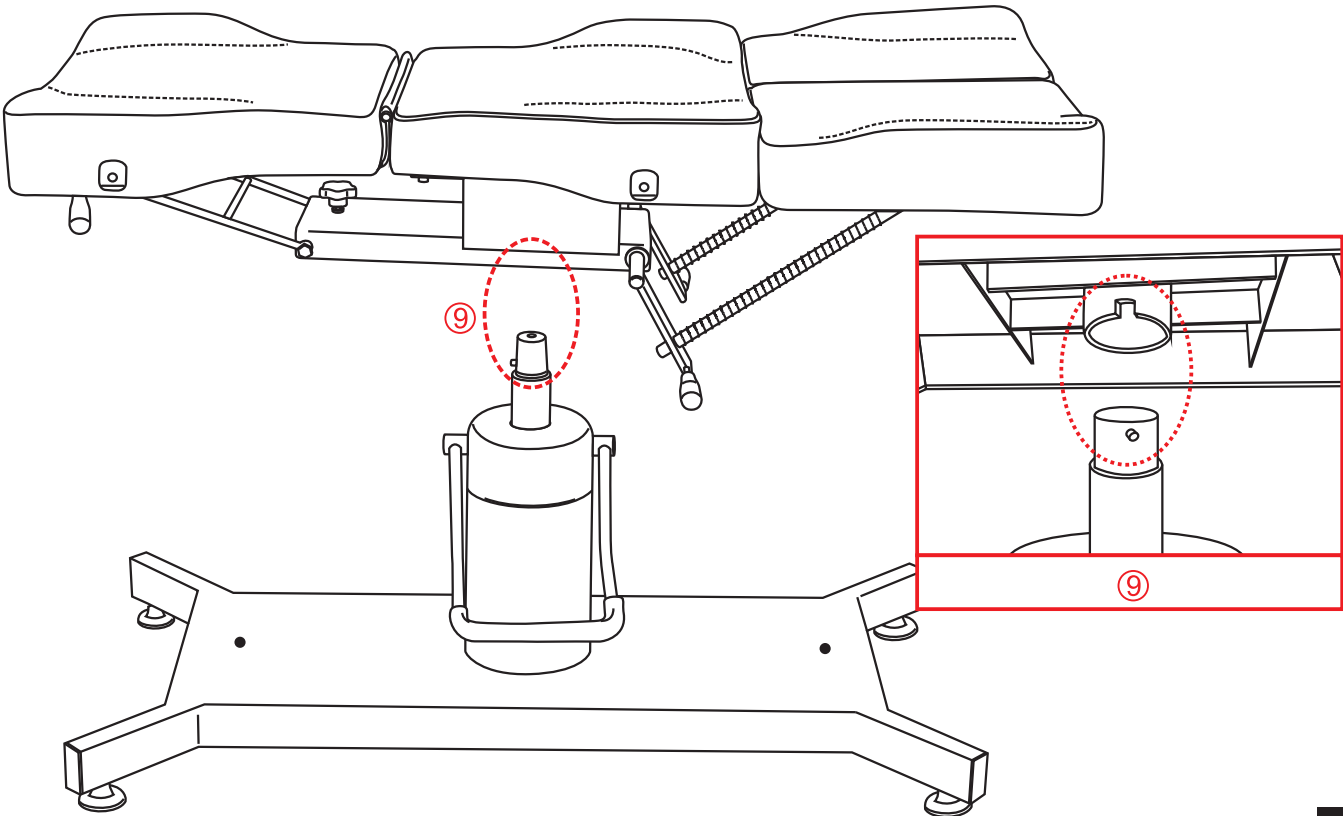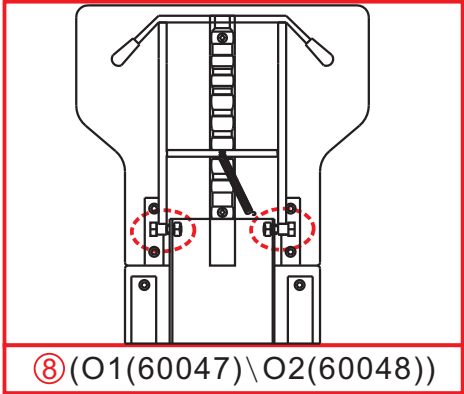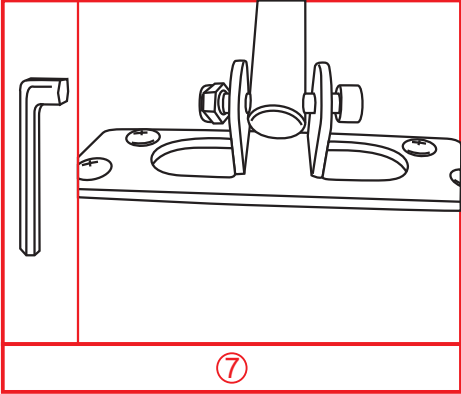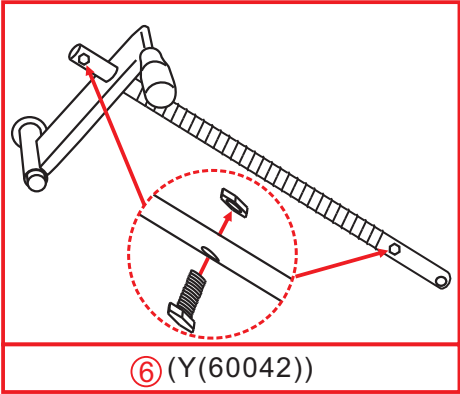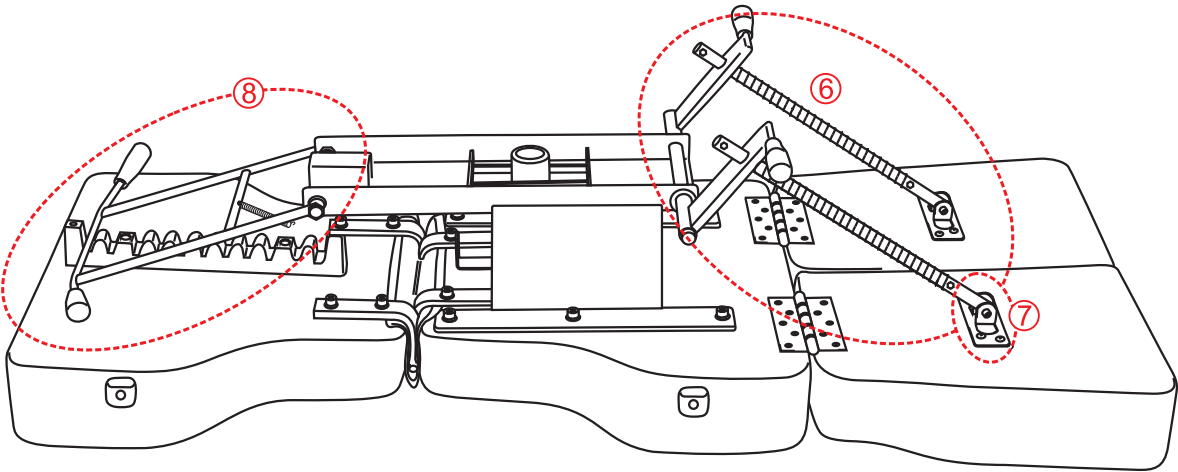

ASSEMBLY INSTRUCTIONS

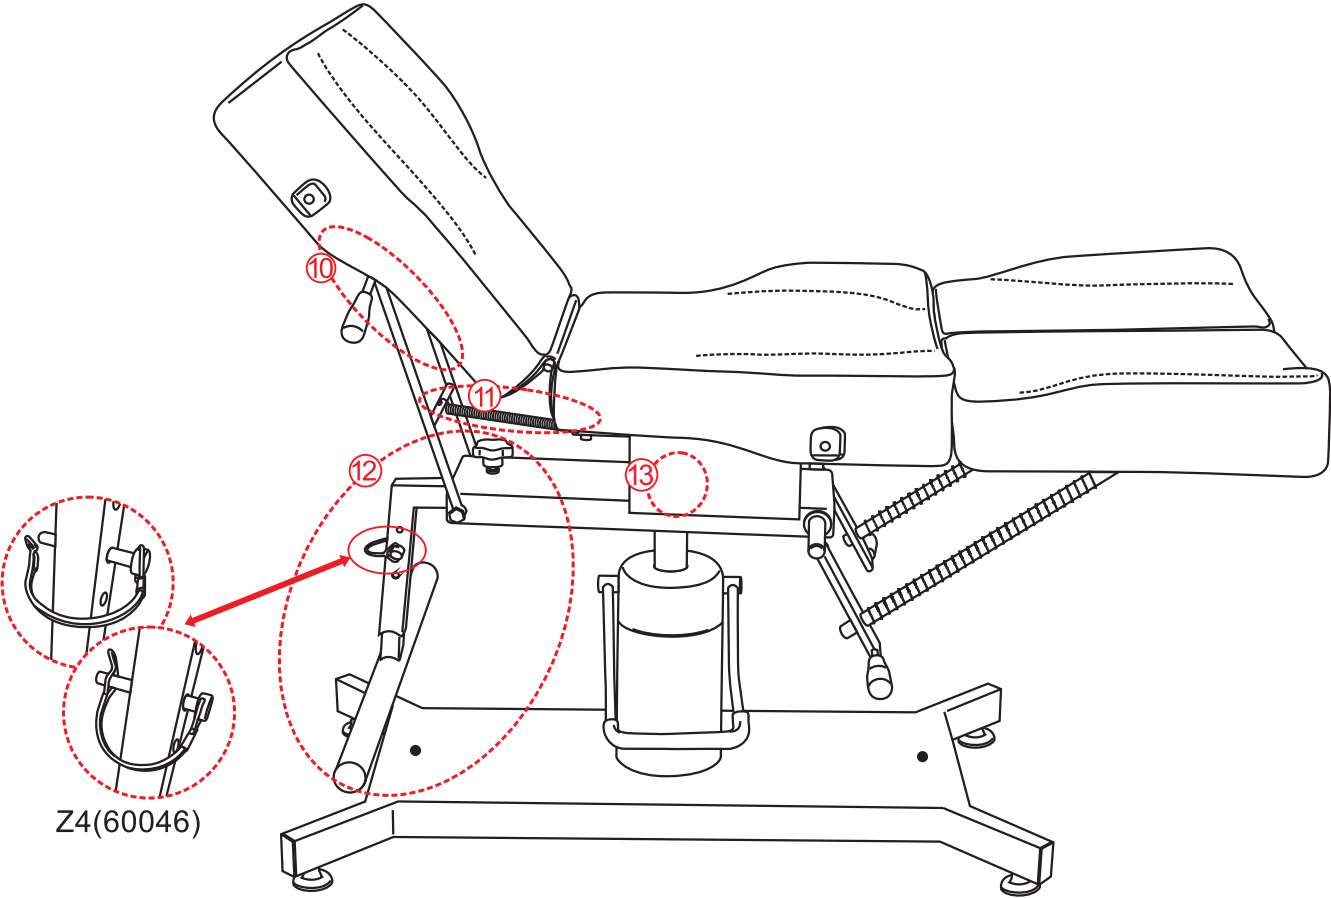

Z4(60046)

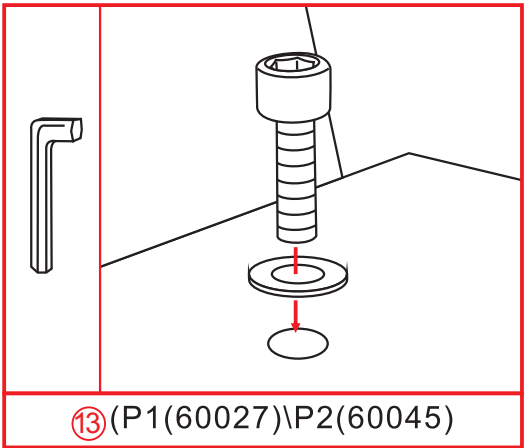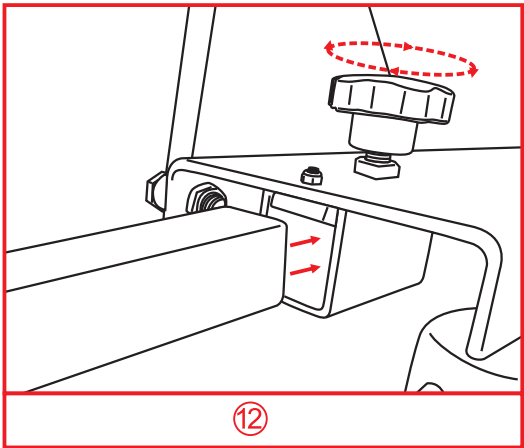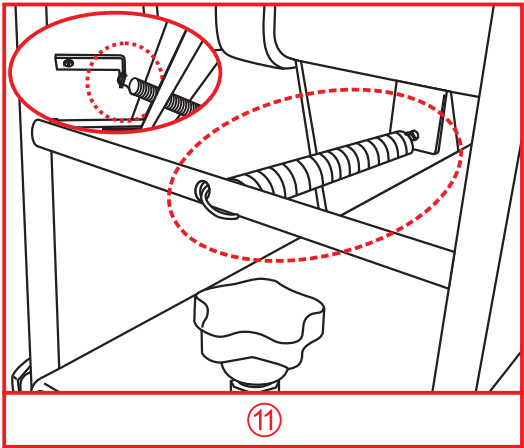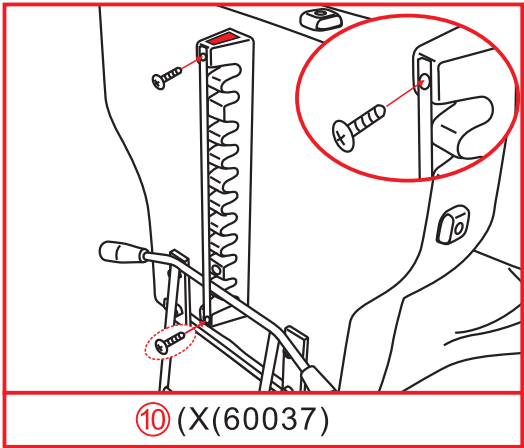



OPERATING INSTRUCTIONS

HEADREST IS ADJUSTABLE AND REMOVABLE


ARM REST IS ADJUSTABLE AND REMOVABLE

LEG REST EXTENDER IS ADJUSTABLE AND REMOVABLE


ADJUSTABLE FOOT REST

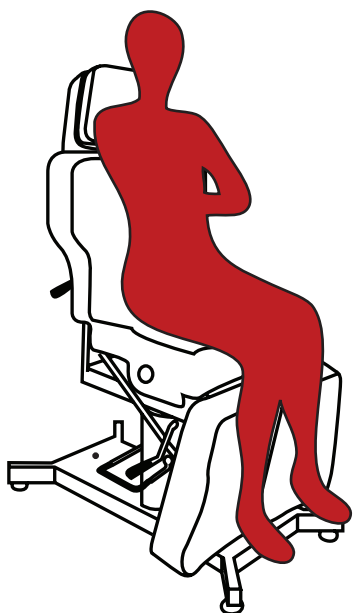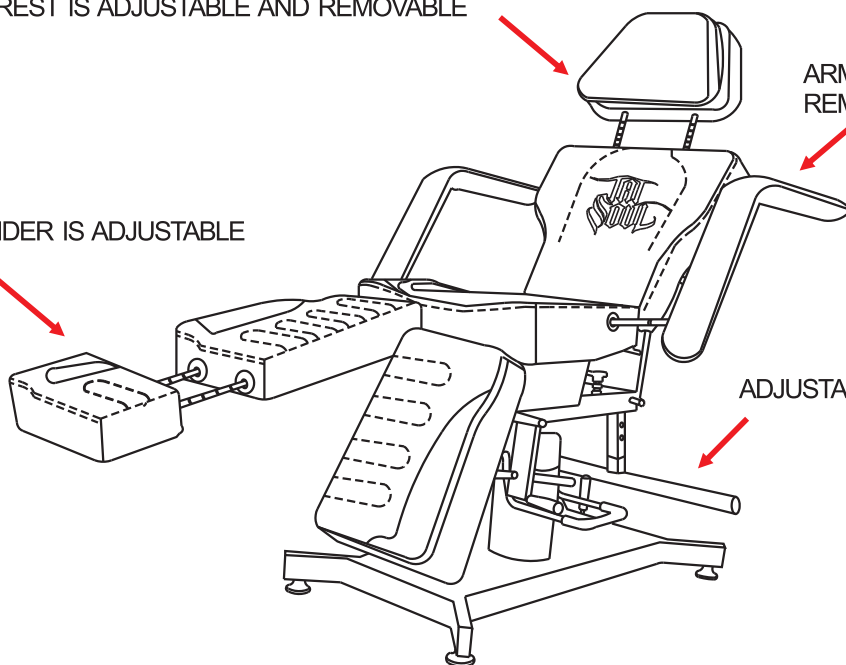

CHAIR
POSITION

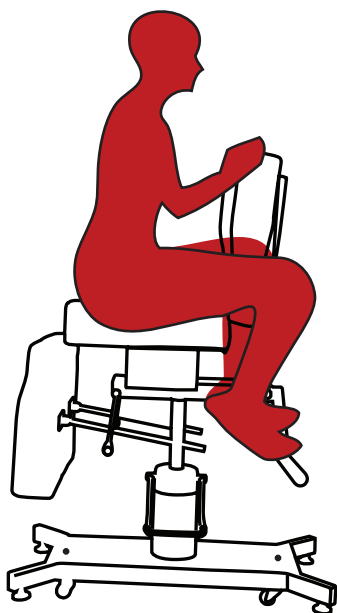

STRADDLE
POSITION

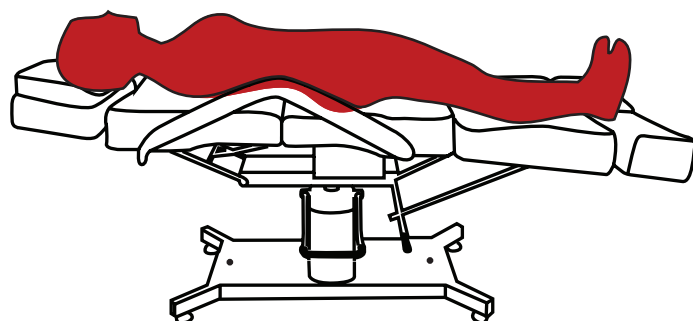


BED POSITION

WARNING:


DO NOT POSITION CHAIR IN BED FORMAT PERPENDICULAR TO LONG PORTION OF BASE!

OPTIONAL ACCESSORIES


Face Cradle

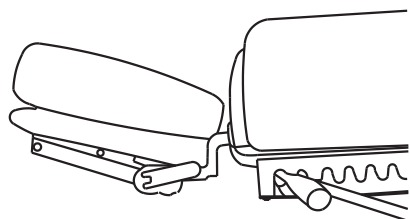

TAT Soul Landing Gear Retractable Wheels

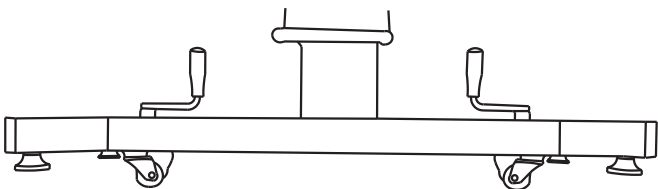

370 Wing Extensions

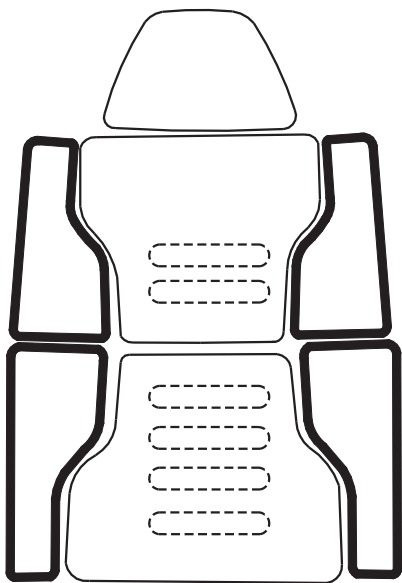

370 Protective Covers



VINYL AFTERCARE

1. Use soft cleaning implements. Only clean your vinyl seats with soft sponges, dish cloths, and soft-bristled brushes. This will ensure your vinyl seats last for many years. Using steel wool, sharp cleaning tools, or similarly abrasive cleaning implements could cause your vinyl seating to tear.

2. Wash your vinyl with soapy water. Mix a small amount of mild dish soap with warm water until the mixture is sudsy. Dip a soft-bristled brush or soft cloth in the water. Scrub the vinyl seats until clean.

3. Do not use abrasive cleaning compounds. Undiluted bleach, for instance, is too caustic to use on vinyl. Over time, cleaning your vinyl seats with bleach will cause them to break down.^[6] Likewise, avoid cleaning compounds containing:^[7]

- concentrated detergents
- silicone oils
- waxes
- petroleum distillates
- dry cleaning fluids
- solvents
- acid-based cleaners

CONTACT INFORMATION:

.....

If you have any questions about our products, feel free to contact us via email or by phone. We are available via telephone during PST business hours. We try to respond to emails within a few hours of their receipt, even during evenings and weekends.

.....

General Information:

Email: sales@tatsoul.com
Fax: [1-800-768-5643](tel:1-800-768-5643)

Sales:

Email: sales@tatsoul.com
Telephone: [1-888-TAT-SOUL](tel:1-888-TAT-SOUL)
[\(1-888-828-7685\) Option 1](tel:1-888-828-7685)

Technical Support:

Email: support@tatsoul.com
Telephone: [1-888-TAT-SOUL](tel:1-888-TAT-SOUL)
[\(1-888-828-7685\) Option 2](tel:1-888-828-7685)