



RECOLLAR

Quick Start - Setup

Step 1: Charge both the receiver and remote using the included dual charging cable.

Step 2: Turn the receiver and remote on by holding down the on/off button.

Step 3: The receiver and remote should already be paired. If not, select dog 1 or dog 2 using the toggle on the side and pair the receiver. See backside of this card or watch video (link below).

Step 4: Add the collar strap to the receiver. The strap can be trimmed later if it is too long.

Step 5: Add the correct length contact points to your receiver (collar) and tighten with the provided tool. See back side or website for sizing guide. Contact points must make good contact for your recollar to work consistently.

Step 6: Fit the receiver (collar) to your dog's neck while they are standing. The collar should fit snugly, yet loose enough to allow one finger to fit between the strap and your dog's neck.

Step 7: Start Training and Enjoy!

For training tips please visit the website below.

Scan Me or visit
recollars.com/guide



Quick Start Video

User Manual

Registration & Warranty



Button Guide

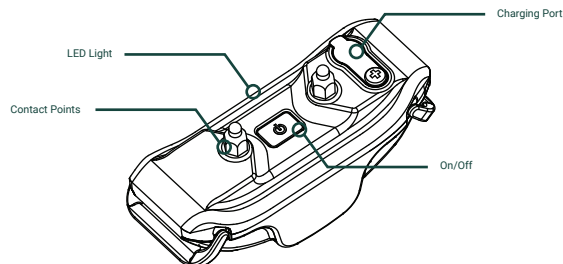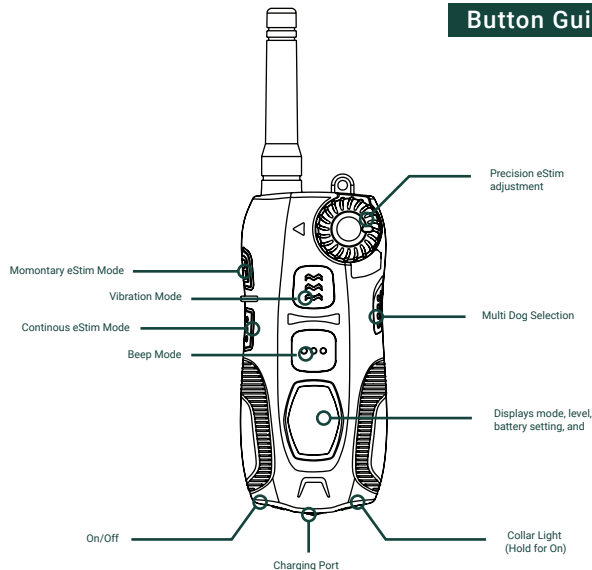



RECOLLAR

Collar Fitting:

With your dog standing, center the Collar Receiver so the Contact Points are underneath your dog's neck, touching the skin. The Collar Receiver should fit snugly, yet loose enough to allow one finger to fit between the strap and your dog's neck. Recheck after a few minutes to ensure proper fit. Reposition every few hours to avoid irritation.




Contact Point Selection:

Our hypoallergenic contact points should be selected based on your dogs fur thickness. We recommend selecting contacts based on hair types. See full manual for additional details.

Short Hair - Small Contacts (0.25")
Medium Hair - Med Contacts (0.5")
Long Hair - Long Contacts (0.75")

Pairing Remote and Receiver:

Touch the remote antenna to the receiver and press **both** vibration and the light button at the same time. The receiver light will come on and beep two times.

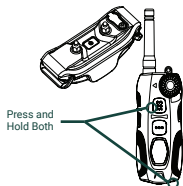

Collar Light Operation:

Hold the light button for two seconds to switch power on. The dog select toggle can be change to control lights on either dog. Dog 1 - White LED. Dog 2 - Red LED.

UnPairing Remote and Receiver:

Touch the remote antenna to the receiver and press **both** beep and the light button at the same time. The receiver beep five times and the collar will start flashing green.

WARNING

Before using this product, carefully review all safety and product information provided below. Failure to adhere to these instructions may lead to potential harm to you, your dog, and others, or result in damage to property.

Safety

Aggressive Dogs - Do not use this product if your dog is aggressive. Improper use of this product with aggressive dogs may result in harm to people or other dogs. Seek the expertise of a professional dog trainer or veterinarian when dealing with aggressive dogs.

Methods - This product can be utilized with a range of training methods, it's important to note that each dog may respond differently to the product and training techniques. Exercise observation when determining the most suitable training approach for your dog.

Children - Please be aware that this product is not intended for play and should be used with caution in the presence of children.

Electrical & Battery - This product contains electrical components and batteries. Avoid exposing your product to heat or flammable sources, as doing so may result in damage to your product and/or pose a risk of fire, explosion, injury, or property damage. Under no circumstances should you disassemble, crush, heat, or alter the battery, as this may lead to fire, injury, or property damage. Dispose of batteries as provided by your local regulations. Do not expose the device to freezing temperatures colder than -32°F (0°C) or to conditions warmer than 113°F (45°C)

Medical Device - This product contains magnetic and electrical components that emit low-level electromagnetic waves and radio frequencies. These emissions may interfere with pacemakers, defibrillators, or other medical devices. Consult your physician or the manufacturer of your medical device before use with this product.

Dog Collar - Make sure you follow the collar fitting instructions in the manual to avoid excessive pressure. Never connect a leash to the collar provided with this product or use for more than 8 hrs per day. If skin irritation occurs, wash the area and discontinue use until it is healed. If a condition persists longer than 48 hrs, please contact your veterinarian.