


Stem/Handlebar BIKE Mount Installation




a. Out-Front BIKE Mountb. Universal Mountc. Mounting Boltd. Hex Keye. Spacer



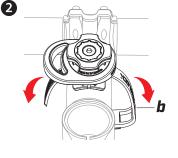

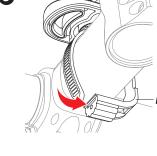

3

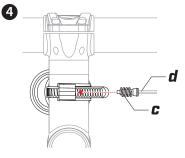

Universal Mount

- Attach the universal mount adapter to a polycarbonate case, and not directly to your device. Do not attach mount to TPU, silicon, or any other soft material, as the adhesive may not bond properly.
- The adhesive tape is not reusable. Once it is installed, it may be difficult to remove.
 The adapter works best with plastic materials and may lose adhesive power when attached to soft-surfaced materials such as TPU or silicone.
- Do not attach the mount directly onto the device. It may cause damage on the surface
 of the device due to a strong adhesion when removing.



6




Removal Paper





8 Twist device until a click is heard to ensure a secure lock. Once locked in place, make sure the mount is secure.



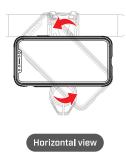

Remove While pressing the Release Lever, rotate the device 45 degrees to remove.



Attention Point

- When the cross gear is not aligned properly, twist the cross gear to align manually while pressing the release lever.
- When mounting, place the device and the mount horizontally aligned to avoid damaging the product and malfunction.
- Using excessive force to rotate the device while failing to press the release lever may cause damage to the mount.
- Operating mount while bicycle is in motion can be dangerous. Please make adjustments only while stopped.