

MMTGB

MMTGB Bracket

Installation Instructions

BOX CONTENTS




INSTALLING THE MMTGB BRACKET TO THE GATE CONTROLLER AND GATE

Follow the steps below to attach the MMTGB bracket to cylindrical gate:

- Using the 3/4" length bolt and a nut, connect the existing gate arm bracket to the MMTGB bracket. Do not tighten completely.
- 2 Position the gate arm to slide the MMTGB bracket over the desired section of the gate.
- Insert the 2 1/2" bolt through the eyes of the MMTGB bracket, then attach the nut. Do not tighten completely.

Finishing Up: With the gate closed and settled in place, tighten the 2 1/2" bolt and nut then tighten the remaining 3/4" bolt and nut. Test the gate opener, and adjust as necessary.

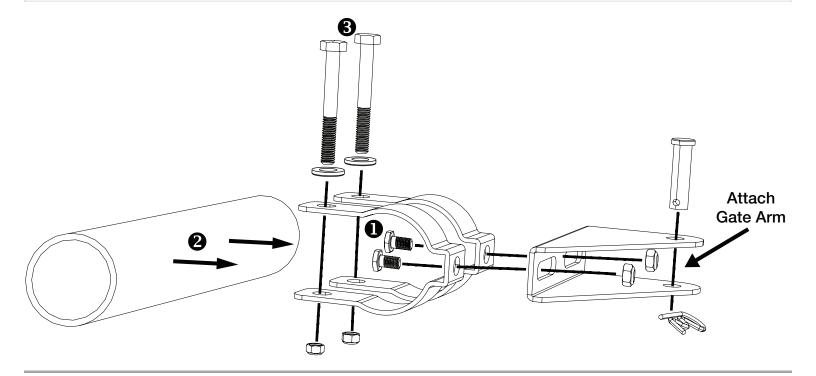



Mighty Mule Sales: 800-543-4283 | Mighty Mule Technical Service 800-543-1236

For more information on Mighty Mule's full line of Automatic Gate Operators, Gate Openers and Access Controls visit www.mightymule.com