




VELOCHAMPION®

CO2 INFLATOR PUMP

1 Turn Valve with
Insulated Sleeve

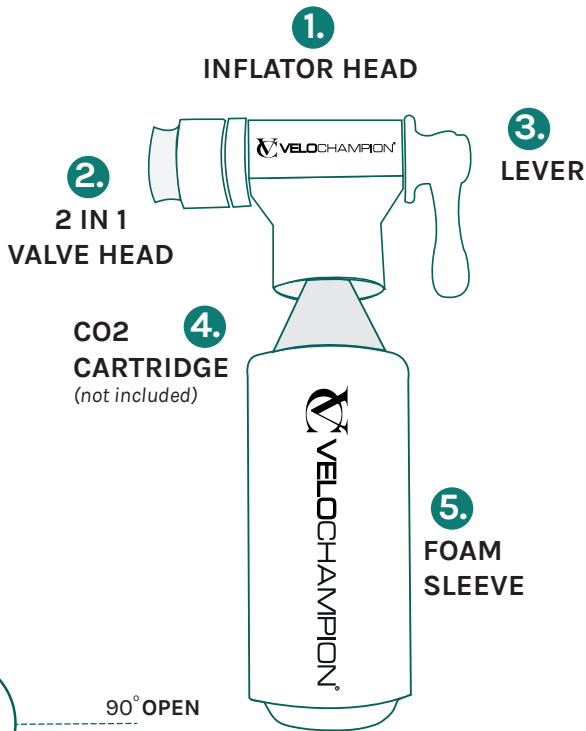

SAFETY WARNING!
Please ensure the foam sleeve is over the CO2 cartridge when activating the cartridge. Please use VeloChampion gloves when the cartridge is in use to prevent injury from cold temperatures.



1. Ensure the lever is set to the off position (c).
2. Slide the foam sleeve over the CO2 cartridge (16g only*).
3. Thread the cartridge clockwise into the CO2 inflator head and firmly hand tighten until fully pierced. As the cap of the cartridge is sealed you will hear a rush of gas, this is normal. **DO NOT** remove the cartridge until empty.
4. Thread the 2 in 1 valve head on to the Presta or Schrader valve.
5. Slowly turn the lever counter-clockwise towards a 90° angle to release the CO2 (o).
6. Fill the tyre to the desired pressure.
7. Turn the lever 90° clockwise to close the valve.
8. Unscrew the inflator's valve head from the tyre and keep the inflator head pointing away from your body to prevent injury.
9. Unscrew and remove the CO2 cartridge from the CO2 inflator.

**VeloChampion does not supply CO2 cartridges.*



In 2009, the VeloChampion brand was born from passionate cyclists whose aim was to create high quality and affordable cycling accessories and equipment.

We take pride in our products and hope you like them too. If you have any feedback, please leave your comments on the marketplace you purchased from, or alternatively contact our team by emailing info@maxgear.co.uk

