


Ascent Vaporizer User Manual

Charging:

For optimal usage, please allow the Ascent Vaporizer to have an initial 10 hour charge and subsequently a 5 hour charge. To charge, plug the wall charger into the port on the lower half of the unit.

Initial Use:

- Expose the heating chamber by swiveling the lower half of the vaporizer open. Fill with dry blends or place a filled oil jar in the chamber.
- Power on the device by pressing the main power button located next to the mouthpiece.
- Use the temperature (+) / (-) button to set the desired vaporizer temperature
- Wait for the vaporizer to reach the selected temperature, indicated by a heat bowl appearing on the OLED display.
- Start vaping either via the retractable glass mouthpiece or natively using the wide mouth rim. For best usage, take longs slow draws.

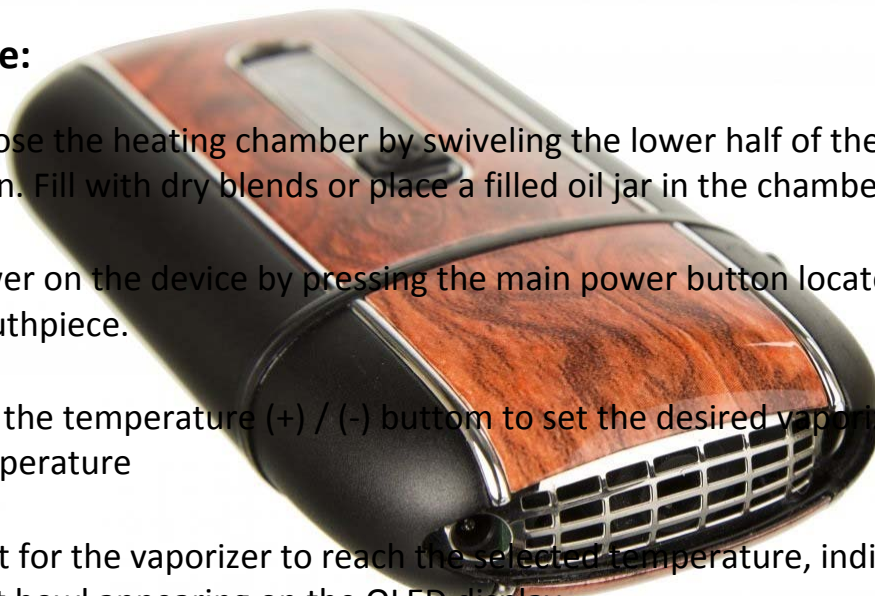

Settings:

This digital vaporizer features 4 programmable OLED modes

Mode 1: Switch between Fahrenheit and Celsius

Press the settings button, hold for 5 seconds and release. A °F or °C symbol will appear.

Mode 2: Turn heat bowl on/off

Press setting then (-) to deactivate heat bowl.

Press setting then (+) to reactivate the heat bowl.

Mode 3: Setting the motion sensor timer

This feature allows the user to set the time for the internal motion sensor. Default time is 1:30 mins. Press the settings button 2 times to enter the setting. The timer is depicted by a clock symbol. While displayed, press (+) or (-) to adjust the timer as desired.

Mode 4: Personal vape cycle

This feature allows the user to adjust the heat bowl to run at a certain temperature for a specified time period. 3 different vape cycles may be programmed. To access, press the settings button 5 times. The display will show 3 temperatures and 3 times. To adjust the first vape cycle temperature, press the settings button again, once the selected temperature blinks, press (+) or (-) to adjust. Next press the settings button again to activate the timer for that specific temperature. Once it blinks press (+) or (-) to adjust. Repeat for remaining cycles

Cleaning:

Simply remove the internal glass piece and the glass mouthpiece. Soak in your favorite cleansing solution or isopropyl alcohol. Rinse with water to protect pure flavor. Clean the bowl with a cotton swab.

