


Thank you for purchasing the Aviator 4.0. Read and follow the instructions carefully. Understand them fully before your first use of the Aviator 4.0 vaporizer. It is recommended that these instructions are put in a safe place for future reference. We hope you enjoy the quality and performance of your new vaporizer.


You must be over 21 years old to purchase and use the Aviator 4.0 vaporizer. This product should not be used by children, women who are pregnant or breastfeeding, or those with life threatening illnesses without first consulting a doctor.

Aviator 4.0 is not a medical device and is not intended to diagnose, cure, treat, or preventany diseases or other conditions. If you have any health problems, consult your doctor before using it. Aviator 4.0 is not intended to administer medicinal or illegal substances of anykind. Any illegal use of this device could subject the user to severe fines, penalties and/or imprisonment under the law of your jurisdiction. For proper intended use only.


THIS PRODUCT DOES NOT CONTAIN TOBACCO OR CONCENTRATE MATERIALS

#### OVERVIEW

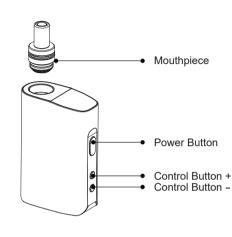



### **ACCESSORIES**

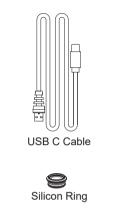



/Puris

AVIATOR 4

LISER MANUAL



Ceramic Filter Screens



Chamber Clean Brush



Air Path Clean Brush

### **SPECIFICATION**

Time: 180S

180°F

Auto Shut Off

Count-down

**Battery Capacity** 

Lock/Unlock

Session Time

Charging Time

Temperature Range

UNQUALIFIED PERSONS.

Charging Voltage/Curren

SPEC:

Size

## OLED Display:

Display indicates temperature information, battery status and duration timer.

#### OLED Screen Instruction:





**Battery Level** 



Temperature



53\*26\*103 mm

3000 mAh

consecutively

320°F - 460°F

adiustable

< 2 Hours

WARNING: Always store Aviator 4 in a dry place to

protect the battery against the effects of weather.

KEEP OUT OF REACH OF CHILDREN AND/OR

180 to 420 seconds

5V/2A

Error Occurred

Press power button 5 times

Charging

Protect

## Quick battery check:

180 to 420 seconds

**USER TIPS** 

Briefly press the power button when device is off, the icon on screen will show remain battery level.

• Turn the device on/off: Rapidly press power button 5

• Temperature setting: Simply press the control button

• Working time: press and hold the power button for

2 seconds until the Set turn to seconds. Then press

the control button(+)/(-) to adjust working time from

(+) / (-) to adjust the temperature. The device vibrates

times on/off with vibration feedback.

when temperature is reached.



















## **HOW TO USE**



1. Pull out the mouthpiece








2. Loosely fill the chamber.

If overpacked the device

won't have good airflow

4. Rapidly press power button 5 times, device will turn on with vibration




5. Set the preferred temperature 6. Slip the bottom airflow button to show up the clean path. it will get the Max, airflow

Set:200 y ■ 180 F

Time: 180s


Set: 180 F

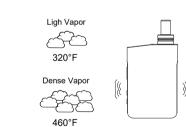

7. When temperature reached, device will vibrate, and ready to use


# **CLEAN THE CHAMBER**





3.Poke the chamber filter from the openning







4. Use air path clean brush to sweep the remaining residue from the air path

## **CHANGING THE MOUTHPIECE FILTER**



1. Pull out the filter assembly.



2. Remove the small ceramic filter.









3. Remove the mesh screen.



5. Insert a new ceramic filter. 6. Set the filter assembly part back onto mouthpiece.

## CHARGING

- Battery capacity: 3000mAh, regular micro USB
- Initially charge the Aviator 4 for 2 hours. The battery icon will show full.

charging, 5V/2.0A suggested.

- · When battery level is low, charge the device with included USB C cable to compatible wall charger. Low battery level will be indicated with incon and display 'Low Battery'.
- Do not use Aviator 4 while charging.







PREMIUM VAPORIZER \*>





