


LINX BLAZE

USER MANUAL

Linx Blaze comes with a 1 year limited warranty
www.LinxVapor.com

IN THE BOX

- 1 900 mAh Battery
- 1 All Quartz Atomizer
- 1 Ceramic Plate Atomizer
- 1 Glass Mouthpiece
- 1 Tool
- 1 USB Charging Cable
- 1 Carrying Case
- 1 Magnetic Mouthpiece Cap

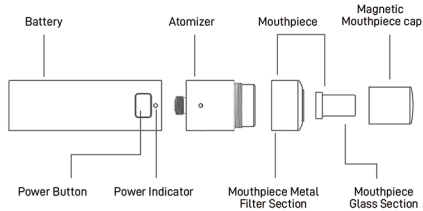

CHARGING

1. Plug the USB charger into the Blaze battery and connect it to a viable USB power outlet.
2. The power indicator on the battery will glow red while charging and turns off when fully charged.

LOADING

1. Unscrew the mouthpiece from the Blaze atomizer.
2. Load material no larger than a grain of rice. Using too much material drains battery power, requires a longer time to heat up and takes longer to cool down.

ON/OFF

Press the power button five times quickly to turn the device on and off. The power indicator will blink white five times.

VAPING

Turn on the device, pick the temperature, and inhale while holding the power button.

TEMP SETTINGS

1. Press the power button three times quickly to cycle between the four temperature settings.

- Blue: Low
- Green: Medium
- Yellow: Medium High
- Red: High

MOUTHPIECE SECTION CLEANING

1. Completely disassemble the Linx Blaze into parts.
2. Unscrew the glass mouthpiece section from the metal filter section. Soak the filter section in Isopropyl alcohol for two hours.
3. Use Isopropyl alcohol and a cotton swab to wipe down the glass mouthpiece section, air paths, and all other surfaces.

ZERO ATOMIZER CLEANING

ATOMIZERS WILL BECOME HOT DURING CLEANING.

1. Hold the Blaze upside down over a napkin, heat your atomizer on the red setting to burn off any reclaim. Use caution, the atomizer will be hot. Allow the atomizer time to cool down.
2. Partially submerge your atomizer (ceramic plate side down) in isopropyl alcohol for two hours. **Do not fully submerge the atomizer.**
3. Air dry the atomizer completely before reattaching to your battery. Do not try to poke, scratch, push, pull or move the ceramic plate in any way with any tool as this may permanently damage your atomizer. Repeat steps 1-2 if needed.

ACE ATOMIZER CLEANING

DO NOT SUBMERGE THE ACE ATOMIZER INTO ANY LIQUID.

1. Hold the Blaze upside down over a napkin, heat your atomizer on the red setting to burn off any reclaim. Use caution as the atomizer will be hot.
2. Heat the atomizer on the blue setting and lightly brush the surface of the atomizer with a cotton swab dipped in isopropyl alcohol. Ensure all alcohol has been burned off before the next use.

LOW POWER INDICATOR

When the power indicator blinks white eight times, it's time to recharge the device. Be sure to fully charge the battery before next use.

OVERHEAT PROTECTION

If the power button is held down for fifteen seconds, the battery will enter standby mode. This is signified by the power indicator blinking white ten times.

SAFETY WARNINGS

Do not use this device while charging. This will cause damage to the device.

To prevent the device from overheating, do not leave it charging overnight.

Do not charge unit on bare carpet or rugs.

Do not drop, deform, bend, crush, puncture, microwave or paint this device.

Take caution and dispose in the correct receptacle. Do not dispose in trash.

SAFETY DISCLAIMERS

Keep this device away from children.

Use caution when handling this device, the atomizer area will become hot during use and while cleaning.

Do not clean this device in any way other than instructed by Linx Vapor.

Do not attempt to repair or modify this device yourself.

Do not use in extreme environments such as high temperatures, high humidity, and avoid contact with liquids during use.

Do not use a damaged Linx Vapor charger or non-Linx Vapor charger. Incompatible chargers may carry a different voltage. Use only the charger provided. Failure to do so will void the limited warranty offered on Linx Vapor products.

LEGAL DISCLAIMER

Do not allow children, women who are pregnant or breast feeding or those with a life threatening illness to use this device. Linx Vapor and its affiliates are not responsible for any damage or personal injury caused by inappropriate, incorrect or irresponsible use of the device. This device is not a medical device and is not intended to diagnose, cure, treat or prevent any disease or other conditions. If you have any health problems, consult your doctor before using this device. This device is not intended to administer medicinal or illegal products of any kind, doing so voids the warranty. Any illegal use of this device could subject the user to severe fines, penalties, and/or imprisonment under the law of local jurisdiction.

Scan to watch!



<https://linxvapor.com>

