


This vaporizer is intended to be used with oil. The kit includes:

- 1 Hermes 3 Battery
- 1 Hermes 3 Refillable Atomizer
- 1 Mouthpiece
- 1 USB Charger

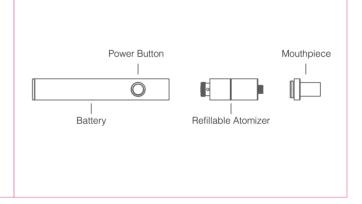

CHARGING

- 1. Screw the battery into USB charger and connect charger to a viable USB power outlet.
- 2. USB charging indicator turns red when charging and green when fully charged. It usually take 2 to 2.5 hours to reach full charge.

LOADING

- 1. Screw off the mouthpiece from Hermes 3 refillable atomizer.
- 2. Fill the cartridge with your preferred essential oils.
- 3. Reattach mouthpiece to the atomizer.



ON/OFF

Press power button 5 times quickly to turn the device on and off.

TEMP SETTING

Press power button 3 times quickly to toggle between:

- Blue: Low
- Green: Medium
- Red: High

VAPING

Inhale while holding the power button.

Sesh Mode

Press power button 2 times quickly for 10 seconds of continuous heating.

Low Power Indication

When the LED light around the power button blinks, it's time to recharge the device. Fully charge the battery before next use.

Overheat Protection

- 1. If the power button is held down for 15 seconds, the battery will enter standby mode. This is signified by the button blinking 10 times.
- 2. To exit standby mode, press the power button 5 times.

LEGAL DISCLAIMER

Do not allow children, women who are pregnant or breast feeding or those with a life threatening illness to use this device. Linx Vapor and its affiliates are not responsible for any damage or personal injury caused by inappropriate, incorrect or irresponsible use of the device. The Linx Hermes 3 is not a medical device and is not intended to diagnose, cure, treat or prevent any disease or other conditions. If you have any health problems, consult your doctor before using the Linx Hermes 3. The Linx Hermes 3 is not intended to administer medicinal or illegal products of any kind, doing so voids the warranty. Any illegal use of this device could subject the user to severe fines, penalties, and/or imprisonment under the law of local jurisdiction.