



LINX EDEN SWITCH

USER MANUAL

INCLUDES

1-Linx Eden Switch Vaporizer

1-Magnetic Mouthpiece Cap

3-Glass Mouthpieces

1-Mouthpiece Fitting

3-Silicone Mouthpiece Caps

4-Filter Screens


1-Dosing Capsule Seal

1-Quartz Dosing Capsule

1-Cleaning Brush

1-USB-C Charging Cable

DEVICE COMPONENTS

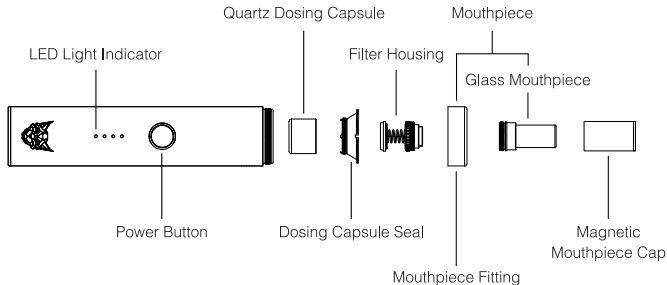

CHARGING

- 1 Plug one end of the USB-C charging cable to the bottom end of the device and plug the other end of the USB-C charging cable into a power source (USB-C port).
- 2 The power indicator on the device will blink white while charging and turn solid once fully charged.

**Note: It will take approximately 3-4 hours to reach a full charge.*

POWER ON/OFF

- 1 Press the power button 5 times (*quickly*) to turn the device ON or OFF.
- 2 The device will automatically start to heat up to its set temperature.
- 3 Once the device has reached its set temperature, it will vibrate once and remain ON for 4 minutes before turning off.

LOADING

- 1 Unscrew the mouthpiece from the device.
- 2 Load ground material into the Quartz Dosing Capsule.
- 3 Screw the mouthpiece back onto the device.

**Do not overpack the Quartz Dosing Capsule as it may cause restricted airflow.*

VAPING

- 1 Load ground material into the Quartz Dosing Capsule. (see 'LOADING')
- 2 Turn the device ON. (see 'POWER ON/OFF')
- 3 Inhale with a slow steady draw and enjoy!

POWER BOOST

The Power Boost function can be activated once the device has reached its set temperature, or anytime the power button is held down. Holding down the power button will increase the chamber's internal temperature by 20°F/7°C per second. Release the power button to turn OFF the Power Boost function once the desired temperature is reached.



CLEANING

- 1 Make sure the device is powered OFF and cool to the touch.
- 2 Unscrew the Filter Spring from the mouthpiece by gently separating it from the mouthpiece base.
- 3 With the Filter Spring disassembled, gently separate the Filter from the Spring into two pieces by unscrewing the Filter from the Spring connection.
- 4 Soak the Filter and Filter Spring in Isopropyl Alcohol. Gently clean the pieces with a Cotton Swab, set aside and allow to air dry.

- 5 Clean all surfaces of the mouthpiece with Isopropyl Alcohol and Cotton Swabs. Unscrew the Dosing Capsule Seal and remove the Quartz Dosing Capsule.
- 6 Clean out the interior of the chamber with Isopropyl Alcohol and Cotton Swabs.
- 7 Using the included Cleaning Brush, sweep out any leftover material and clear out the Quartz Dosing Capsule with a clean Cotton Swab.

TEMPERATURE SETTINGS

Press the power button 3 times (*quickly*) to cycle between temperatures.

● Blue (360°F/182°C)

● Yellow (400°F/204°C)

● Green (380°F/193°C)

● Red (428°F/220°C)

BATTERY LIFE INDICATOR

The LED lights will display the battery life once the device reaches its set temperature.

4 LED = 100% 3 LED = 75% 2 LED = 50% 1 LED = 25%

LOW POWER

The device will blink white 10 times to indicate that the battery power is low. Fully charge the battery before your next use.

SAFETY WARNING

DO NOT use this device while charging. This will cause damage to the device.

DO NOT charge device on carpet or rugs.

DO NOT drop, deform, bend, crush, puncture, microwave or paint this device.

DO NOT leave device charging overnight as it may cause overheating issues.

DO NOT dispose in trash. Take caution while disposing the device.

SAFETY DISCLAIMER

DO NOT clean this device in any way other than what has been instructed in this user manual.

DO NOT attempt to repair or modify this device.

DO NOT use in extreme environments such as high temperature or high humidity settings. Avoid contact with liquids during use.

DO NOT use a damaged Linx Vapor charging cable or non-Linx Vapor charging accessories. Failure to do so will void the limited 1-year warranty offered on Linx Vapor products.


Keep this device out of reach from children.

LEGAL DISCLAIMER

Do not allow children, women who are pregnant or breastfeeding, or those with a life-threatening illness to use this device. Linx Vapor and its affiliates are not responsible for any damage or personal injury caused by inappropriate, incorrect or irresponsible use of the device.

This device is not a medical device and is not intended to diagnose, cure, treat or prevent any disease or other conditions. If you have any health problems, consult your doctor before using this device.

This device is not intended to administer medicinal or illegal products of any kind, doing so voids the warranty. Any illegal use of this device could subject the user to severe fines, penalties, and/or imprisonment under the law of local jurisdiction.

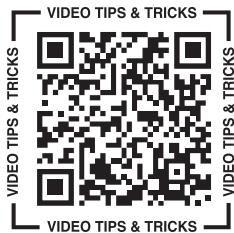



21+
ONLY



CONNECT WITH US

@LINXVAPOR

LINXVAPOR.COM

Linx Eden Switch comes with a 1 year limited warranty

linxvapor.com