


# **Standing Desk Original**

Installation guide

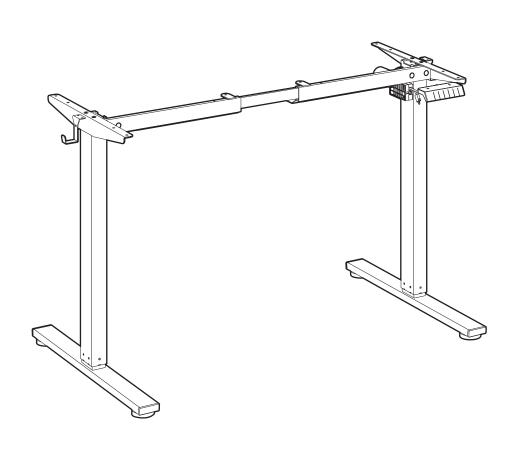

< The pictures below are for reference only, please refer to the actual product. >
Please read this product manual carefully before use, and keep it properly.

The product has been designed to meet Commission Regulation with regard to ecodesign requirements for electric power consumption of standby mode of electrical and electronic household equipment.

The technical information of standby mode:

Mode	Power consumption (Watts)	The period(Minutes)
Standby	≤0.5W	1min

The website URL of the English - version electronic instruction manual: https://www.standingdeskcompany.co.uk/pages/desk-instructions

Power Supply		
Manufacturer: Shenzhen Green Power Electronic Technology Co.,Ltd.		
Model: GRP-30W290010-CK	Average Active Efficiency: ≥86.85%	
Rated Input: 100-240VAC,50/60Hz ,0.8A	Efficiency at Low Load (10%): 83.36%	
Rated Output: 29.0VDC,1.0A ,29.0W	No-load Power Consumption: ≤0.10 W	


# **Technical Data**

Column stage	2	
Max. Load Capacity	80KG(With hook, hook load capacity 5KG)	
Stretching Range	909mm-1458mm	
Max. Speed	15mm/s	
Lowest Height	715mm	
Highest Height	1160mm	
	Length: 1000mm-1600mm	
Applicable Tabletop Size	Width: 500mm-800mm	
	Thickness: >16mm	


# **Product List**


#### **Accessory List**


Note: The line drawings below are for reference only and may differ slightly from the physical product in some cases. Please refer to the actual product for accuracy. If any tools are missing or there are problems with installation, please contact customer service.



## Preparation before installation







Bring your own pistol drill.




Need two or more people to cooperate together.

### Part List


No	٠.	Part	
1	)	Bracket x2	
2	)	Crossbeam x 1	• • • • • • • • • • • • • • • • • • • •
3	)	Right column x 1	
4	)	Left column x 1	
(5)	)	Transmission Rod x1	
6	)	Coupling x1	


No.	Part	
7	Motor (with handset) x1	ď
8	Hook x2	
9	Pedestal x2	Ð
10	Cable Clip x4	
11)	AC power cable x1	a a


#### Installation Instruction

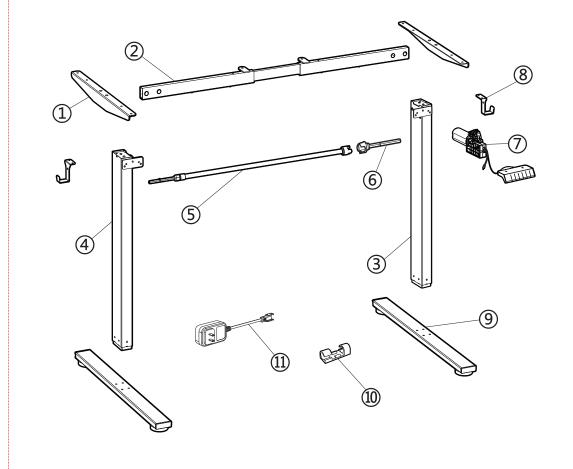


# Installation Steps

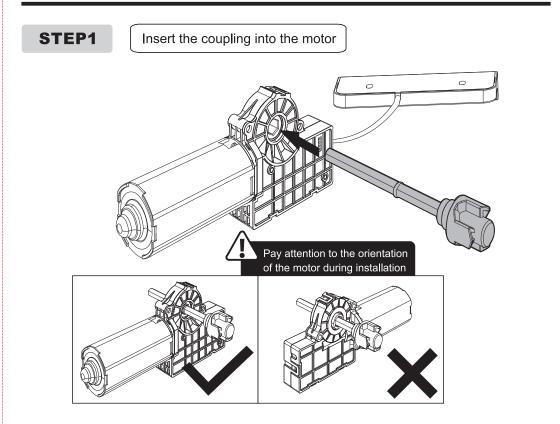


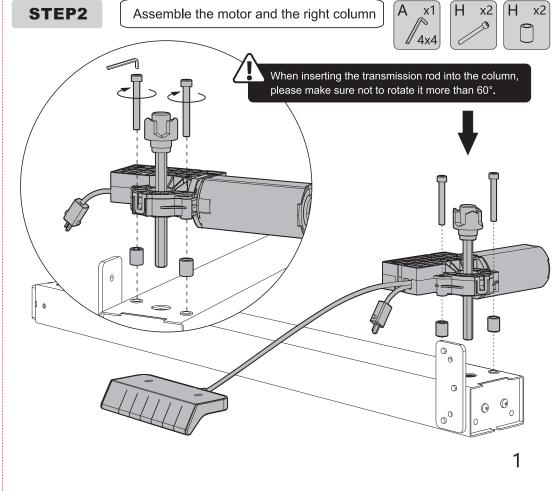

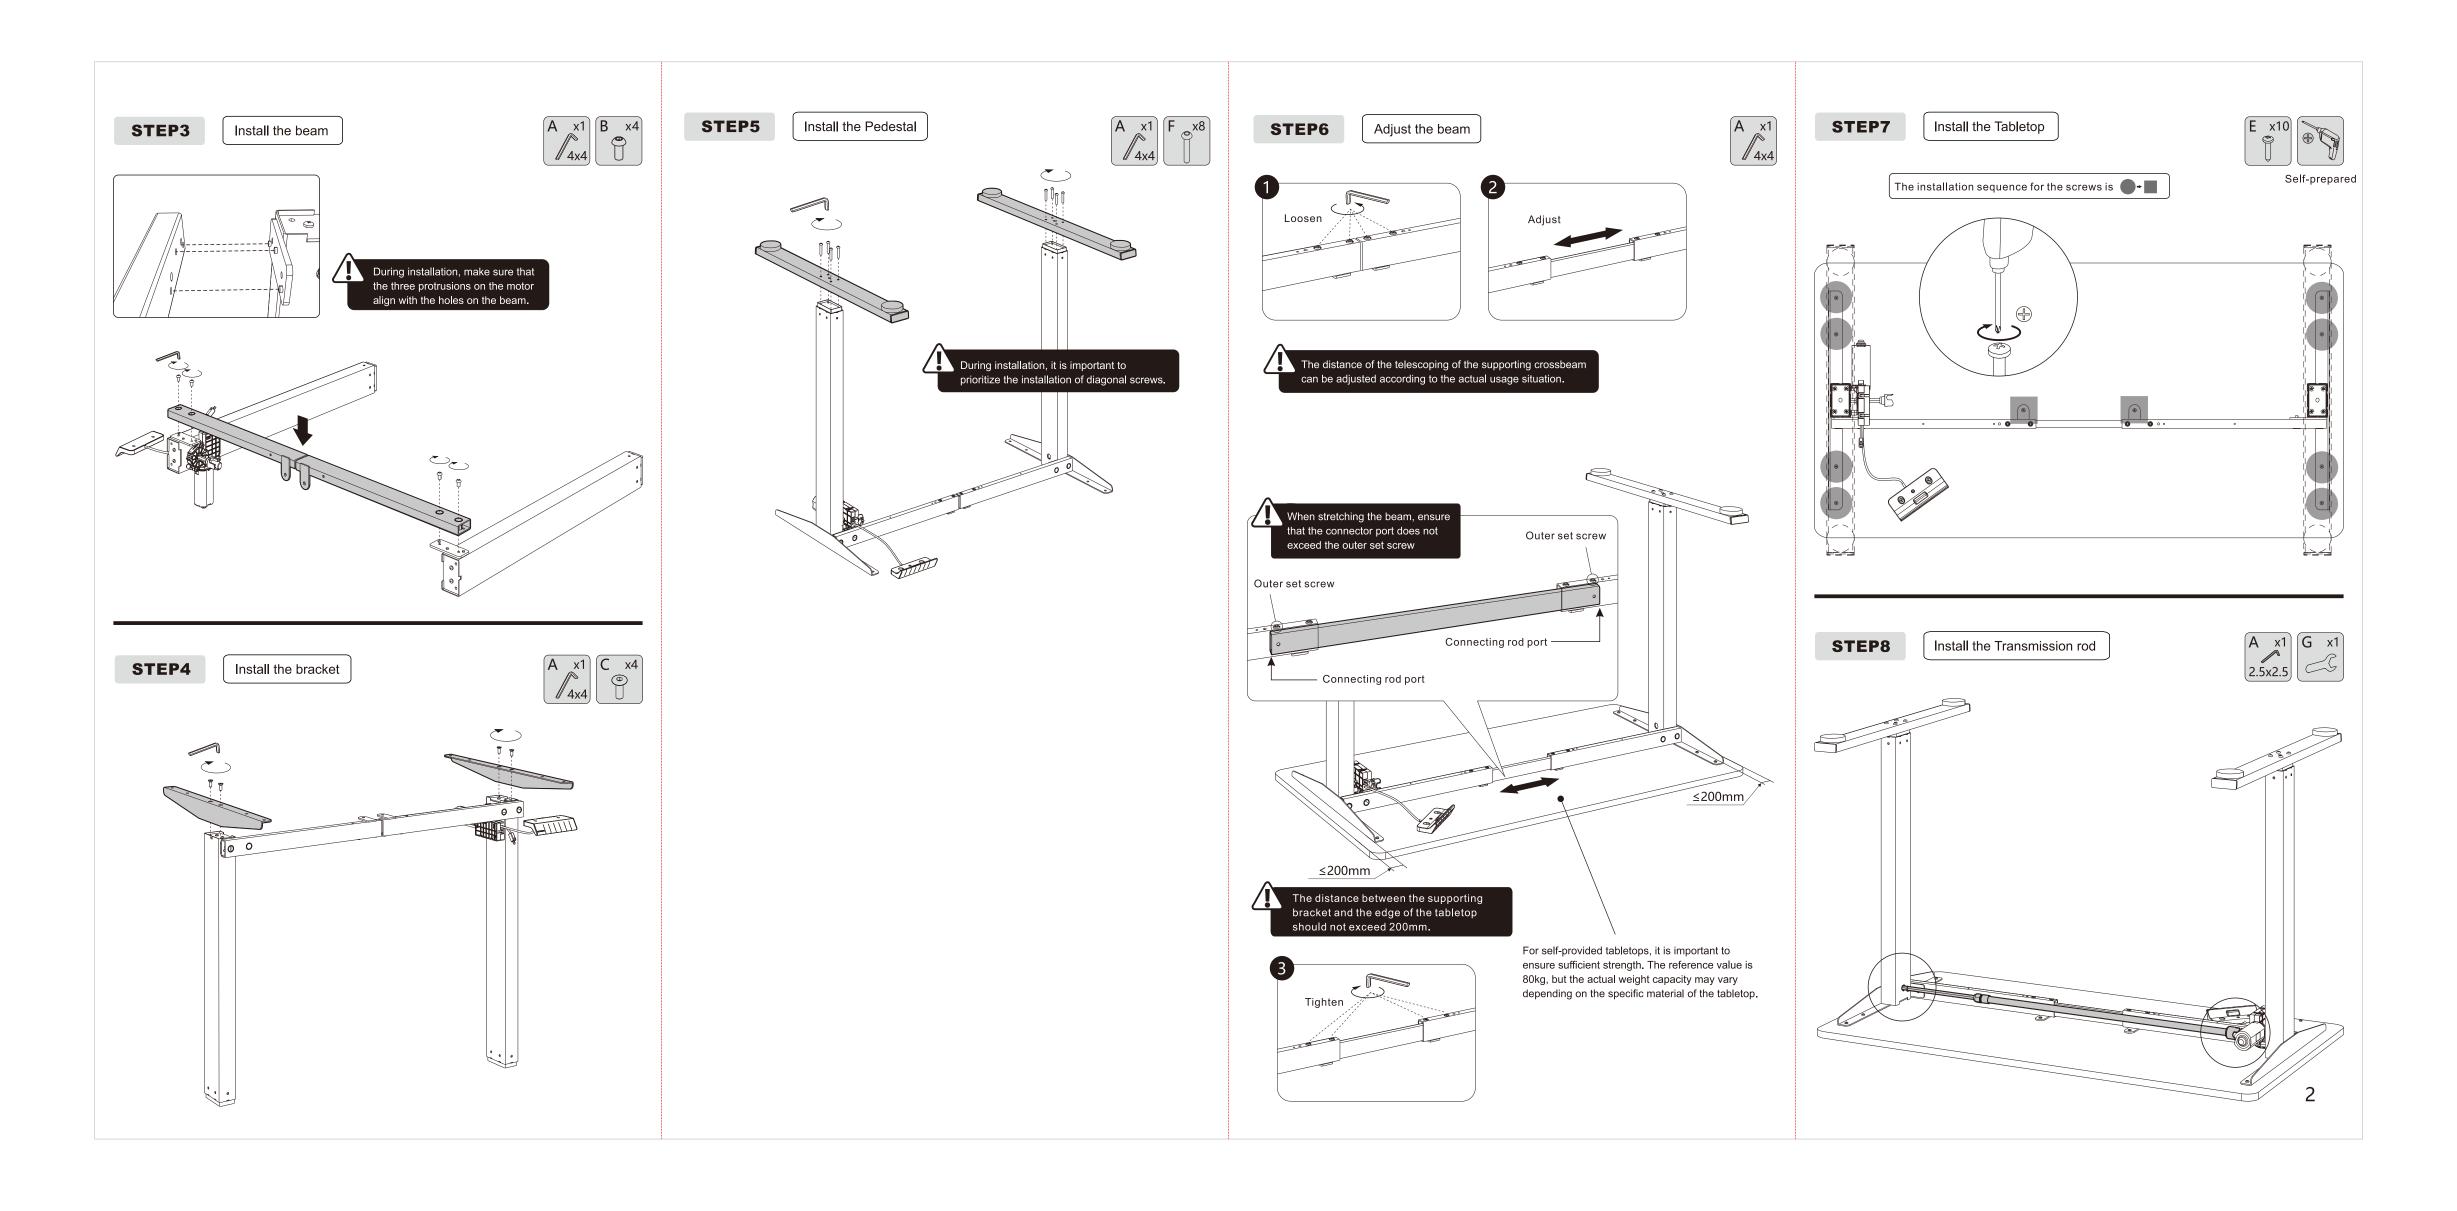

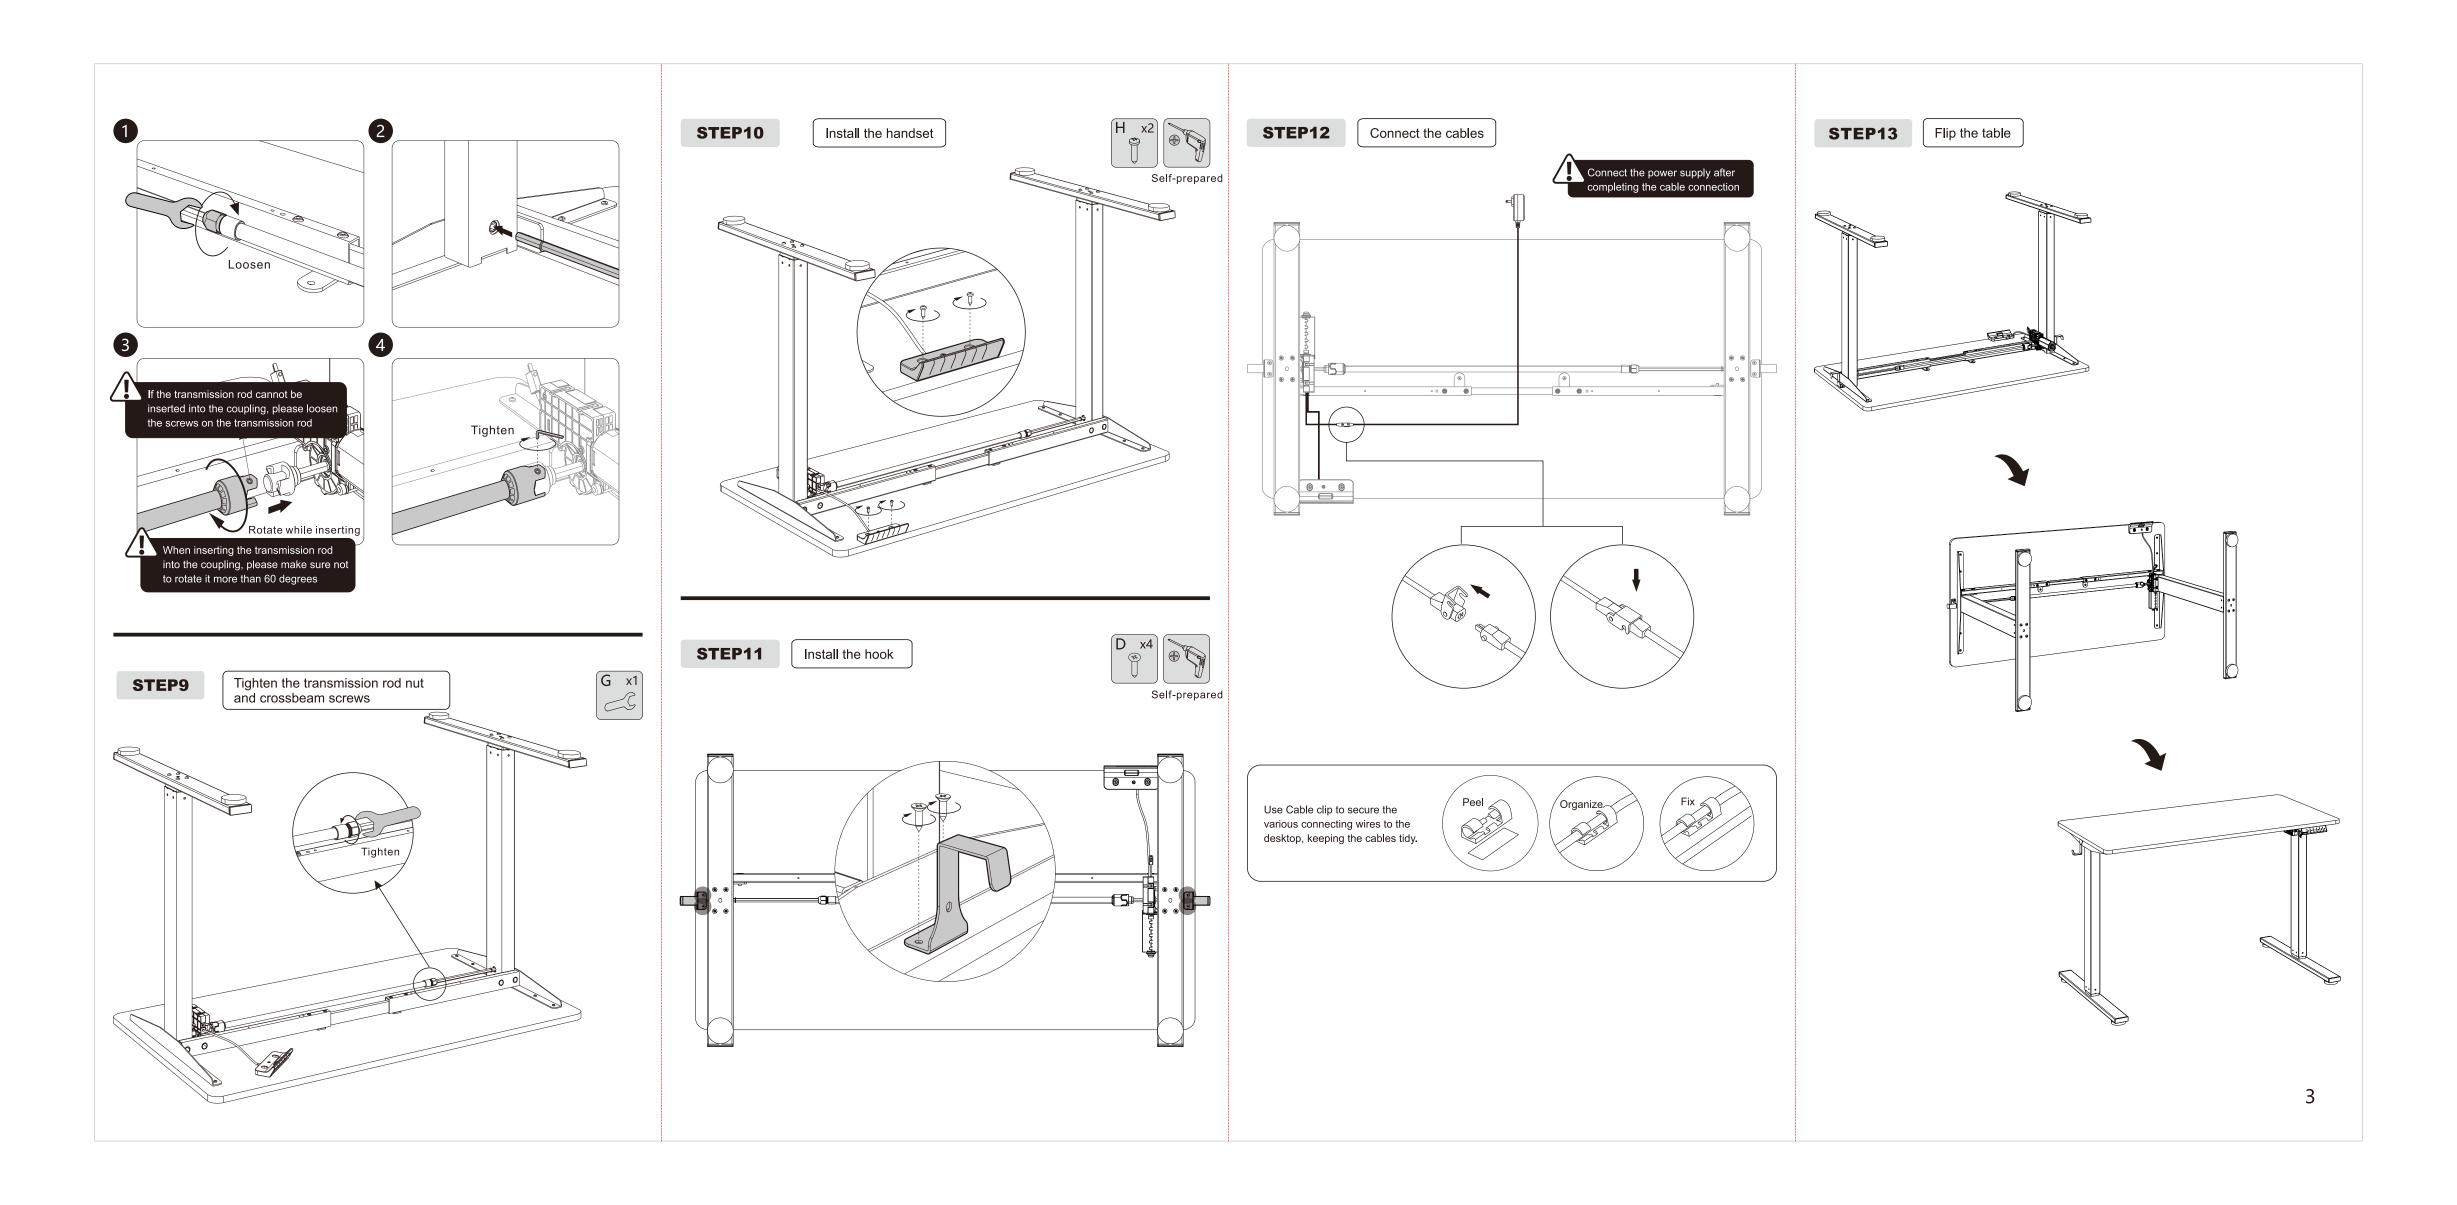

# Instructions for using and setting up the handset

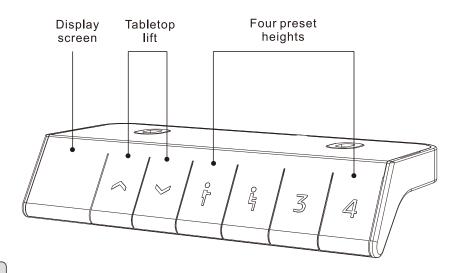


## Note

Ensure that there are no obstacles blocking the movement of the table during the lifting process and confirm that all cables are long enough for the table to move up and down.

# Suggestion


Set the most comfortable height when sitting as " t and the most comfortable height when standing as " i ". Additional preset heights can be freely set to other heights.

#### Button Control for Height Adjustment




a. By pressing the " ↑ " or " ♥ " button, you can adjust the height of the lifting table up or down, and the current height will be displayed on the screen.

#### Height Memory Function

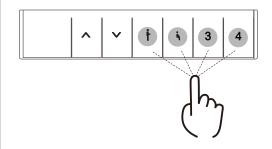


- a. Press and hold the " f " button for 3 seconds, and the screen will display "5-l", indicating that the current height has been successfully saved in memory. Then, you can operate the lifting table to any height, and by pressing the " f " button, it will automatically return to the saved height.
- b.The " , "3", and "4" buttons also have the same height memory function as the " " button. By repeating the above steps, you can save the corresponding height in memory. Then, by pressing the respective button, the lifting table will automatically move to the saved height.

#### Adjusting Collision Sensitivity (Optional)



- a.There are four gears in total. When the lifting system encouintersresistance, this function is triggered for fallback protecttion.
- b.Press and hold the " ↑ and " ♥ buttons at the same time for 3 seconds to switch the sensitivity. One operation switches one level, with 4 levels: (ℜ-ಔ, ℜ-१, ℜ-₹, ℜ-℥)
- c."ቶ-ቢ"indicating that the collision prevention function is turned off; " ቶ-{"indicating low sensitivity; "ቶ-}" indicating medium sensitivity; "ቶ-}" indicating high sensitivity.
- d.When the table encounters an obstacle during the process of ascending or descending, it will immediately rebound, providing protection.


#### Reset Function





- a.The specific steps to reset
- Method 1: Long press the down key. The table will move to the lowest or highest position and then rebound until it stops. At this time, the display screen will show the height in numbers. Release the down key to complete the reset.
- Method 2:Press and hold the "3" and "4" keys for 3 seconds to view the software version of the device. Once the viewing is complete, continue to hold the "3" and "4" keys until the LED display shows "F\$\frac{1}{2}\frac{1}{2}\text{"}, then release the keys. This will enter the reset mode. To reset, continue to hold the down key until the display shows the current height, then release the down key. The reset is now complete.
- b. When the lifting system experiences a malfunction, release the key and press and hold the down key until the lifting system reaches the bottom and stops rebounding. Reset is successful.

#### Troubleshooting



- a. Reset function definition: The LED display shows "fit". The user holds down the down arrow key until the desk lowers to the lowest position and then rebounds up to a stop. The display will show the lowest height. After releasing the "v" down key, the reset is complete and the desk can be used normally again.
- b.If you see "E01", allow the desk to rest for at least 18 minutes before using it again.
- c.If you encounter any other error codes and the "\" button does not respond, please check if the connection cable is undamaged and properly connected. Disconnect the power for at least 10 seconds, then reconnect it. The LED screen will display "\( \sigma \) Press and hold the "\" button to reset.
- d.If you have followed the above steps and the desk still does not function properly, please contact customer service for further assistance.

# **Troubleshooting**

This list is used for checking and solving faults and errors. Please contact the manufacturer if problem you en counter is not on the list below.

Problem	Solution
The electronic functions are unable to operate properly	Check the cable connection
Speed of lifting is slow	
The worksurface slides downward	Check if the load weighs more than 80 kg
The device often enters the reset state	
Only descending, not ascending, or only ascending, not descending	Perform a reset operation
Insufficient height for ascending and descending	
The bottom cannot rise	
After exceeding the working duty cycle requirements (Duty cycle: Max 2min on/18min OFF)	Power off for 18 minutes and then reconnect the power
When pressing the down key, the device goes up instead	Check if there are any obstacles or hanging cables under the table



- 1.Power supply: AC100V-240V, frequency 50/60Hz.
- 2. Operating environment: Indoor, 0-40°
- 3.Before cleaning, make sure to unplug the power cord. Use a slightly damp cloth to wipe away surface dust, taking care not to let water drip into the internal components or damage the connection wires. Regularly check if screws are loose and tighten them if necessary.
- 4. The electrical box contains electronic components, metals, plastics, wires, etc. Dispose of it according to the environmental regulations of your country, not as regular household waste.
- 5.Before using the product, carefully inspect and ensure that it has been correctly installed. Use only the accessories provided by the manufacturer for installation. Leave adequate safety clearance when placing the product to avoid pinch hazards.
- 6.Before first use, familiarize yourself with all the functions and program settings of the product.
- 7. Children are not allowed to play on this product. Certain unpredictable behaviors may result from children playing on the product, and the manufacturer will not be responsible for any resulting accidents.
- 8. Slight noises from the multi-belt or brake system caused by the structure will not affect the use of the equipment.
- 9. The use of corrosive or abrasive materials for cleaning equipment is prohibited. Make sure that the cleaning agents used will not contaminate the environment.
- 10. Operate the equipment only after understanding the relevant hazards. Children under the age of 14 or individuals with physical or sensory impairments or mental disabilities should use the equipment under proper supervision and guidance. Children should not have unattended access to the product.
- 11. Children should not perform cleaning and user maintenance without supervision.
- 12. In case of power cord damage, it must be replaced by the manufacturer or relevant professionals to avoid injury.
- 13. Ensure that your operating environment is free of any potential hazards, such as not littering tools. Always handle packaging materials with caution to avoid various potential dangers, such as the choking hazard posed by children playing with plastic bags.
- 14. When moving the product, ensure that there are no items placed on the table, the drawers and doors are closed securely, screws are tightened, and the power plug is unplugged. Use at least 2 people for moving. If necessary, keep the original packaging for future transportation.
- 15. When storing for a long time, unplug the power cord and clean out any loose objects. Store it in a cool and dry place.
- 16. This product contains small parts that can pose a choking hazard if swallowed accidentally. Keep these small accessories away from children.





This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

\_