


# Switch R by dot.

User Manual

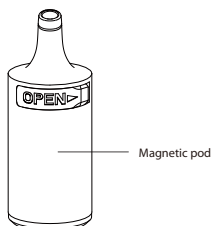


**20.3×106**  
SIZE

**3ML**  
POD

**1000Mah**  
BATTERY


**Type-C**  
CHARGING

**6 Available**  
COLORS

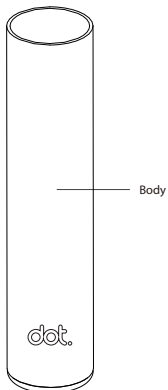

## Filling the Switch Refillable pod

- 1 Remove the magnetic pod by gently pulling it out of the device
- 2 Locate and open the silicone fill cover and fill the pod, do not overfill



## Operation instructions

### Activation:

When activated the power light will gradually light up, when deactivated the power light will gradually fade off.

|                      |                         |                    |
|----------------------|-------------------------|--------------------|
| ● >3.87V green light | ● 3.65V-3.8V blue light | ● <3.65V red light |
|----------------------|-------------------------|--------------------|

### Charging light:

|                     |                         |                    |
|---------------------|-------------------------|--------------------|
| ● >3.6V green light | ● 3.45V-3.6V blue light | ● <3.45V red light |
|---------------------|-------------------------|--------------------|

### Power on:

LED white light pulses 1 time when powering on, the device will not work in the hibernation state.

### Timeout:

The device will timeout when output lasts for longer than 8 seconds, the blue light will flash 5 times.

### Low voltage:

When the battery voltage is lower than  $3.3V \pm 0.1V$ , the red light will turn on and gradually fade off.

### Short circuit:

When detecting a short circuit in the atomizer, the red light will flash 2 times.

### Charging:

When charging, the power light pulses, once fully charged the green light flashes 6 times.