


## FULL FACE SHIELD ASSEMBLY INSTRUCTIONS

# 1

Insert nosepiece tab into visor slot, so nosepiece slants away from front of visor. (Nosepiece may be removed to wear over eyeglasses.)

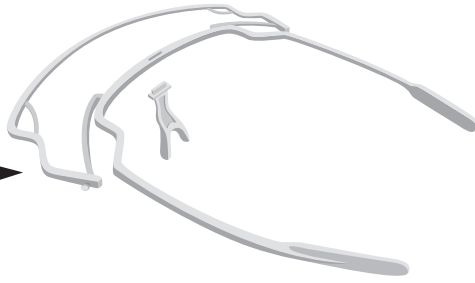

# 2

Starting on one side of the visor, first mount the faceshield onto the visor pin, then insert the visor's support knuckle through the faceshield slot.



Selection of mounting holes provides 3 options for adjusting the faceshield angle. Top hole will position the faceshield farther from chin, and bottom hole will position it closer to chin.

# 3


Repeat step 2 on the opposite side of the visor, pulling the faceshield tight and securing it to the opposite support knuckle and pin.



## FULL FACE SHIELD ASSEMBLY INSTRUCTIONS

# 1

Insert nosepiece tab into visor slot, so nosepiece slants away from front of visor. (Nosepiece may be removed to wear over eyeglasses.)

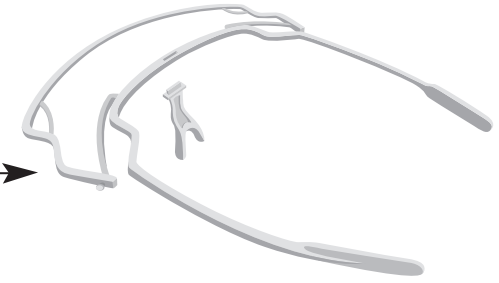

# 2

Starting on one side of the visor, first mount the faceshield onto the visor pin, then insert the visor's support knuckle through the faceshield slot.



Selection of mounting holes provides 3 options for adjusting the faceshield angle. Top hole will position the faceshield farther from chin, and bottom hole will position it closer to chin.

# 3

Repeat step 2 on the opposite side of the visor, pulling the faceshield tight and securing it to the opposite support knuckle and pin.

